

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • www.sdcsecurity.com • E-mail: service@sdcsecurity.com

## INSTALLATION INSTRUCTIONS/TEMPLATE 180 SERIES ELECTRIC LOCKS

1. Mark and drill as follows: Holes 1, 2 and 3 for #14 sheet metal screws or 1/4 - 20 machine screws. Hole 4 - 3/8" diameter for wire.

Block strike: Holes 5 and 6 or 12 and 13 for 1/4 - 20 machine screw or #14 sheet metal screw.

- 2. Tap holes as required.
- 3. Remove housing cover and mount lock and strike.
- 4. Attach power leads. Check alignment of bolt and strike. There should be no binding. Leading part of strike should be 1/8" away from the lock 1/8" is maximum distance. If this is correct, tighten mounting screws.
- 5. Check lock operation for any last adjustments.
- 6. Install housing.

## **SPECIFICATIONS**

DIMENSIONS: 2" x 2" x 6"

 
FINISH: US28 standard (dark duranodic optional)


BOLT: 180 series 5/8" diameter 1/2" throw

SOLENOID: 180 series, power lock, continuous duty

## 180 Series Dual Voltage (Fail Safe):

10.8 Watts – 12VDC @ .9 Amp 10.8 Watts – 24VDC @ .45 Amp



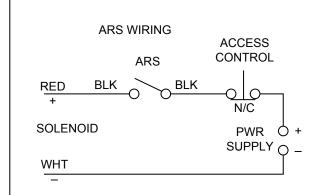

BOLT POSITION SENSOR
SPDT .25 AMP
ORG – N.C.
GRY – COM
YEL – N.O.

DOOR POSITION SENSOR
SPDT .25 AMP
SPDT .25 AMP
RED – N.C.
WHT – COM
BLU – N.O.

