


HOW TO REPLACE THE INTERNAL LAMP

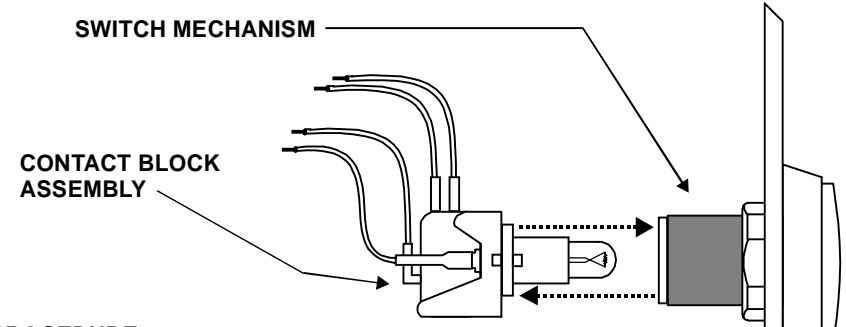


PROCEDURE:


1. CAREFULLY REMOVE THE SNAP-IN CONTACT BLOCK ASSEMBLY FROM THE REAR OF THE SWITCH MECHANISM.

2. REMOVE THE PLUG-IN LAMP FROM THE SOCKET ON THE FRONT OF THE CONTACT BLOCK ASSEMBLY.

3. INSTALL A NEW LAMP (DYNALOCK PART #600157 OR GENERIC PART #658 / TYPE T3-1/4 WEDGE BASE LAMP), AND RE-ASSEMBLE THE CONTACT BLOCK ASSEMBLY ONTO THE SWITCH MECHANISM.

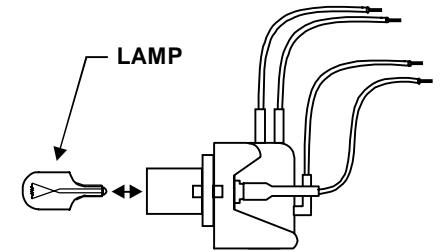

SCHEMATIC

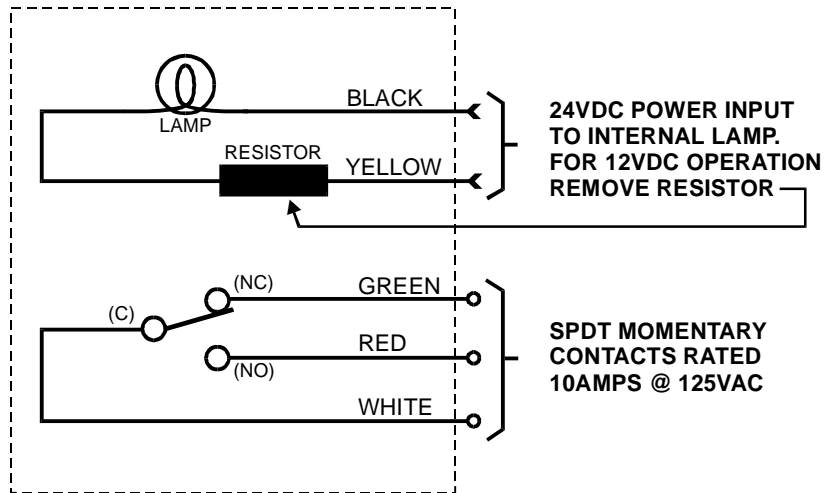

#6270 ILLUMINATED SQUARE PUSHBUTTON FEATURES:

2" SQUARE ILLUMINATED RED PUSHBUTTON WITH "EXIT" SIGNAGE IN 3/8" BLACK LETTERS.

SPDT MOMENTARY CONTACTS RATED 10 AMPS @ 125VAC, AND REPLACEABLE DUAL-VOLTAGE 12VDC / 24VDC INTERNAL LAMP.

SINGLE-GANG BRUSHED STAINLESS STEEL FACEPLATE.

DynaLock Corp.

705 Emmett Street
Forestville, CT 06010

TITLE

MODEL #6270 ILLUMINATED SQUARE
PUSH BUTTON

DRN. BY JAS

DATE 02/06/98

SCALE _____

DWG. NO.

600159