

Access Easy Extension Enclosure



- Provides room to house extension boards with more readers and Input / Output points for AEC
- Every Extension Enclosure communicates via RS-485 with the AEC
- Every Extension Enclosure requires a AEC Serial Extension board to communicates

Access Easy Extension Enclosure (AEC EXT) provides the space for extending the basic capabilities of the AEC as and when required. In each extension enclosure, there are three available slots for either the AEC 4W EXT boards or the AEC 818O EXT boards. For every AEC system configuration, you can extend up to a maximum of 16 Wiegand readers and 32 Input / Output.

The extension enclosure communicates with the AEC via the AEC SER EXT (Serial Extension Board) which is required in every extension enclosure. All the rest of the extension boards are interconnected via the IDE bus port.

There are couple of ways to configure the AEC with the Access Easy Extension depending on your security system requirement. Refer to the Product Ordering Guide which will help you determine how the system should be configured.

System Overview RS 485 AEC AEC Extension **AEC Extension** 4 Reader 8 1/0 CPU Board **Board** 8 1/0 4 Reader 4-Reader Board Board Board 8 1/0 8 1/0 4-Reader Board Board Board

16 Readers, 32 I/O System (1x AEC and 2x AEC Extension Enclosure)

Parts Included

Quant. Component 1 AC to DC Power Supply or AC/AC Transformer 1 DC/DC Converter Board or AC to DC Power Supply Board Panel Enclosure 1

Technical Specifications

Dimensions

Enclosure (H xW xD) 530 x 460 x 100 mm (17.9 x 20.7x3.9 inch)

Environmental

Relative Humidity 10% to 95% at 32 °C (+90 °F) Temperature (Operating) 0°C to +50°C (32 °F to 120 °F) Temperature (Storage) 0 °C to +55 °C (32 °F to 130 °F)

Extensions

3 Extension boards Slots

Power Requirements

Primary Voltage Input (AC) 110 VAC +10/-15% (50/60 Hz) 230 VAC +10/-15% (50/60 Hz) Secondary Voltage Input +5 VDC and 12 VDC for CPU board +15 VDC ±1%, 7 Ah for all other boards **Backup Battery**

(Optional Backup Battery: Not included in standard package

12 V DC, 7 Ah rechargeable battery

Ordering Information

AEC Extension Enclosure CE with Power Supply - Charger board, AC/DC Transformer (CE), (APR, EMEA)	AEC-EXT-USP1
AEC Extension Enclosure UL with Power Supply - Charger board, AC/DC Transformerr (UL), (AMERICAS)	AEC-EXT-UPS2
Extension Board 4 Wiegand for AEC V 1.0 Access Easy Extension - 4 Wiegand Interfaces and Door controls (8 IN/OUT), Fitting parts.	AEC-4W-EXT

Extension 8 Input and 8 Output for AEC V 1.0

Access Easy Extension - 8 Input 8 Output Board, Fitting parts.

AEC-8180-EXT

Americas:
Bosch Security Systems, Inc.
130 Perinton Parkway
Fairport, New York, 14450, USA
Phone: +1 800 289 0096
Fax: +1 585 223 9180 security.sales@us.bosch.com www.boschsecurity.us

Europe, Middle East, Africa:

Bosch Security Systems B.V. P.O. Box 80002 F.O. BOX 80002 5600 JB Eindhoven, The Netherlands Phone: + 31 40 2577 284 Fax: +31 40 2577 330 emea.securitysystems@bosch.com www.boschsecurity.com

Represented by

Asia-Pacific: Re Robert Bosch (SEA) Pte Ltd, Security Systems 11 Bishan Street 21 Singapore 573943 Phone: +65 6258 5511 Fax: +65 6571 2698 apr.securitysystems@bosch.com www.boschsecurity.com

Ordering Information

AEC Extension RS 485 to extension board Access Easy Extension conversion serial RS-485 to Reader or IO board. (1 for each extension enclosure) (AMERICAS, APR, EMEA)

AEC-SER-EXT