



Rack Mount Series CCTV Power Supplies

Installation Guide

Models Include:

- **R2416220**
 - 24VAC @ 8 amp or 28VAC @ 7 amp.
 - Sixteen (16) Fuse Protected Outputs.
- **R2416300220**
 - 24VAC @ 12.5 amp or 28VAC @ 10 amp.
 - Sixteen (16) Fuse Protected Outputs.
- **R2416600220**
 - 24VAC @ 25 amp or 28VAC @ 20 amp.
 - Sixteen (16) Fuse Protected Outputs.
- **R2416CB220**
 - 24VAC @ 8 amp or 28VAC @ 7 amp.
 - Sixteen (16) PTC Protected Outputs.
- **R2416300CB220**
 - 24VAC @ 12.5 amp or 28VAC @ 10 amp.
 - Sixteen (16) PTC Protected Outputs.
- **R2416600CB220**
 - 24VAC @ 25 amp or 28VAC @ 20 amp.
 - Sixteen (16) PTC Protected Outputs.



Overview:

R2416220 Series Rack Mount CCTV Power Supplies provide 24VAC/28VAC distributed via sixteen (16) fuse or PTC protected outputs for powering CCTV Cameras, heaters and other video accessories.

Sixteen (16) Output Rack Mount Configuration Reference Chart:

| Altronix Model Number | Output Voltage (VAC) | Total Output Current (Power) | Number of Outputs | PTC Protected Outputs | Fuse Protected Outputs | Output Current (max per output) | 220VAC 50/60Hz Input Current |
|-----------------------|----------------------|------------------------------|-------------------|-----------------------|------------------------|---------------------------------|------------------------------|
| R2416220 | 24 | 8 amp | 16 | - | x | 3.5 amp | 1 amp |
| | 28 | 7 amp | | | | | |
| R2416CB220 | 24 | 8 amp | 16 | x | - | 2.5 amp | 1 amp |
| | 28 | 7 amp | | | | | |
| R2416300220 | 24 | 12.5 amp | 16 | - | x | 3.5 amp | 1.5 amp |
| | 28 | 10 amp | | | | | |
| R2416300CB220 | 24 | 12.5 amp | 16 | x | - | 2.5 amp | 1.5 amp |
| | 28 | 10 amp | | | | | |
| R2416600220* | 24 | 25 amp | 16 | - | x | 3.5 amp | 3 amp |
| | 28 | 20 amp | | | | | |
| R2416600CB220* | 24 | 25 amp | 16 | x | - | 2.5 amp | 3 amp |
| | 28 | 20 amp | | | | | |

*24VAC models: Outputs 1-8 provide 12.5 amp max. Outputs 9-16 provide 12.5 amp max.

*28VAC models: Outputs 1-8 provide 10 amp max. Outputs 9-16 provide 10 amp max.

Specifications:

Input:

- 220VAC, 50/60Hz.

Output:

- Sixteen (16) fuse or PTC protected outputs.
- 24VAC or 28VAC supply current.
- Outputs are rated @ 3.5 amp (fuse) or 2.5 amp (PTC).
- Surge suppression.

Features:

- Sixteen (16) individual power LED indicators.
- Illuminated master power disconnect circuit breaker with manual reset.

Features (cont'd):

- Removable terminal blocks with locking screw flange.
- Spare fuses provided.


Mechanical:

- 2U rack mount chassis for use in standard EIA 19" rack.
- Enclosure Dimensions (H x W x D approx.):
3.26" x 19.125" x 8.5" (83mm x 486mm x 216mm).

Installation Instructions:

1. The unit is factory set for 24VAC operation.
For 28VAC operation, adjust unit prior to mounting and applying power as follows:
 - a. Open bottom of the unit by removing six (6) screws (*Rack Mechanical Drawing & Dimensions, pg. 4*).
 - b. Change the wire position so that the black wire [28V] is connected to the terminal marked [P] and the yellow wire [24V] is connected to the terminal marked [S] (*Fig. 1e, pg. 3*).
 - c. After securing all wires for proper voltage place bottom panel back on the unit and fasten with the six (6) screws.
2. Mount unit in the desired rack location (Space unit at least 3" from any video monitors). Do not obstruct side air vents.
3. Set power switch on the back of unit to the OFF position (*Fig. 1c, pg. 3*).
4. Plug power cord into a grounded 220VAC 50/60 Hz receptacle (*Fig. 1b, pg. 3*), ground should be connected as indicated in (*Fig. 1d, pg. 3*).
5. Set power switch on the back of the unit to the ON position and measure output voltage before connecting devices (*Fig. 1c, pg. 3*). This helps avoiding potential damage.
6. Set power switch on the back of the unit to the OFF position (*Fig. 1c, pg. 3*).
7. Connect devices to the removable terminal blocks marked [1P & 1N through 8P & 8N] (*Fig. 1a, pg. 3*).
When wiring is completed on terminal blocks they can be locked down by tightening screw flanges.

8. Upon completion of the wiring, set power switch on the back of the unit to the ON position (*Fig. 1c, pg. 3*).
 9. Green power LEDs on faceplate will illuminate when AC power is present. When an output is in a trouble condition (blown fuse or tripped PTC) the corresponding LED will not be illuminated (*Fig. 1, pg. 3*).
 - a. Blown fuse (R2416220, R2416300220 & R2416600220) - Set power switch on the back of the unit to the OFF position (*Fig. 1c, pg. 3*). Remove front faceplate to access fuses. Replace with fuses rated @ 3.5A/250VA (Altronix model # Fuse1).
 - b. Tripped PTC (R2416CB220, R2416300220 & R2416600CB220) - To reset PTC, set power switch on the back of the unit to the OFF position. After approximately 30 secs. set power switch to the ON position (*Fig. 1c, pg. 3*).
 10. Power switch with built-in circuit breaker:
 - OFF position - Switch not illuminated. Outputs not powered.
 - RESET (ON) position - Switch illuminated. Outputs powered.
 - Circuit breaker tripped - Switch not illuminated. Power LEDs on faceplate are not illuminated. Outputs not powered.
 To reset circuit breaker set power switch to the ON (RESET) position (*Fig. 1c, pg. 3*).
- Note:** Do not exceed unit's electrical load ratings as indicated in *Sixteen (16) Output Rack Mount Configuration Reference Chart, pg. 2*.
 Do not place mechanical load on the unit.
 Unit is designed optimally for normal data room office installations. Data racks should always be properly ventilated.

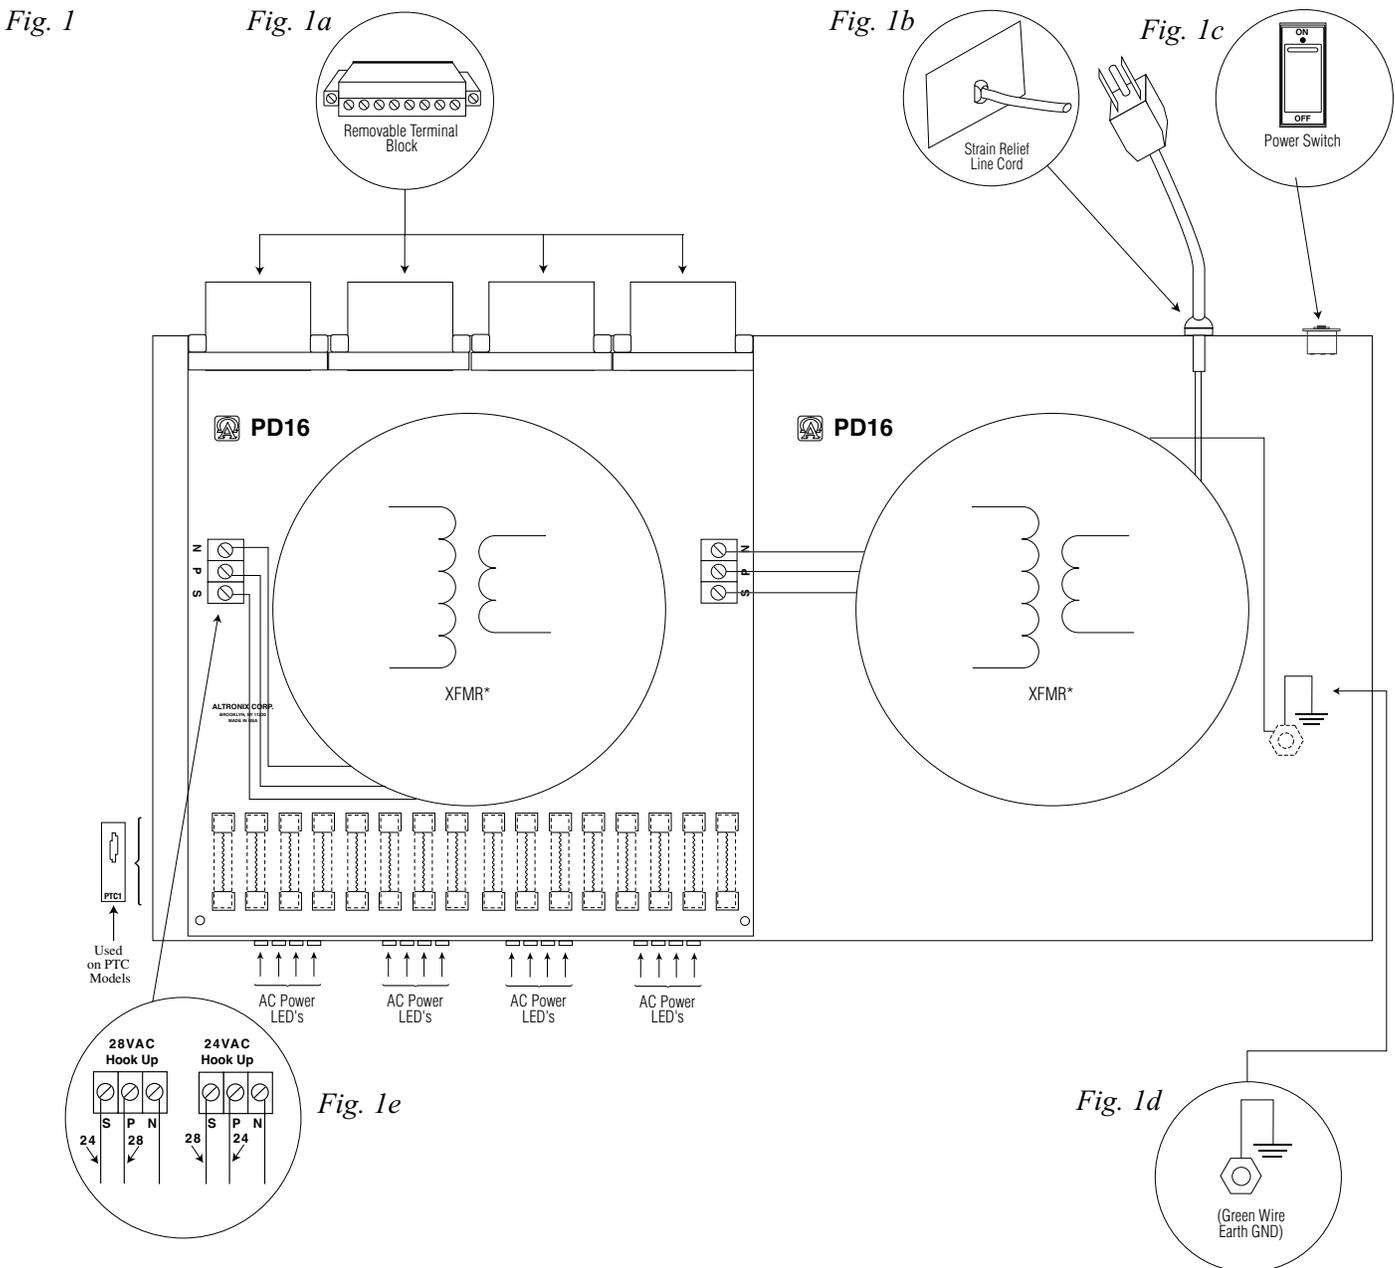

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.



For fuse protected models:
Replace fuses with the same type and rating 3.5A/250V.



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.


Rack Mechanical Drawing & Dimensions:

3.26" x 19.125" x 8.5" (83mm x 486mm x 216mm)

View from back

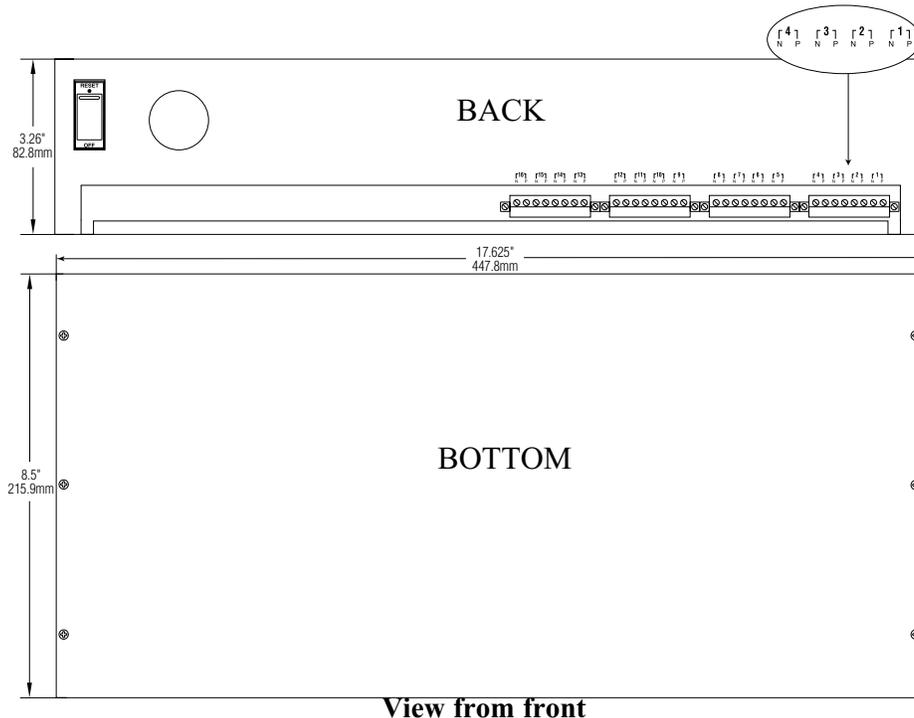

View from front

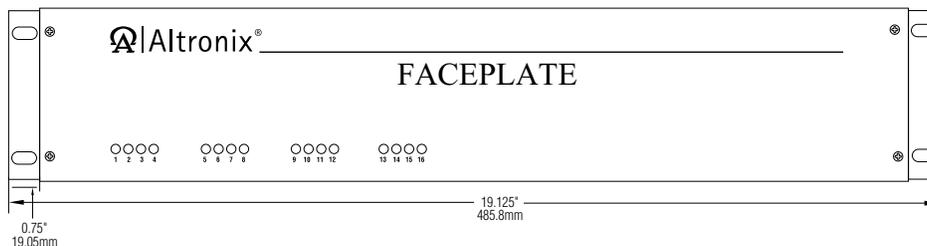

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056
web site: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.
IIR2416220 Rack Mount Series

J07M