
Quick Start Guide

This quick start guide describes how to install and use the hardened Ethernet Switch. Capable of operating at temperature extremes of -10°C to +60°C, this is the switch of choice for harsh environments constrained by space.

Physical Description

The Terminal Block and Power input

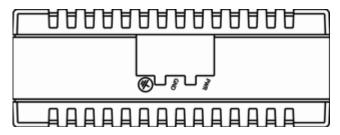


The Terminal Block		
PWR	Power Input	
GND	Power Ground	
(Earth Ground	

The 10/100Base-TX and 100Base-FX Connectors

1. The 10/100Base-TX Connections

 
The following lists the pinouts of 10/100Base-TX ports.




Pin	Regular Ports	Uplink port
1	Output Transmit Data +	Input Receive Data +
2	Output Transmit Data -	Input Receive Data -
3	Input Receive Data +	Output Transmit Data +
4	NC	NC
5	NC	NC
6	Input Receive Data -	Output Transmit Data -
7	NC	NC
8	NC	NC

2. The 100Base-FX Connections

 The fiber port pinouts: The Tx (transmit) port of device I is connected to the Rx (receive) port of device II, and the Rx (receive) port of device I to the Tx (transmit) port of device II.



The Port Status LEDs

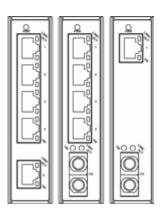


LED	State Indication		
10/100TX or 100FX			
LINK/ACT	Steady	A valid network connection established. LINK stands for LINK.	
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.	
100	Steady	The port is transferring at 100Mbps.	
	Off	The port is transferring at 10Mbps If this LED is dark.	

Functional Description

- Complies with IEC61000-6-2 EMC Generic standard immunity for industrial environment.
- Support 802.3/802.3u/802.3x. Auto-negotiation: 10/100Mbps, Full/half-duplex; Auto MDI/MDIX.
- 100Base-FX: Multi mode SC or ST type; Single mode SC or ST type; WDM Single mode SC type.
- Support 2048 MAC addresses, 384K bits buffer memory.
- · Store-and-forward mechanism.
- Full wire-speed forwarding rate and non-blocking mechanism.
- · Broadcast storm filtering.
- Operating voltage and Max. current consumption: 0.2A @ 12VDC, 0.1A @ 24VDC, 0.05A @ 48VDC. Power consumption: 2.4W Max.
- Power Supply: DC Terminal Block power input, 12-48VDC.
- Operating temperature ranges from -10 to 60
- Plastic compact DIN-Rail industrial case design.

Assembly, Startup, and Dismantling

- Assembly: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.
- Startup: Connect the supply voltage to start up the switch via the terminal block.
- Dismantling: Pull out the lower edge and then remove the switch from the DIN rail.

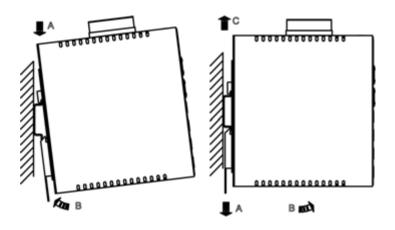

Preface

A member of the growing family of rugged switches, this switch addresses a need for a smaller switch. This switch provides an affordable solution for rugged and outdoor environment, transportation road-side cabinet, industrial floor shop, multitenant dwellings or Fiber To The Home (FTTH) applications. Capable of operating at temperature extremes of -10°C to +60°C, this is the switch of choice for harsh environments constrained by space.

Plug-and-Play Solution:

The switch is a plug-and-play Fast Ethernet Switch in compact size. It doesn't have any complicated software to set up.

This manual describes how to install and use the hardened compact Ethernet Switch. This switch integrates full wire speed switching technology. This switch brings the answer to complicated hardened networking environments.

To get the most out of this manual, you should have an understanding of Ethernet networking concepts.

In this manual, you will find:


- Features on the switch
- Illustrative LED functions
- Installation instructions
- Specifications

Table of Contents

QUICK START GUIDE	1
PHYSICAL DESCRIPTION The Terminal Block and Power input The 10/100Base-TX and 100Base-FX Connectors The Port Status LEDs FUNCTIONAL DESCRIPTION ASSEMBLY, STARTUP, AND DISMANTLING	1 1 2 3 4
Preface	5
TABLE OF CONTENTS	6
PRODUCT OVERVIEW	7
HARDENED ETHERNET SWITCH PACKAGE CONTENTS PRODUCT HIGHLIGHTS Basic Features FRONT PANEL DISPLAY PHYSICAL PORTS	7 7 8 8 9 10
Installation	11
SELECTING A SITE FOR THE SWITCH DIN RAIL MOUNTING CONNECTING TO POWER DC Terminal Block Power Inputs CONNECTING TO YOUR NETWORK Cable Type & Length Cabling	11 12 13 13 14 14
SPECIFICATIONS	16
Appendix A _ Connector Pinolite	10

Product Overview

Hardened Ethernet Switch

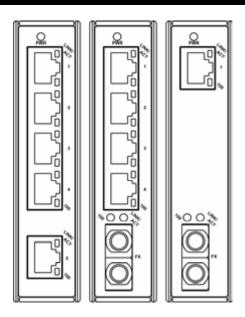

Package Contents

When you unpack the product package, you shall find the items listed below. Please inspect the contents, and report any apparent damage or missing items immediately to your authorized reseller.


- √ This Switch
- √ User's Manual

Product Highlights

Basic Features

- 5-port 10/100Base-TX, 4-port 10/100Base-TX plus 1-port 100Base-FX, or 1-port 10/100Base-TX plus 1-port 100Base-FX.
- Available in media converter format with 1-port 10/100Base-TX and 1-port 100Base-FX.
- Support IEEE802.3/802.3u/802.3X.
- Auto-negotiation: 10/100Mbps, Full/half-duplex; Auto MDI/MDIX.
- Support 2048 MAC addresses, 384K bits buffer memory.
- Store-and-forward mechanism.
- Full wire-speed forwarding rate and non-blocking mechanism.
- · Broadcast storm filtering.
- Operating voltage and Max. current consumption: 0.2A
 @ 12VDC, 0.1A @ 24VDC, 0.05A @ 48VDC.
- Power consumption: 2.4W Max.
- Power Supply: DC Terminal Block power input, 12-48VDC with polarity protection.
- · Plastic compact DIN-Rail Industrial case design.
- DIN-Rail mounting ability.

Front Panel Display

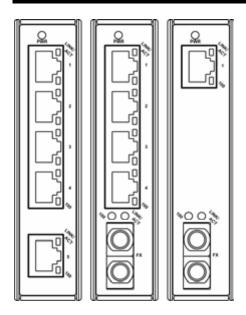

Power Status (PWR)

This LED comes on when the switch is properly connected to power and turned on.

@Port Status LEDs

The LEDs display status for each respective port.

Industrial Ethernet Switch

LED	State	Indication	
10/100TX or 100FX			
LNK/ACT	Steady	A valid network connection established. LNK stands for LINK.	
(Green)	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.	
100	Steady	Light solid yellow for a port transferring at 100Mbps.	
(Yellow)	Off	The port is transferring at 10Mbps If this LED is dark.	

Physical Ports

This switch provides:

- Five 10/100Base-TX ports
- Four 10/100Base-TX ports + one 100Base-FX port
- One 10/100Base-TX port + one 100Base-FX port

Connectivity

- RJ-45 connectors
- SC or ST connector on 100Base-FX fiber port

Installation

This chapter gives step-by-step instructions about how to install the switch:

Selecting a Site for the Switch

As with any electric device, you should place the switch where it will not be subjected to extreme temperatures, humidity, or electromagnetic interference. Specifically, the site you select should meet the following requirements:

- The ambient temperature should be between -10 to 60 degrees Celsius.
- The relative humidity should be less than 95 percent, non-condensing.
- Surrounding electrical devices should not exceed the electromagnetic field (RFC) standards.
- Make sure that the switch receives adequate ventilation.
 Do not block the ventilation holes on each side of the switch
- The power outlet should be within 1.8 meters of the switch.

DIN Rail Mounting

Installation: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.


Removal: Pull out the lower edge and then remove the switch from the DIN rail.



Connecting to Power

DC Terminal Block Power Inputs

- Step 1: Connect the DC power cord to the plug-able terminal block on the switch, and then plug it into a standard DC outlet.
- Step 2: Disconnect the power cord if you want to shut down the switch.

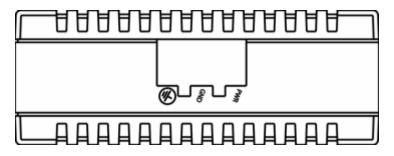

The Terminal Block		
PWR	Power Input	
GND	Power Ground	
(Earth Ground	

Connecting to Your Network

Cable Type & Length

It is necessary to follow the cable specifications below when connecting the switch to your network. Use appropriate cables that meet your speed and cabling requirements.

Cable Specifications

Speed	Connector	Port Speed Half/Full Duplex	Cable	Max. Distance
10Base-T	RJ-45	10/20 Mbps	2-pair UTP/STP Cat. 3, 4, 5	100 m
100Base-TX	RJ-45	100/200 Mbps	2-pair UTP/STP Cat. 5	100 m
100Base-FX	SC, ST	100/200 Mbps	MMF (50 or 62.5µm)	2 km
100Base-FX	SC, ST	100/200 Mbps	SMF (9 or 10µm)	15, 40, or 75 km

Cabling

- Step 1: First, ensure the power of the switch and end devices are turned off.
- <Note> Always ensure that the power is off before any installation.
- Step 2: Prepare cable with corresponding connectors for each type of port in use.
- <Note> To connect two regular RJ-45 ports between switches or hubs, you need a straight or cross-over cable.
- Step 3: Consult the previous section for cabling requirements based on connectors and speed.
- Step 4: Connect one end of the cable to the switch and the other end to a desired device.
- Step 5: Once the connections between two end devices are made successfully, turn on the power and the switch is operational.

Specifications


Hardened Compact Switch	10/100Base-TX auto-negotiating ports with RJ-45 connectors, 100Base-FX fiber ports	
Applicable Standards	IEEE 802.3 10Base-T IEEE 802.3u 100Base-TX/FX	
Switching Method	Store-and-Forward	
Forwarding Rate		
10Base-T:	10 / 20Mbps half / full-duplex	
100Base-TX/FX:	100 / 200Mbps half / full-duplex	
Performance	148,80pps for 10Mbps	
0.11	148,810pps for 100Mbps	
Cable 10Base-T:	2-pair UTP/STP Cat. 3, 4, 5	
100Base-TX:	2-pair UTP/STP Cat. 5, 4, 5	
1000000 174.	Up to 100m (328ft)	
100Base-FX:	MMF (50 or 62.5µm), SMF (9 or10µm)	
LED Indicators	Per unit – Power status (PWR)	
	Per port – 10/100TX or 100FX -	
	LNK/ACT (Green), 100 (Yellow)	
Dimensions	26mm (W) × 70mm (D) × 110mm (H)	
	(1.02" (W) × 2.76" (D) × 4.33" (H))	
Net Weight	0.2Kg (0.44lb.)	
Power	Terminal Block: 12-48VDC	
Operating Voltage &	0.2A @ 12VDC, 0.1A @ 24VDC, 0.05A @	
Max. Current Consumption	48VDC	
Power Consumption	2.4W Max.	
Operating	-10 to 60 (14 to 140)	
Temperature	-10 10 00 (14 10 140)	
Storage Temperature	-25 to 85 (-13 to 185)	
Humidity	5%-95% non-condensing	
Safety	UL60950-1, EN60950-1, IEC60950-1	
EMI	FCC Part 15, Class A	
	EN61000-6-3:	
	EN55022, EN61000-3-2, EN61000-3-3	

Industrial Ethernet Switch

EMS	EN61000-6-2:
	EN61000-4-2 (ESD Standard)
	EN61000-4-3 (Radiated RFI Standards)
	EN61000-4-4 (Burst Standards)
	EN61000-4-5 (Surge Standards)
	EN61000-4-6 (Induced RFI Standards)
	EN61000-4-8 (Magnetic Field Standards)
	EN61000-4-11 (Voltage Dips Standards)
Environmental Test	IEC60068-2-6 Fc (Vibration Resistance)
Compliance	IEC60068-2-27 Ea (Shock)
	IEC60068-2-32 Ed (Free Fall)

Appendix A – Connector Pinouts

Pin arrangement of RJ-45 connectors:

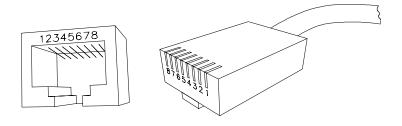

RJ-45 Connector and Cable Pins

The following table lists the pinout of 10/100Base-TX ports.

Pin	Regular Ports	Uplink port
1	Output Transmit Data +	Input Receive Data +
2	Output Transmit Data -	Input Receive Data -
3	Input Receive Data +	Output Transmit Data +
4	NC	NC
5	NC	NC
6	Input Receive Data -	Output Transmit Data -
7	NC	NC
8	NC	NC