

# HSG2 Outdoor IP67 PoE housing Installation Manual



#### **HSG2 Installation Manual**

#### Inside the box:

- A. Arecont Vision HSG2 Housing
- B. Flat washer
- C. Spring washer
- D. Machine screw
- E. Two (2) rubber plugs
- F. RJ45 Cable
- G. Two-sided hexagonal wrench

# Not included but needed:

#1 Phillips head screwdriver

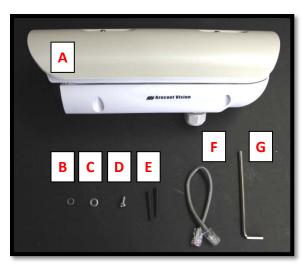


Image 1

# **Mounting the Camera:**

 Remove HSG2 housing and hardware from the box. 2. Open the HSG2 housing by using the provided wrench to loosen the two screws shown in **Image 2**.

NOTE: Do not remove screws from the housing.



Image 2

3. Remove the tray from the housing shown in Image 3.

Note: Please do not remove the heat sink from the HSG2 housing.

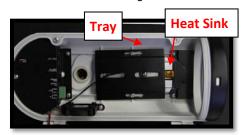


Image 3

 Use the provided screw, flat washer and spring washer to attach Arecont Vision MegaVideo® cameras on the tray shown in Image 4-1 and Image 4-2.



Image 4-1



Image 4-2

5. Attach the tray onto HSG2 housing and make sure the tray firmly contact with the heat sink shown in **Image 5**.

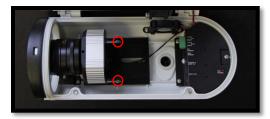


Image 5

 Remove the silicone cap from the housing, cut the side part (if necessary) (Image 6) to run the RJ45 cable, external power and digital in/out cables through the silicone cap. Insert the provided rubber plugs to cover unnecessary holes in the silicone cap (Image 7)



Image 6

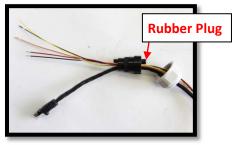


Image 7

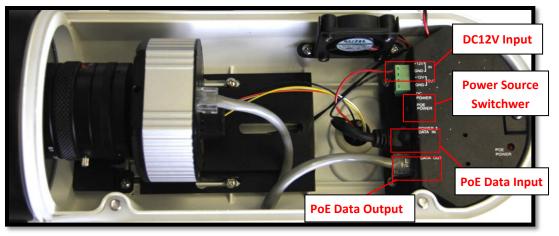


Image 9

 Run Ethernet cable, external power cable (if necessary) and digital in/out cables (if necessary) through the hole of HSG2 housing and tighten all fittings to ensure a liquid-tight seal. (Image 8)



Image 8

Plug the Ethernet cable into the HSG2 PoE power & data input. (Image 9)

- 9. Use the provided RJ45 cable to connect Arevont Vision's MegaVide® camera to the HSG2 PoE data output. (Image 9)
- Switch HSG2 power source to PoE power shown in Image 9. NOTE: If the camera is powered via PoE, please skip step 11-12.
- 11. If the HSG2 housing is powered by an outside power supply, 12VDC, connect the external power to the HSG2 DC12V input (Image 9).

NOTE: HSG2 can support heater, 2 fans and camera via either PoE or DC12V.

- Switch the HSG2 power source to DC power shown in Image 9.
- 13. Attach the HSG2 to the wall mount.
- 14. Power on the camera, adjust focus and tighten the set screws on the chassis.

# **HSG2 Wall Mount (HSG2-WMT) Installation Instructions**

# Inside the box:

- A. Wall mount
- B. Pack of four (4) wood screws and four (4) dry wall anchors
- C. Two-sided Hexagonal Wrench

# Not included but needed:

#2 Phillips head screwdriver

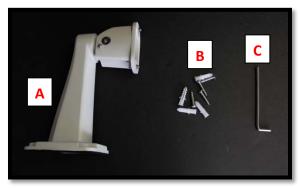


Image 10

 Remove wall mount and hardware from the box.



Image 11

- 2. Run the Ethernet cable and outside power cable (if necessary) through the wall mount.
- 3. Install the HSG2 housing onto wall mount as shown in **image 11**.
- 4. Attach the wall mount to the wall using drywall screws or any optional hardware suitable for the mounting surface.
- 5. For installation of the camera, please reference "Mounting the Camera."

# HSG2 Junction Box Adapter (SV-JBA) for MD-WMT2 Installation Instruction

#### **Caution:**

Use of SV-JBA is recommended for outdoor installation on hard surfaces requiring external conduit.

#### Inside the box:

- A. Junction Box Adapter
- B. Pack of four (4) machine screws
- C. One double-sided hex key
- D. Pack of four (4) wood screws and four (4) dry wall anchors
- E. Mounting Template

## Not included but needed:

- #2 Phillips head screwdriver
- HSG2-WMT ( HSG2 Wall Mount)
- 3/4" NPT Conduit (if necessary)



Image 12

 Remove the junction box and hardware from the box.



Image 13

- 2. Remove the conduit plug by first removing the socket set screw by using the provided hex key.
- 3. Attach the junction box adapter to the wall using drywall screws or any optional hardware suitable for the mounting surface.
- 4. Run the Ethernet cable and outside power cable (if necessary) through the junction box adapter.
- 5. Attach HSG2 wall mount to the junction box adapter as shown in **Image 13**.
- 6. Connect 3/4" NPT conduit to the junction box adapter.
- 7. For installation of the camera, please reference "Mounting the Camera."

# **HSG2 Pole Mount Adapter (MD-PMA) Installation Instructions**

## Inside the box:

- A. Pole Mount Adapter
- B. 2x Compression Fittings
- C. 2x Small Steel Straps
- D. 2x Large Steel Straps
- E. Pack of four (4) machine screws

#### Not included but needed:

- #2 Phillips head screwdriver
- MegaDome<sup>®</sup> Wall Mount, MD-WMT2

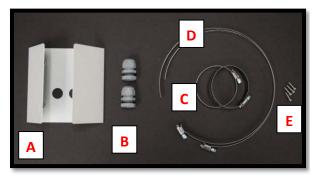


Image 14

- Remove pole mount adapter, compression fittings, steel straps and hardware from the box.
- 2. Install compression fittings to pole mount adapter as shown in **Image 15**.
- Run the Ethernet cable and outside power cable (if necessary) through the compression fittings.

- 4. Attach the wall mount to pole mount adapter as shown in **Image 16**.
- Use the supplied two large or small steel straps to attach the pole mount adapter to the pole and tighten the compression screws as shown in Image 16.
- Attach HSG2 housing to wall mount adapter. Please reference "Mounting the Camera," if needed.
- 7. Tighten the compression fittings to seal the wiring holes.



Image 15



Image 16

# **HSG2 Corner Mount Adapter (MD-CRMA) Installation Instructions**

#### Inside the box:

- A. Corner Mount Adapter
- B. 2x Compression Fittings
- C. Pack of four (4) machine screws
- D. 2x Packs of four (4) wood screws and four(4) dry wall anchors

#### Not included but needed:

- #2 Phillips head screwdriver
- MegaDome<sup>®</sup> Wall Mount, MD-WMT2

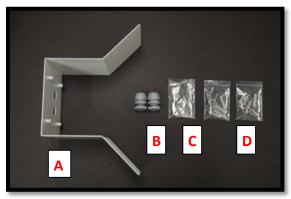


Image 17

- Remove corner mount adapter, compression fitting and hardware from the box.
- 2. Install compression fittings to corner mount adapter as shown in **Image 18**.

- 3. Run the Ethernet cable and outside power cable (if necessary) through the compression fittings.
- 4. Attach Wall Mount Adapter to Corner Mount Adapter as shown in **Image 19.**



Image 18



Image 19

- 5. Using the screws provided (or other hardware) attach the corner mount adapter to an exterior 90° corner wall.
- 6. Attach the HSG2 housing to Wall Mount Adapter. Please reference "Mounting the Camera", if needed.
- 7. Tighten the Compression Fittings to seal the wiring holes.

# Leading the way in Megapixel video

#### Arecont Vision

425 E. Colorado Street, 7th Floor Glendale, CA 91205 support@arecontvision.com www.arecontvision.com +1.818.937.0700 877.CAMERA.8

