
II - M1500-22

EDGE HARDWARE M800 AND M3000 SERIES ELECTRIC LOCK M1510/M1520C FUNCTION CHANGE INSTRUCTIONS

TO CHANGE THE LOCKING FUNCTION FOLLOW THE INSTRUCTIONS BELOW CAREFULLY.

STEP 1: REMOVE THE 5 COVER SCREWS AND COVER.

STEP 2: USE THE ILLUSTRATION BELOW FOR SWITCHING LOCK FUNCTION.

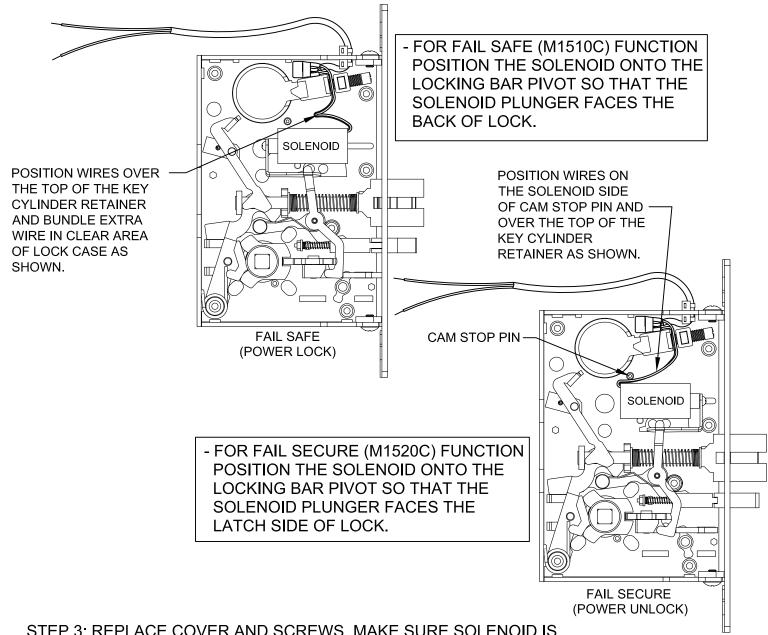

STEP 3: REPLACE COVER AND SCREWS. MAKE SURE SOLENOID IS PROPERLY POSITIONED IN COVER SLOT.

