

# II - M1500-25

## K2 QMS AND QME SERIES ELECTRIC LOCK M1510/M1520C FUNCTION CHANGE INSTRUCTIONS


TO CHANGE THE LOCKING FUNCTION FOLLOW THE INSTRUCTIONS BELOW CAREFULLY.

STEP 1: REMOVE THE 4 COVER SCREWS AND COVER.

STEP 2: USE THE ILLUSTRATION BELOW FOR SWITCHING LOCK FUNCTION.


STEP 3: MAKE SURE SOLENOID IS PROPERLY POSITIONED IN CASE SLOT.

STEP 4: REPLACE COVER AND SCREWS.

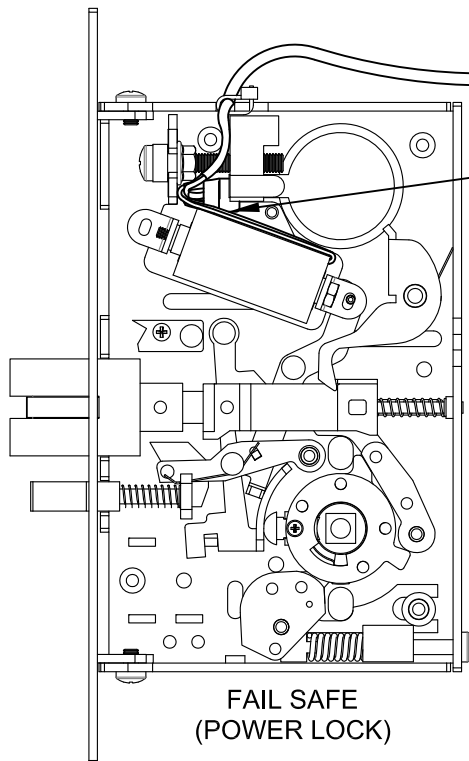

POSITION WIRES AND RECTIFIER BETWEEN THE SOLENOID BODY AND THE KEY CYLINDER RETAINER AS SHOWN.

FAIL SAFE  
(POWER LOCK)

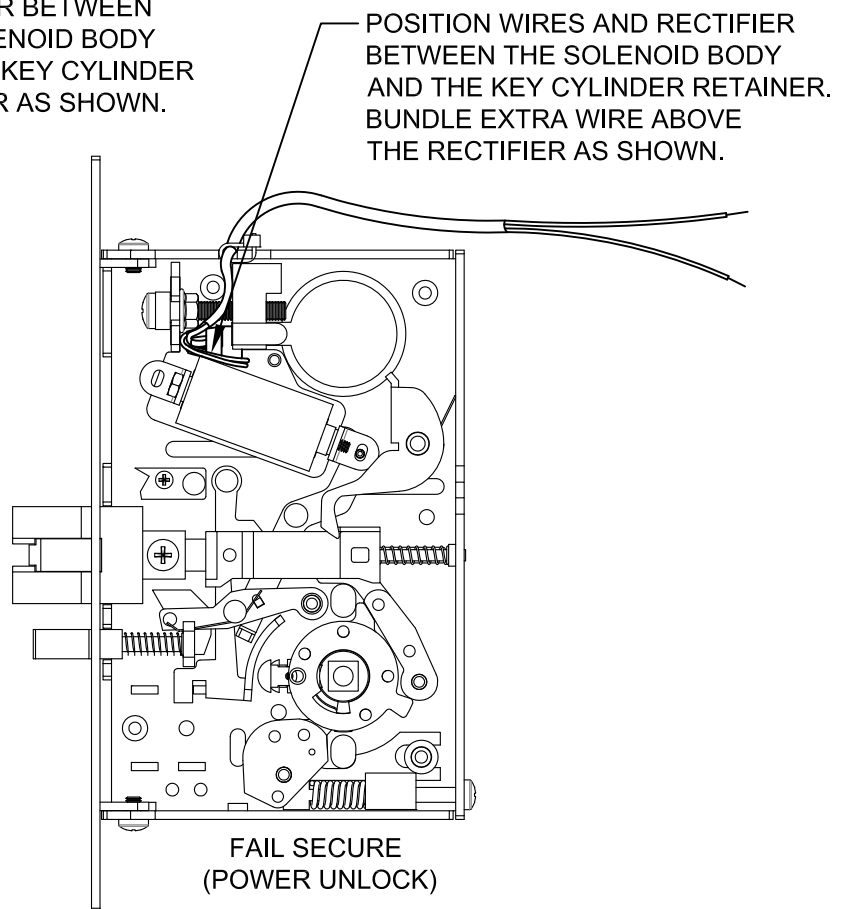

POSITION WIRES AND RECTIFIER BETWEEN THE SOLENOID BODY AND THE KEY CYLINDER RETAINER. BUNDLE EXTRA WIRE ABOVE THE RECTIFIER AS SHOWN.

FAIL SECURE  
(POWER UNLOCK)

- FOR FAIL SAFE (M1510C) FUNCTION POSITION THE SOLENOID ONTO THE LOCKING BAR PIVOT SO THAT THE SOLENOID PLUNGER FACES THE LATCH SIDE OF LOCK.

- FOR FAIL SECURE (M1520C) FUNCTION POSITION THE SOLENOID ONTO THE LOCKING BAR PIVOT SO THAT THE SOLENOID PLUNGER FACES THE BACK OF LOCK.

