# 120 Belmont Drive Somerset, NJ 08873-1204

american fibertek Phone: 732.302.0660 Fax: 732.302.0667

Instruction Manual
MXR4-100TX
Network Switch



# **CAUTION**

RISK OF ELECTRIC SHOCK,
DO NOT OPEN WITH
POWER APPLIED



WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE

NO USER SERVICEABLE PARTS INSIDE
REFER SERVICE TO QUALIFIED SERVICE PERSONNEL

## INSTALLATION AND OPERATION INSTRUCTIONS

### INTRODUCTION

Thank you for purchasing your American Fibertek MXR4-100TX series network switch. Please take a few minutes to read these installation instructions in order to obtain the maximum performance from this product.

### **FUNCTIONAL DESCRIPTION**

The MXR4-100TX series combines four copper Ethernet ports. MXR4-100TX units allow transmission speeds of 10 Mb/s or 100 Mb/s on each of the copper ports. Refer to the data sheets for detailed performance specifications.


The MXR4-100TX series is configured to auto negotiate the data ports to either 10Base-T or 100Base-TX Ethernet data at full or half duplex. The auto negotiate feature also selects the proper MDI or MDIX interface.

This unit is contained in a compact and rugged aluminum housing with internal dc voltage regulation. The detachable terminal block, RJ45 Ethernet data connector, and LED indicators provide for easy installation and monitoring of data and dc power. The MXR4-100TX is designed for rack mounting in the MXRC-1 subrack. For mounting as a modular stand alone unit see the MX4 series.

#### INSTALLATION

THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70 AND LOCAL CODES.

MXR4 series units slide into any open slot in the MXRC-1 subrack. Use a small screwdriver to screw the top and bottom fasteners into place.

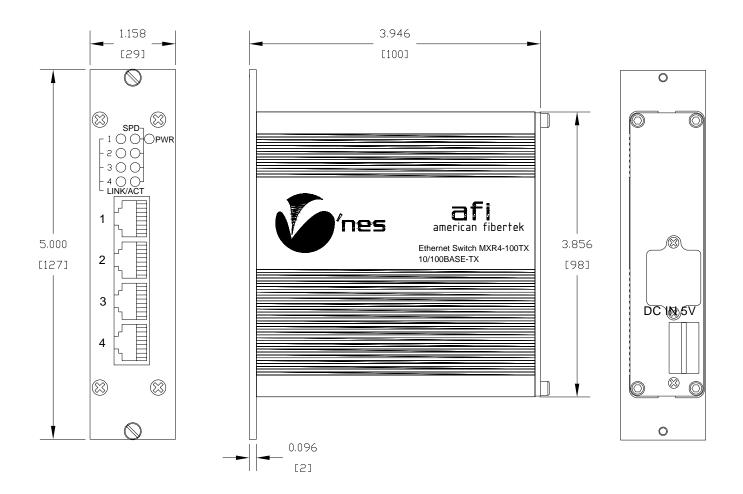

# MXR4-100TX

# **MXR4 SERIES POWER SOURCE**

Power to MXR4 series units is supplied by the subrack. Please refer to the MXRC-1 and MXRCPS-1 instructions for further details.

### MXR4 SERIES POWER CONNECTION

Power is supplied to the MXR4 series units via a four finger backplane connector. The MXR4 series units can be inserted into the subrack or removed from the subrack with power applied to the backplane.

# MXR4 SERIES DATA CONNECTIONS

The UTP Ethernet input/output connections are made via RJ45 plugs on the front of the unit. A maximum CAT5 wire length of 100 meters is permitted.

#### MXR4-100TX STATUS INDICATORS

The MXR4-100TX series units provide the following LED status indicators to aid in troubleshooting:

#### **PWR**

A green LED indicator monitors the presence of DC power into the unit. Power status associated with this LED is summarized below.

PWR Indicator:	Power Status:
Green	Input Power at Correct Level
Off	Check Input Power

#### LINK/ACT

A Green LED indicator monitors the connection and data flow on each of the four copper ports. Port status associated with this LED is summarized below:

LINK/ACT Indicator:	Port Status:
Solid Green	Port Connected
Flashing Green	Port Communicating
Off	No Data Flow

#### SPD

A bi-colored LED indicator monitors the speed of the data flow on each of the four copper ports. Data status associated with this LED is summarized below:

SPD Indicator:	Port Status:
Green	Port Connected and in 100 Mbps Mode
Amber	Port Connected and in 10 Mbps Mode
Off	No Data Flow

This unit complies with 21 CFR 1040.10 and 1040.11

#### WARRANTY INFORMATION

American Fibertek, Inc warrants that at the time of delivery and for a period of five years thereafter the products delivered will be free of defects in materials and workmanship. Defective products will be repaired or replaced at the exclusive option of American Fibertek. A Return Material Authorization (RMA) number is required to send the products back in case of return. All returns must be shipped prepaid. This warranty is void if the products have been tampered with. This warranty shall be construed in accordance with New Jersey law and the courts of New Jersey shall have exclusive jurisdiction over this contract. **EXCEPT FOR THE FOREGOING WARRANTY, THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXPRESSED OR IMPLIED, WHICH EXTENDS BEYOND THE WARRANTY SET FORTH IN THIS AGREEMENT.** In any event, American Fibertek will not be responsible or liable for contingent, consequential, or incidental damages. No agreement or understanding, expressed or implied, except as set forth in this warranty, will be binding upon American Fibertek unless in writing, signed by a duly authorized officer of American Fibertek.

# **SERVICE INFORMATION**

There are no user serviceable parts inside the unit.

In the event that service is required to this unit, please direct all inquiries to:

American Fibertek, Inc.

120 Belmont Drive

Phone: (877) 234-7200

Phone: (732) 302-0660

FAX (732) 302-0667

E-mail: techinfo@americanfibertek.com