
Instructions for Installation of PC-300

- ▶ Three different tones to choose from
- Unit uses positive trigger
- Install the positive wire and common wire in the proper positions
- ▶ Trigger wire determines sound output
- The 1/3 switch determines if unit sounds one time or three times
- ▶ T1, T2, and T3 switches determine if sound is continuous. Continuous chime occurs as long as trigger is activated.
- ▶ High to low controls volume output

Position of switches

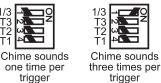



Back of unit

Chime sounds continuously as long as trigger is activated. The same applies for T2 and T1 switches.

Voltage: 12 - 24 VDC		
Sound output: 80 - 88 dB at 12 - 24 VDC		
Current draw: 70 - 180 mA at 12 - 24 VDC		
Fits single gang wall box		




5 Commonwealth Avenue ~ Woburn, MA 01801 ~ Toll-free: 800-8585-ATW Tel: 781-938-5800 ~ Fax: 781-932-4900 ~ www.atwbrand.com ~ info@atwbrand.com

Instructions for Installation of PC-300

- ▶ Three different tones to choose from
- Unit uses positive trigger
- Install the positive wire and common wire in the proper positions
- ▶ Trigger wire determines sound output
- ▶ The 1/3 switch determines if unit sounds one time or three times
- T1, T2, and T3 switches determine if sound is continuous.
 Continuous chime occurs as long as trigger is activated.
- ▶ High to low controls volume output

Position of switches

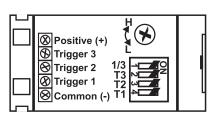

1/3 T3 T2 T1 Chime sounds one time per



trigger

1/3
T3


Back of unit

Chime sounds continuously as long as trigger is activated. The same applies for T2 and T1 switches.

Voltage: 12 - 24 VDC
Sound output: 80 - 88 dB at 12 - 24 VDC
Current draw: 70 - 180 mA at 12 - 24 VDC
Fits single gang wall box



Instructions for Installation of PC-300

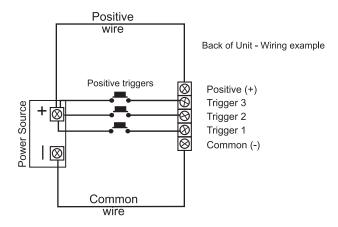


Wiring:	Tones:
Positive wire: + 12 to 24 VDC	Trigger 1: Fading tone chime
Trigger wires: +12 to 24 VDC	Trigger 2: Single tone chime
Negative/Common wire	Trigger 3: Dual tone chime

Any combination of the 3 tones may be used. If 2 or more tones are used, the trigger priority order is trigger 1, trigger 3, trigger 2 when triggered simultaneously.



5 Commonwealth Avenue ~ Woburn, MA 01801 ~ Toll-free: 800-8585-ATW
Tel: 781-938-5800 ~ Fax: 781-932-4900 ~ www.atwbrand.com ~ info@atwbrand.com

Instructions for Installation of PC-300

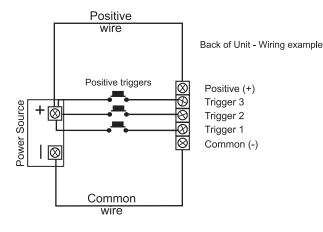

Wiring:	Tones:
Positive wire: + 12 to 24 VDC	Trigger 1: Fading tone chime
Trigger wires: +12 to 24 VDC	Trigger 2: Single tone chime
Negative/Common wire	Trigger 3: Dual tone chime

Any combination of the 3 tones may be used. If 2 or more tones are used, the trigger priority order is trigger 1, trigger 3, trigger 2 when triggered simultaneously.

