

SAMSUNG TECHWIN

HD-SDI CAMERA

User Manual

SCD-6080



SAMSUNG

CE



HD-SDI Camera

User Manual

Copyright

©2011 Samsung Techwin Co., Ltd. All rights reserved.

Trademark

 **SAMSUNG TECHWIN** is the registered logo of Samsung Techwin Co., Ltd. The name of this product is the registered trademark of Samsung Techwin Co., Ltd. Other trademarks mentioned in this manual are the registered trademark of their respective company.

Restriction

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

Disclaimer

Samsung Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Samsung Techwin reserves the right to change the contents of this document without prior notice.

Warranty

If the product does not operate properly in normal conditions, please let us know. Samsung Techwin will resolve the problem for free of charge. The warranty period is 3 years. However, the followings are excluded:

- If the system behaves abnormally because you run a program irrelevant to the system operation.
- Deteriorated performance or natural worn-out in process of time
- ❖ Design and specifications are subject to change without prior notice.

Overview

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/ accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




Overview

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECT THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

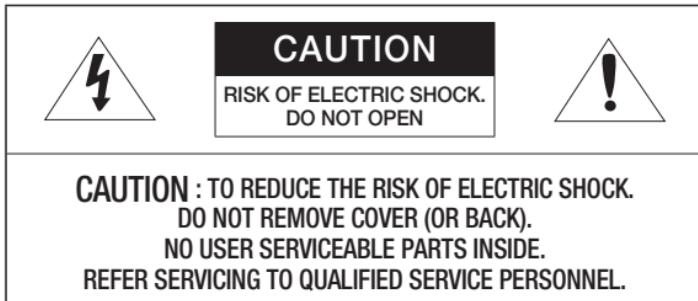

EXPLANATION OF GRAPHICAL SYMBOLS



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Class I construction

An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.

Battery

Batteries(battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Disconnection Device

Disconnect the main plug from the apparatus, if it's defected. And please call a repair man in your location.

When used outside of the U.S., it may be used HAR code with fittings of an approved agency is employed.

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Please use the input power with just one camera and other devices must not be connected.

Overview

Please read the following recommend safety precautions carefully.

- Do not place this apparatus on an uneven surface.
- Do not install on a surface where it is exposed to direct sunlight, near heating equipment or heavy cold area.
- Do not place this apparatus near conductive material.
- Do not attempt to service this apparatus yourself.
- Do not place a glass of water on the product.
- Do not install near any magnetic sources.
- Do not block any ventilation openings.
- Do not place heavy items on the product.
- Do not expose the camera to radioactivity.

User's Manual is a guidance book for how to use the products.

The meaning of the symbols are shown below.

- Reference : In case of providing information for helping of product's usages
- Notice : If there's any possibility to occur any damages for the goods and human caused by not following the instruction

※ Please read this manual for the safety before using of goods and keep it in the safe place.

CONTENTS

OVERVIEW

3

- 3 Important Safety Instructions
- 8 Product Features
- 9 What's Included
- 10 At a Glance

● OVERVIEW

INSTALLATION & CONNECTION

12

- 12 Installation
- 15 Connecting with other Device

OPERATING YOUR CAMERA

18

- 18 Menu Configuration
- 19 Menu Setup

APPENDIX

32

- 32 Specification
- 34 Product Overview
- 35 Troubleshooting

Overview

PRODUCT FEATURES

- **Supports Full HD-SDI Video**

By adopting a diagonal 6mm (1/3") 2M pixel CMOS, the camera produces clear picture quality.

- **Excellent low-illumination image quality**

By adopting high-sensitive colour CMOS, the camera provides clear image quality under a severe low illumination condition of 0.017 Lux (with SENS-UP, x60).

- **SSNR3 (Samsung Super Noise Reduction) Function**

The high-performance WN2 DSP chip effectively removes low-light gain noise and afterimage to provide clear images even in dark environments.

- **Electrical Day&Night**

This camera has a function that automatically selects the mode that is appropriate for daytime or night-time conditions. The COLOR mode operates in daytime conditions to provide optimum colors, and B/W mode operates in night-time conditions to enhance the definition of the image.

- **Motion Detection**

Since the camera detects motion without any additional external sensor, you can monitor activity more efficient.

- **SSDR (Samsung Super Dynamic Range)**

For images with high contrast between bright and dark areas from difficult lighting conditions such as backlighting, this camera selectively illuminates darker areas while retaining the same light level for brighter areas to even out the overall brightness.

- **Miscellaneous Functions**

HLC(High Light Compensation), SENS-UP, FLIP (H/V-REV), D-ZOOM and PRIVACY functions are provided.

- **OSD**

By providing multi-lingual user-friendly OSD (On-screen Display) menu, the camera provides easy handling of the camera.

WHAT'S INCLUDED


Check if the main unit and all the following accessories are included in the product package.

Appearance	Item Name	Quantity	Description
	Camera	1	
	User Manual	1	
	Quick Guide	1	
	Iron Screw	3	Used for fixing to an iron plate
	Cable for the testingmonitor	1	Used to test the camera connection to a portable display device
	Dustproof Plate	1	Preventing dust inflow

Overview


AT A GLANCE

Appearance

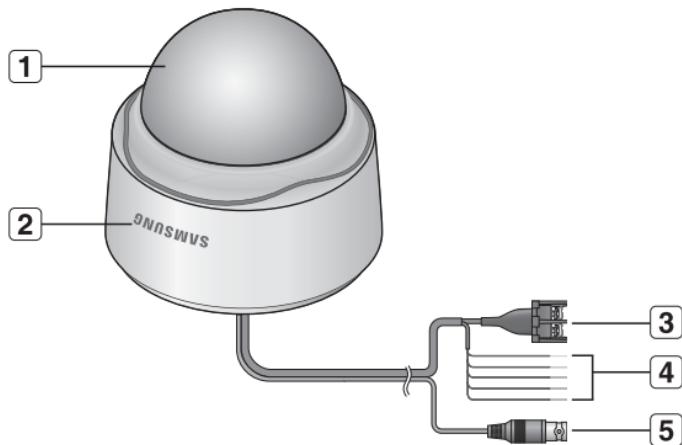

Item	Description	
1 Top cover	Case cover used to protect the lens and the main unit.	
2 Camera Case	Covers the lens and camera body.	
3 Power Port	Used to plug the power cable.	
4 I/O Port	BLUE(485-)	Signal port for RS-485 communication.
	YELLOW(485+)	Signal port for RS-485 communication.
	WHITE (ALARM OUT)	Output port that signals when a motion is detected.
	RED(EXT_D/N IN)	External signal input port for Day/Night mode setup.
	BLACK(GND)	Earth-grounding port for external signal.
5 HD-SDI Video Out terminal	BNC terminal for HD-SDI video signal output.	

Inside

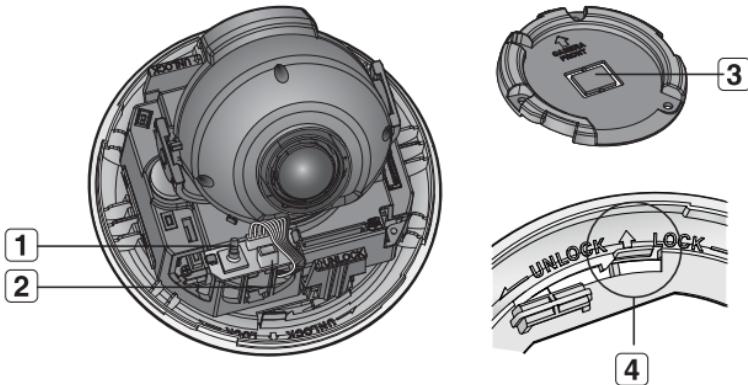

Item	Description	
	<p>The switch is used for setting and adjusting the camera's functions and properties.</p> <p>Press and hold this switch more than 2 seconds to display the main menu on the screen.</p>	
1 SETUP Switch	◀/▶	Move this switch left or right to move the cursor or change the value in the menu.
	▲/▼	Move this switch up or down to move the cursor in the menu.
	■	Press the switch to set the function in menu. To move to a submenu item in the menu, press this switch.
2 C-VIDEO	<p>Analogue video output terminal of C-Video.</p> <p>Use a monitor cable for testing the camera with a portable display. (for installation)</p>	
3 Wiring Cover	<p>If you drill a hole in the wiring cover for wiring, remove the cover and attach the provided dustproof plate to it, and arrange the cables through the plate.</p> <ul style="list-style-type: none"> The dust-proof plate is to prevent outside dust from inflow to the wiring compartment. 	
4 Lock Release	<p>To separate the bracket from the main unit for the installation or to separate the camera from an installed camera, push this release and turn the main unit in the marked direction of <UNLOCK>.</p>	

installation & connection

INSTALLATION


Precautions before installation

Ensure you read out the following instructions before installing the camera:


- Select an installation site (ceiling or wall) that can endure at least 5 times of the camera weight.
- Stuck-in or peeled-off cables can cause damage to the product or a fire.
- For safety purposes, keep anyone else away from the installation site. And put aside personal belongings from the site, just in case.

Disassembling

1. Take the camera body with one hand and take the top cover with the other hand. Then, turn the cover counter clockwise to remove it.


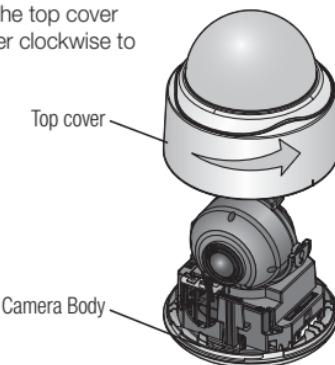


2. Hold down the lock lever in the outer direction as shown and turn the camera body in the <UNLOCK> direction (counter clockwise) to remove the bracket from the body.
 - If it fails, take the bottom hole of the bracket and turn the bracket in the <LOCK> direction (clockwise) to remove it.

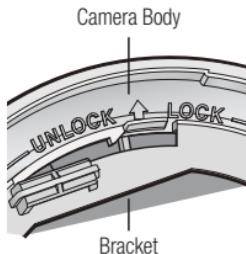


Installation

1. Use the provided screws (x3) to fix the bracket to a desired position (ceiling or wall).
 - Ensure that the <CAMERA FRONT> label on the bracket faces the direction for camera monitoring.
2. Arrange the cables through the bracket to the ceiling or wall.
 - If you drill a hole in the ceiling cover for wiring, press hard to remove the cover and attach the dust-proof plate to it, and arrange the cables through the plate. If you intend to arrange the cables without drilling a hole, use the empty area opposite to the <CAMERA FRONT> label side for the wiring purpose.
3. Mount the camera body onto the bracket.
Align the marking hole of the camera body with the <CAMERA FRONT> label of the bracket, and turn the body in the <LOCK> direction.
4. Refer to “**Adjusting the monitoring direction for the camera**” to adjust the lens in a desired direction.
5. Close the top cover.
 - Fit the top cover into the fixing tips of the camera body and turn the cover clockwise.

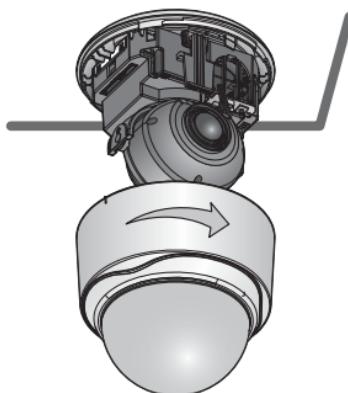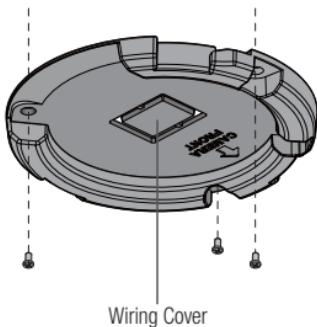

installation & connection

Adjusting the monitoring direction for the camera

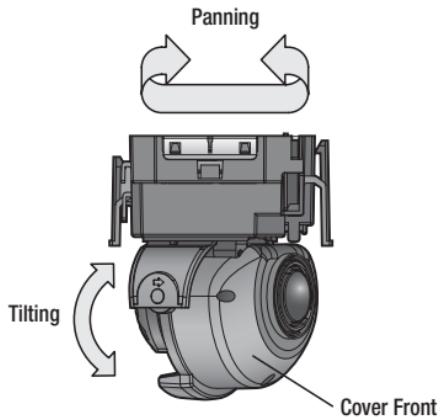

❖ Adjusting the monitoring direction

You can adjust the camera direction only when the camera is fixed on the ceiling. Where, rotating the camera unit to the left or right is called Pan and adjusting the tilt is called Tilt.

- The effective range of pan is a total of 355 degrees.
- The effective range of tilt is a total of 90 degrees.




- In some angles, the top cover may cause cutting some part of the monitoring object.
- Do not rotate the focus/zoom lens by force after removing the cover front. Otherwise, it may cause an incorrect focus due to a motor failure.

❖ Methods of adjustment

1. After installing the camera, adjust the panning angle in consideration of the monitoring direction.
When tilting the camera, you should adjust the horizontal angle lest that the image be displayed reversely.
2. Adjust the tilt angle so that the camera faces toward the monitoring object.

CONNECTING WITH OTHER DEVICE

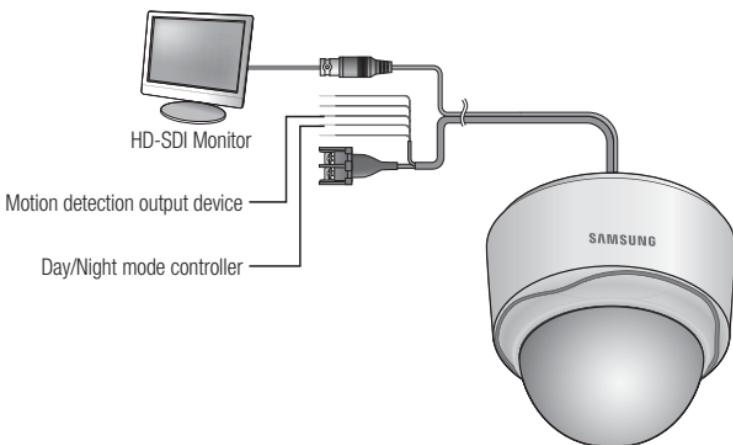

Connecting to the monitor

Connect the video out port of the camera to the video input port of the monitor.



- In the initial installation of the camera, you can connect the camera to the monitor for checking the connection status.
- When connecting a general monitor device to the HD-SDI video output, you need to use a signal converter.
- You can set the video output type to either NTSC or PAL. (page 29)

Video Cable

The cable connecting the camera's video output and a monitor is a BNC coaxial cable as shown below.

If the distance between the camera and the monitor exceeds the recommended maximum, please use an auxiliary video amp.



Maximum video transfer distance	Recommended cable specification
100~140m	5C2V(75ohm)
200m	L-6CHD(75ohm) (SDI-specific Cable)

installation & connection

External Day/Night Switching Input

Day/Night mode of the camera can be switched by signal from an external device.



- To use this function, <DAY/NIGHT> setting of the camera should be set to the <EXTERN>. (Page 27)

Motion Detection Signal Out

Upon a motion detection, the port outputs signal for an external device for display or operation. When a motion is detected, the port outputs 3.3V signal.




- To use this function, <ALARM OUT> setting of the camera should be set to <ON>. (Page 30)

Power Supply

Use the screwdriver to connect each line (+, -) of the power cable to the corresponding power port of the camera.



- Be careful not to reverse the polarity when you connect the power cable.
- Be sure to turn the power off the device to be connected.

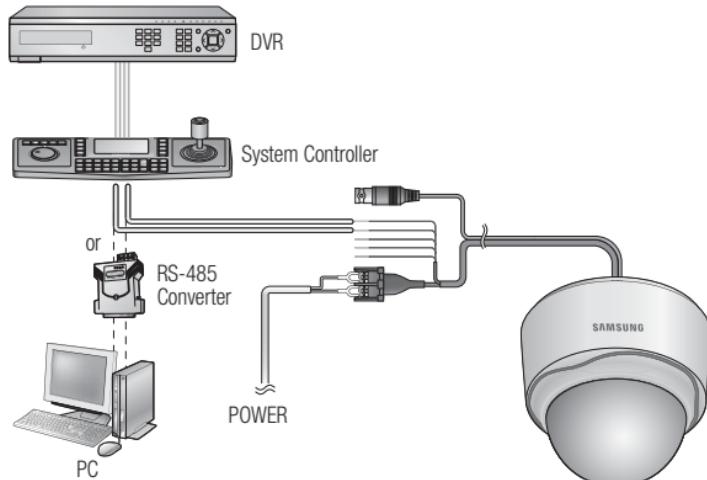

For AC/DC Power Supply

You can use either one of AC 24V/1A~2A and DC 12V/2A~4A adaptor.

Resistance of copper wire [at 20°C (68°F)]

Wire specification (AWG)	#24(0.22mm ²)	#22(0.33mm ²)	#20(0.52mm ²)	#18(0.83mm ²)
Resistance (Ω/m)	0.078	0.050	0.030	0.018
Voltage Drop (V/m)	0.028	0.018	0.011	0.006
Recommended Distance (m)	Less than 20	Less than 30	Less than 30	Less than 30

- As shown in the table above, you may encounter a voltage-sag depending on the wire length. If you use an excessively long wire for camera connection, the camera may not work properly.
 - Voltage for proper camera operation: DC 12V±10%, AC 24V±10%
 - Voltage drop shown in the table above may show difference from the actual depending on the manufacturer and cable type.

RS-485 Communications

Using RS-485 communication, the camera menu can be accessed using Samsung Techwin's System Controller or the DVR.

- For accessing the camera from a computer**

Use a RS-485 converter to connect the camera's control port with the computer's serial cable.

Ex) Serial port (COM1) of computer → Serial Cable → RS-485 Converter → Camera's RS-485 control port

- For accessing the camera from a DVR or the System Controller**

connect the camera's RS-485+ and RS-485- terminals to the RS-485 control board's terminals of desired device with a RS-485 cable (TRX+ and TRX-).

Control ports of RS-485 Controller	RS-485 ports of the camera
(+) CONNECTION TERMINAL (TRX+)	485+
(-) CONNECTION TERMINAL (TRX-)	485-

Default RS-485 communication settings

Item	Camera Number	Transfer Rate	Communication Mode	Return Data
Default	1	9600	8-NONE-1	Not used



- When constructing a proprietary controller for direct camera control, apply Pelco-D or Samsung-Techwin protocol.
- Use only a DVR model that supports HD-SDI saving.


Operating Your Camera

MENU CONFIGURATION

MAIN SETUP			
LENS	• DC		
EXPOSURE	• BRIGHTNESS	• SHUTTER	• AGC
	• SENS-UP	• RETURN	
WHITE BAL	• ATW	• OUTDOOR	• INDOOR
	• MANUAL	• AWC → SET	
SSDR	• OFF	• ON	
BACKLIGHT	• OFF	• BLC	• HLC
SSNR3	• ON	• OFF	
DAY/NIGHT	• AUTO	• EXTERN	• COLOR
	• B/W		
SPECIAL	• CAM TITLE	• IMAGE ADJ	• MOTION DET
	• PRIVACY	• COMM ADJ	• LANGUAGE
	• RESET	• RETURN	
EXIT	• EXIT		


MENU SETUP

To configure the camera's function settings, use the button on the rear side of the product.

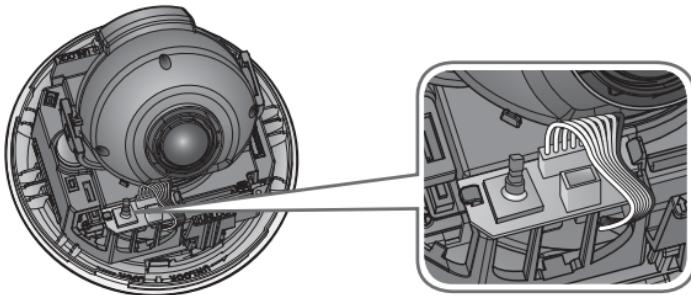

- ▲▼ : Moves up/down in menu.
- ▲▶ : Moves right/left in menu.
- SET : Press the switch to set the function in camera menu.
To move to a sub-menu item in the menu, press this switch.
 1. Press the SET button.
 - Enters the function menu.

The selected function's menu appears on the monitor.

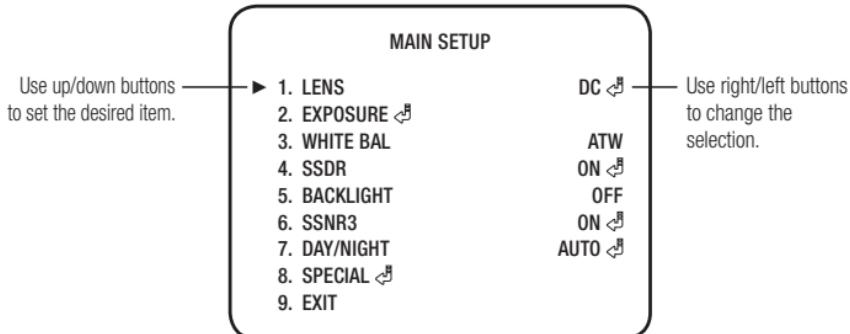

2. Use the Up/Down buttons to select a desired function.
 - Move the button up or down to move the arrow up or down.
Set the arrow to indicate the desired item.

Operating Your Camera

3. Use the Up/Down buttons to select a desired function.
 - Move the button right or left to display available values or settings.
Set the desired setting value using the button.
4. To finish, select <EXIT> and press the SET button.



- An item with the icon also has sub menus. To select a sub menu, select an item with the icon and press the Function Setup switch.
- An item with the --- icon is unavailable due to function settings.

LENS

Using this function, you can control the screen brightness.

1. When the SETUP menu screen is displayed, select <LENS> by using the Function Setup switch so that the arrow indicates <LENS>.
2. Adjust the focus automatically or manually when SETUP menu screen is displayed.

MAIN SETUP	
► 1. LENS	DC
2. EXPOSURE	ATW
3. WHITE BAL	ON
4. SSDR	OFF
5. BACKLIGHT	ON
6. SSNR3	AUTO
7. DAY/NIGHT	
8. SPECIAL	
9. EXIT	

• DC

- ONE-PUSH : Adjust the focus automatically.
- MANUAL : Adjust the zoom and focus manually using the Function Setup switch.



- The focus may not fit correctly in the following cases:
 - Sudden change to the object in One Push Focus mode (sudden movement, appearance or disappearance)
 - Radical change to the brightness in One Push Focus mode
 - Image of a low contrast
 - If the camera is exposed to a strong light source in the front or surroundings
 - If the lens is covered with impurities
 - In a situation where One Push Focus is hardly applied, try to make recording with a high contrast object or use the MF (manual focus) mode.
 - If the focus does not fit in situations other than the above, use MF instead.

FOCUS ADJUST	
► 1. ONE-PUSH	
2. MANUAL	
3. RETURNL	

EXPOSURE

- When the SETUP menu screen is displayed, select <EXPOSURE> by using the Function Setup switch so that the arrow indicates <EXPOSURE>.
- Select a desired mode using the Function Setup switch.
- **BRIGHTNESS** : Adjust the screen brightness.

- **SHUTTER** : You can select the shutter.

- --- : 1/30sec

- **A.FLK** : Select this when you experience picture flicker, this happen when there is a clash with the installed lighting frequency.
- **ESC** : Select this to control the shutter speed automatically. If ESC is selected, the shutter speed is automatically controlled depending on the ambient illumination of the subject.

- **MANUAL** : You can control shutter speed manually (1/30sec ~ 1/12,000sec)



- When you use a DC lens, set the shutter mode to --- if color rolling occurs.
- Carefully position the camera when installing, since produced image quality might be poor if framing a bright light source while the shutter mode of EXPOSURE is set to AUTO.
- When the SHUTTER is set to MANUAL or A.FLK mode, SENS-UP will be disabled.

MAIN SETUP	
1. LENS	DC
► 2. EXPOSURE	ATW
3. WHITE BAL	ON
4. SSDR	OFF
5. BACKLIGHT	ON
6. SSNR3	AUTO
7. DAY/NIGHT	
8. SPECIAL	
9. EXIT	

EXPOSURE SETUP	
1. BRIGHTNESS	* 50
► 2. SHUTTER	A.FLK
3. AGC	HIGH
4. SENS-UP	ON
5. RETURN	

Operating Your Camera

- **AGC(AUTO GAIN CONTROL)** : The higher the gain level, the brighter the screen - but the greater the noise.
 - OFF : Not being used
 - Low : Allows automatic gain control from 5.3dB to 20dB.
 - Medium : Allows automatic gain control from 5.3dB to 26dB.
 - High : Allows automatic gain control from 5.3dB to 32dB.
- **SENS-UP** : When it is night or dark, the camera automatically detects the light level and maintains a clear picture if this mode is activated.
 - OFF : Deactivates the SENS-UP function.
 - AUTO : Activates the SENS-UP function.
- **RETURN** : Select this to save the changes in the EXPOSURE menu and return to the SETUP menu.



- Press the SET button while in AUTO mode to adjust the automatic scene accumulation multiplier for low-illumination operation. (x2 ~ x60)
- The greater the video accumulation factor is, the brighter the screen is but the afterimage of a moving object grows accordingly.
- Although noise, spots, and whitish symptoms may occur in higher accumulation, this is normal.
- If the gain control (AGC) of EXPOSURE mode is set to OFF, SENS-UP mode is accordingly set to '---'.

WHITE BAL (WHITE BALANCE)

Use the White Balance function to adjust the screen color.

1. When the SETUP menu screen is displayed, select <**WHITE BAL**>. by using the Function Setup switch so that the arrow indicates <**WHITE BAL**>.
2. Select a desired mode using the Function Setup switch.

Select one of the following 5 modes, as appropriate for your purpose.

- **ATW** : Select this when the color temperature is between 2,400°K and 11,000°K.
- **OUTDOOR** : Select this when the color temperature is between 1,700°K and 11,000°K. (sodium light inclusion)
- **INDOOR** : Select this when the color temperature is between 4,500°K and 8,500°K.
- **MANUAL** : Select this to fine-tune White Balance manually. Set White Balance first by using the ATW or AWC mode. After that switch to MANUAL mode, fine-tune the White Balance and the Function Setup switch.
- **AWC → SET** : To find the optimal luminance level for the current environment, point the camera towards a sheet of white paper and press the Function Setup switch. If the environment changes, readjust it.



- White Balance may not work properly under the following conditions. In this case select the AWC mode.
 - When the ambient illumination of the subject is dim.
 - If the camera is directed towards a fluorescent light or is installed in a place where illumination changes dramatically, the White Balance operation may become unstable.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	ATW
▶ 3. WHITE BAL	ON
4. SSDR	OFF
5. BACKLIGHT	ON
6. SSNR3	AUTO
7. DAY/NIGHT	
8. SPECIAL	
9. EXIT	

WB MANUAL		
▶ 1. RED GAIN *	552
2. BLUE GAIN *	560
3. RETURN		

Operating Your Camera

SSDR (SAMSUNG SUPER DYNAMIC RANGE)


SSDR illuminates darker areas of an image while retaining the same light level for brighter areas to even out the overall brightness of images with high contrast between bright and dark areas.

1. When the SETUP menu screen is displayed, select <SSDR> by using the Function Setup switch so that the arrow indicates <SSDR>.
2. Use the Function Setup switch to change the SSDR level in the sub menu according to the contrast between bright and dark areas.


MAIN SETUP	
1. LENS	DC 
2. EXPOSURE 	ATW
3. WHITE BAL	ON 
► 4. SSDR	OFF
5. BACKLIGHT	ON 
6. SSNR3	AUTO 
7. DAY/NIGHT	
8. SPECIAL 	
9. EXIT	

- **LEVEL** : Adjust the dynamic range level.
- **D-RANGE** : Select the amplitude area of the dynamic range.

SSDR SETUP	
► 1. LEVEL * 8
2. D-RANGE	
3. RETURN 	NARROW

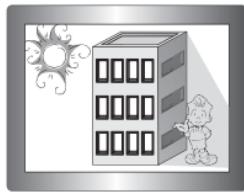

SSDR ON

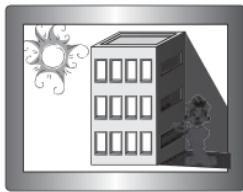

SSDR OFF

BACKLIGHT

This camera is designed so that it delivers a distinctive subject and background at the same time, even when the subject is in backlight, by adopting a function of the proprietary WN2 DSP chip.

- When the SETUP menu screen is displayed, select <BACKLIGHT> by using the Function Setup switch so that the arrow indicates <BACKLIGHT>.
- Select a desired mode using the Function Setup switch depending on the camera purpose.
 - BLC** : Enables a user to select a desired area on a picture and view that area more clearly.
 - LEVEL : Adjust level of the BLC function.
 - TOP/BOTTOM/LEFT/RIGHT : Adjust the area to be enhanced.
 - HLC (High Light Compensation)** : If the scene contains extremely bright light areas such as; from car headlight, the light can mask out much of the on-screen detail.
 - LEVEL : Adjust level of the HLC function.
 - MASK COLOR/TONE : Change the color / brightness of the masking area. (Black, Red, Blue, Cyan, Magenta)
 - TOP/BOTTOM/LEFT/RIGHT : Adjust the area to be enhanced.
 - OFF** : Not being used
- Select a desired mode using the Function Setup switch.

MAIN SETUP	
1. LENS	DC ↕
2. EXPOSURE ↕	ATW
3. WHITE BAL	ON ↕
4. SSDR	OFF
▶ 5. BACKLIGHT	ON ↕
6. SSNR3	ON ↕
7. DAY/NIGHT	AUTO ↕
8. SPECIAL ↕	
9. EXIT	

BLC SETUP	
▶ 1. LEVEL	MIDDLE
2. TOP	30
3. BOTTOM	75
4. LEFT	30
5. RIGHT	75
6. RETURN ↕	

HLC SETUP	
▶ 1. LEVEL	MIDDLE
2. MASK TONE	5
3. TOP	30
4. BOTTOM	75
5. LEFT	30
6. RIGHT	75
7. RETURN ↕	



- Because there can be a difference in the effectiveness of HLC according to the amount of light area in the screen, optimize the installation angle for the best HLC performance.
- When dark, the HLC is only activated when a bright light exceeding a specific size. (In NIGHT ONLY mode).
- The HLC is not activated in day light or when bright light is not present at night. (In NIGHT ONLY mode).

Operating Your Camera

SSNR3

This function reduces the background noise in a low luminance environment.

1. When the SETUP menu screen is displayed, select <SSNR3> by using the Function Setup switch so that the arrow indicates <SSNR3>.
2. Select a desired mode using the Function Setup switch.
 - **ON** : Activates SSNR3 so that noise is reduced.
 - **OFF** : Deactivates SSNR3. Noise is not reduced.
3. Set the SSNR3 mode to <ON> and press the Function Setup switch. Then you can adjust the noise reduction level.



- You cannot set the SSNR3 to 'ON' or 'OFF' when the AGC mode of the 'EXPOSURE' menu is 'OFF'.
- When adjusting the noise reduction level in the SSNR3 mode, remember that the higher the level set, the more the noise level will be reduced, as will the brightness of the image.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	ATW
3. WHITE BAL	ON
4. SSDR	OFF
5. BACKLIGHT	ON
► 6. SSNR3	ON
7. DAY/NIGHT	AUTO
8. SPECIAL	
9. EXIT	

DAY/NIGHT

You can display pictures in color or in black and white.

1. When the SETUP menu screen is displayed, select <DAY/NIGHT> by using the Function Setup switch so that the arrow indicates <DAY/NIGHT>.
2. Select a desired mode using the Function Setup switch according to the picture display you want.
 - **COLOR** : The picture is always displayed in color.
 - **B/W** : The picture is always displayed in black and white.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	ATW
3. WHITE BAL	ON
4. SSDR	OFF
5. BACKLIGHT	ON
6. SSNR3	ON
► 7. DAY/NIGHT	AUTO
8. SPECIAL	
9. EXIT	

- **AUTO** : The mode is switched to <**COLOR**> in a normal environment, but switches to <**B/W**> mode when ambient illumination is low. To set up the switching time for AUTO mode, press the Function Setup switch.
 - **DWELL TIME** : You can select day/night switching delay time from.
→ 5s, 7s, 10s, 15s, 20s, 30s, 40s, 60s
 - **DURATION** : Adjust the brightness of the lighting where the mode switch occurs.
- **EXTERN** : Control the image modes of Color and B/W when an external controller is synchronized via the Alarm In port.



- When AGC in the EXPOSURE menu is 'OFF', '---' mode operates as selecting 'AUTO' mode cannot be selected.

SPECIAL

1. When the SETUP menu screen is displayed, select <**SPECIAL**> by using the Function Setup switch so that the arrow indicates <**SPECIAL**>.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	ATW
3. WHITE BAL	ON
4. SSDR	OFF
5. BACKLIGHT	ON
6. SSNR3	AUTO
7. DAY/NIGHT	
8. SPECIAL	
9. EXIT	

2. Select a desired mode using the Function Setup switch.

SPECIAL	
► 1. CAM TITLE	ON
2. IMAGE ADJ	ATW
3. MOTION DET	ON
4. PRIVACY	ON
5. COMM ADJ	ENGLISH
6. LANGUAGE	
7. RESET	
8. RETURN	

Operating Your Camera

- **CAM TITLE** : If you enter a title, the title will appear on the monitor.

- 1) If the SPECIAL menu screen is displayed, use the Function Setup switch so that the arrow indicates <**CAM TITLE**>.
- 2) Set it to <**ON**> by using the Function Setup switch.
- 3) Press the Function Setup switch.
- 4) Use the Function Setup switch to move to a desired letter and select the letter by pressing the Function Setup switch. Repeat this to enter multiple letters. You can enter up to 15 letters.
- 5) Enter a title, move the cursor to <**POS**> and press the Function Setup switch. The entered title appears on the screen. Select the position to display the title on the screen by using the Function Setup switch and press the Function Setup switch. When the position is determined, select <**END**> and press the Function Setup switch to return to the SPECIAL menu.

CAM TITLE SETUP

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
-	.	1	2	3	4	5	6	7	8	9		
←	→	CLR	POS	END								

ABCD

←→↑↓ to Locate, then SET



- When the CAM TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you enter one.
- Only English is available in this mode.
- If you move the cursor to CLR and press the Function Setup switch, all the letters are deleted. To edit a letter, change the cursor to the bottom left arrow and press the Function Setup switch. Move the cursor over the letter to be edited, move the cursor to the letter to be inserted and then press the Function Setup switch.

• **IMAGE ADJ :**

1) When the SPECIAL menu screen is displayed, select <IMAGE ADJ> by using the Function Setup switch so that the arrow indicates <IMAGE ADJ>.

SPECIAL	
1. CAM TITLE	ON 
2. IMAGE ADJ 	
3. MOTION DET	ATW
4. PRIVACY	ON 
5. COMM ADJ	ON 
6. LANGUAGE	ENGLISH
7. RESET	
8. RETURN 	

2) Select a desired mode using the Function Setup switch.

- **MONITOR** : Please change the settings value of video appropriate to your monitor.

- **LCD** : Please select this menu item when using an LCD monitor.
- **USER** : Please use this menu item when using a monitor other than standard ones. You can change the gamma, PED level and color gain in the sub menus.

IMAGE ADJ	
► 1. MONITOR	LCD 
2. H-REV	OFF
3. V-REV	OFF
4. D-ZOOM	OFF
5. SHARPNESS	ON 
6. FONT COLOR	WHITE
7. VIDEO FMT	CVBS-NTSC
8. VIDEO SIZE	1080p 30 
9. RETURN 	

- **V-REV** : You can flip the picture vertically on the screen.
- **H-REV** : You can flip the picture horizontally on the screen.
- **D-ZOOM** : You can use a digital zoom of x1 ~ x16.
- **SHARPNESS** : As you increase this value, the picture outline becomes stronger and clearer. Adjust this value appropriately depending on the sharpness of the picture.
- **FONT COLOR** : You can change the OSD font color. (White, Yellow, Green, Red, Blue)
- **VIDEO FORMAT** : Sets the video output format of the C-Video port on the camera provided for test and installation.
- **VIDEO SIZE** : Sets the image resolution of the HD-SDI output of the camera. Select the desired setting and press the SET button. (1080i 50, 1080p 30, 720p 50, 720p 60, 1080i 60)
- **RETURN** : Select this to save the settings for the IMAGE ADJ menu and to return to the SPECIAL menu.



- If you increase the sharpness level excessively, the image may be displayed abnormally or it can cause a noise.

Operating Your Camera

- **MOTION DET** : This product has a feature that allows you to observe movement of objects in 4 different areas on the screen, and the words <**MOTION DET**> appear on the screen when movement is detected.
You can monitor activity more efficient.
 - 1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates <**MOTION DET**>.

- 2) Set up the mode using the Function Setup switch.

- **AREA SEL** : You can specify up to 4 motion detection areas to your preference.
Select the desired type of motion detection area.
According to the selected area type, top/bottom/left/right coordinates change.
- **AREA** : Specify the use of the selected motion detection area.
If selected <**ON**>, the area is marked on the screen.
- **ALARM OUT** : Specify the use of output signal on motion detection.
- **UP/DOWN/LEFT/RIGHT** : Change the position of the selected area.
- **SENSITIVITY** : The lower the figure is, the higher the sensitivity is and the camera can track a slightest movement.
- **RETURN** : Save the motion detection settings and return to the OPERATION SETUP menu.



- Motion detection area is marked only in MOTION DET menu, and not displayed on the monitoring screen.

- **PRIVACY** : Mask an area you want to hide on the screen.

- 1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates <**PRIVACY**>.
- 2) Set up the mode using the Function Setup switch.
 - **AREA** : You can select up to 16 PRIVACY areas.
 - **MODE** : Determines whether to use the area selected in the AREA.
 - **MASK COLOR** : Determine area color. You can select Green, Red, Blue, Black, White, Gray.
 - **TOP/BOTTOM/LEFT/RIGHT** : Adjust the size and position of the selected area.
 - **RETURN** : Select this to save the PRIVACY menu settings and return to the SPECIAL menu.

MOTION DET	
► 1. AREA	AREA1
2. MODE	OFF
3. ALARM OUT	OFF
4. TOP	* 60
5. BOTTOM * 480
6. LEFT	* 60
7. RIGHT * 900
8. SENSITIVITY * 3
9. RETURN ↻	

PRIVACY AREA SETUP	
► 1. AREA	AREA1
2. AREA MODE	OFF
3. MASK COLOR	GRAY
4. TOP	* 80
5. BOTTOM * 180
6. LEFT	* 190
7. RIGHT * 290
8. RETURN ↻	

• COMM ADJ (Communication Adjustment) :

This function sets up the camera communication status when controlling the camera through an external control device.

- 1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates <COMM ADJ>.
- 2) Set up the mode using the Function Setup switch.

- **PROTOCOL** : Select the communication PROTOCOL. (SAMSUNG-T, SAMSUNG-E, Pelco-D, Pelco-P, Bosch, Honeywell, Vicon, Panasonic, GE, AD)
- **CAM ID** : Determines the camera's identification number (between 0 and 255).
- **BAUD RATE** : You can select 2400/4800/9600/19200/38400/57600 bps.
- **UART MODE** : You can select NONE, EVEN or ODD for the parity bits.
- **DISP ID** : Display camera title on top left corner of the screen.
- **RETURN DATA** : Specify whether to return the same command to the controlling device when a control command is delivered to the camera.
- **LANGUAGE** : You can select the menu language according to your requirements.
- **RESET** : Resets the camera settings to the factory defaults. Communication, Language, Video Format and Monitor settings are not initialized.
- **RETURN** : Select this to save the SPECIAL menu settings and return to the MAIN SETUP menu.

EXIT

Save the current settings and exit the MAIN SETUP menu.

COMM SETUP		
► 1. PROTOCOL	SAMSUNG-T	
2. CAM ID	*	1
3. BAUD RATE	9600	
4. UART MODE	8-N-1	
5. DISP ID	OFF	
6. RET PKT	ENABLE	
7. RETURN	¶	

appendix

SPECIFICATION

Items		Description
Video	Video	1/3" Progressive Scan CMOS
	Total Pixels	2,010(H) x 1,108(V), 2.2M Pixels
	Effective Pixels	1,944(H) x 1,092(V), 2.1M Pixels
	Scanning System	Progressiv Scan
	Min. Illumination	Color : 1Lux @ F1.2, 0.017 Lux (Sens-up, 60x) B/W : 0.1 Lux @ F1.2, 0.0017 Lux (Sens-up, 60x)
	S / N Ratio	50dB (AGC off, Weight on)
	Video Output	SMPTE292M (HD-SDI), Monotoring CVBS
Lens Type	Lens Type	DC Auto Iris Lens 3~8.5mm (2.8X) Motorized Vari-focal
	Mount Type	Board type
Operational	On Screen Display	Multi-language Support English, Korean, Japanese, Spanish, French, Portuguese, Chinese, German, Italian, Russian, Czech, Polish, Rumanian, Serbian, Swedish, Denish, Turkish, Thai, Taiwanese
	Camera Title	Off / On (Displayed 15 characters)
	Day &Night	Auto (ICR), Color, B/W , External
	Backlight Compensation	Off / User BLC / HLC
	Contrast Enhancement	SSDR (Off / On)
	Digital Noise Reduction	SSNR (Off / On)
	Motion Detection	Motion Detection(Off/On)


Items		Description
Operational	Privacy Masking	Off / On (16 Rect-angle zones)
	Sens-up (Frame Integration)	2x ~ 60x
	Gain Control	Off / Low / Middle / High
	White Balance	ATW / Outdoor / Indoor / Manual / AWC (1,700K° ~ 11,000K°)
	Electronic Shutter Speed	Esc / A.FLK / Manual / Fixed
	Digital Zoom	Off / On (1x ~ 16x)
	Reverse	Off / H-Rev / V-Rev / HV-Rev
	Communication	RS-485
	Protocol	RS-485 : SAMSUNG-T, SAMSUNG-E, Pelco-D, Pelco-P, Bosch, Honeywell, Vicon, Panasonic, GE, AD
Environmental	Operating Temperature / Humidity	0°C ~ +50°C / ~ 90% RH
Electrical	Input Voltage/Current	Dual (24VAC±10% & 12VDC±10%)
	Power Consumption	Max. 6W
Mechanica	Color / Material	Body : Ivory / Plastic
	Dimension (ØxH)	Ø133.0 x H129.4mm
	Weight	537g
HD-SDI Transmission Distance	5C2V (75ohm)	Max. 100~140m
	L-6CHD (75 ohm)	Max. 200m

- The maximum transferrable distance of HD-SDI video signal depends on the cable manufacturer or installation conditions.
- When a BNC cable adaptor is used to combine two or more BNC cables for distributed HD-SDI video transfer, make sure the impedance of the adaptor is 75Ω. Otherwise, the adaptor may cause shorter transfer distance or broken video transfer due to loss of transferred signal.

appendix

PRODUCT OVERVIEW

Unit : mm (inch)

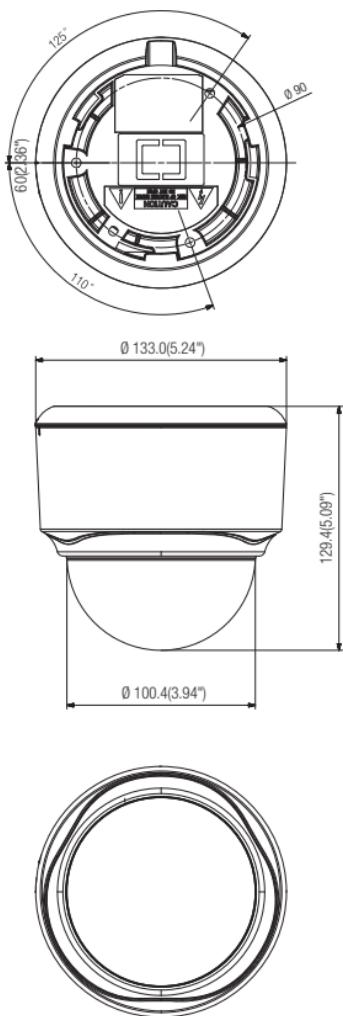

TROUBLESHOOTING

PROBLEM	SOLUTION
Nothing appears on the screen.	<ul style="list-style-type: none"> Check that the power cord and line connection between the camera and monitor are properly connected. When the camera's HD-SDI BNC output is directly connected to the monitor's BNC terminal: Make sure the monitor supports HD-SDI signal input. When the camera's HD-SDI BNC output is connected to the DVR: Make sure the DVR supports HD-SDI signal input. HD-SDI output is converted into other format such as DVI and VGA by using video converter: Make sure the converter's HD-SDI input format supports the product's output video format.
The image on the screen is dim.	<ul style="list-style-type: none"> Is lens stained with dirt? Clean your lens with soft, clean cloth. Set the monitor to the proper condition. If the camera is exposed to very strong light, change the camera position.
The image on the screen is dark.	<ul style="list-style-type: none"> Adjust the contrast feature of the monitor.
The camera is not working properly, and the surface of the camera is hot.	<ul style="list-style-type: none"> Check that you have properly connected the camera to an appropriate power source.
The SENS-UP function does not work.	<ul style="list-style-type: none"> Check that AGC of EXPOSURE SETUP menu is 'OFF'.
The Motion Detection function does not work.	<ul style="list-style-type: none"> Check that MOTION DET of SPECIAL SETUP menu is 'OFF'.
Color is not correct.	<ul style="list-style-type: none"> Check the setting of WHITE BAL SETUP menu .
The screen flickers continually.	<ul style="list-style-type: none"> Ensure the camera is not pointing towards the sun. Is the camera framing the sun or other bright light source? HD-SDI video may not appear to be normal if distance exceeds the maximum transferrable distance. When a BNC cable adaptor is used to combine two or more BNC cables for distributed HD-SDI video transfer, make sure the impedance of the adaptor is 75Ω. Otherwise, it may cause shorter transfer distance or broken video transfer.
RS-485 communication is not available.	<ul style="list-style-type: none"> Check RS-485 communication settings.



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Samsung Techwin cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products.

The Eco mark represents Samsung Techwin's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



SALES NETWORK

SAMSUNG TECHWIN CO., LTD.

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

SAMSUNG TECHWIN AMERICA Inc.

100 Challenger Rd. Suite 700 Ridgefield Park, NJ 07660
Toll Free : +1-877-213-1222 Direct : +1-201-325-6920
Fax : +1-201-373-0124
www.samsungctvusa.com

SAMSUNG TECHWIN EUROPE LTD.

Samsung House, 1000 Hillswood Drive, Hillswood Business Park Chertsey, Surrey, UNITED KINGDOM KT16 0PS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325