

## **Specification Chart:**

| Model # | Output       | Amp  | UL Listed | Dimensions (Fig. 1) |         |         |         |
|---------|--------------|------|-----------|---------------------|---------|---------|---------|
|         |              |      |           | A                   | В       | C       | D       |
| TP1220  | 12VAC/20VA   | 1.7  | X         | 1.8840"             | 2.5000" | 3.0000" | 3.3500" |
| TP1620  | 16.5VAC/20VA | 1.2  | X         | 1.8840"             | 2.5000" | 3.0000" | 3.3500" |
| TP1640  | 16.5VAC/40VA | 2.4  | X         | 2.3530"             | 2.6580" | 3.1860" | 3.5620" |
| TP1650  | 16.5VAC/50VA | 3.0  | X         | 2.3530"             | 2.6580" | 3.1860" | 3.5620" |
| TP2420  | 24VAC/20VA   | 0.8  | X         | 1.8840"             | 2.5000" | 3.0000" | 3.3500" |
| TP2440  | 24VAC/40VA   | 1.67 | X         | 2.3530"             | 2.6580" | 3.1860" | 3.5620" |
| TP2450  | 24VAC/50VA   | 2.0  | X         | 2.3530"             | 2.6580" | 3.1860" | 3.5620" |


## **Installation Instructions:**



- 1. Connect wires to plug-in transformer.
- 2. Measure output voltage before connecting devices. This helps avoid potential damage.
- 3. Plug in the transformer to an outlet and secure transformer with screw provided.

WARNING: This installation should be made by qualified service personnel and should conform to all local codes and in accordance with the National Electrical Codes.

## **Plug-in Transformer Diagram**

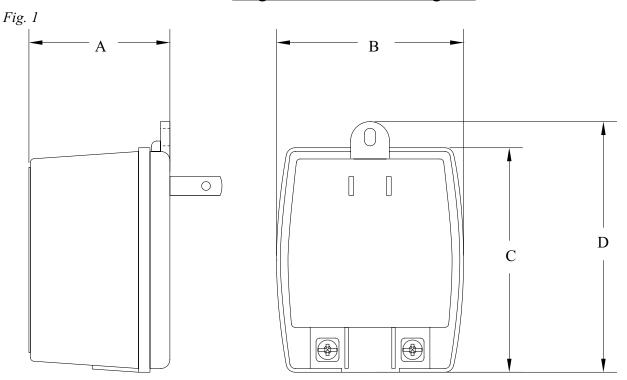

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

