

 
Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
(830)629-2900 / 1-800-729-3839 / Fax (830)620-6711
E-MAIL: detex@detex.com INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR ADVANTEX / VALUE SERIES RIM ES PRODUCT

ADVANTEX[®] & VALUE SERIES[®]

Rim ES - Electric Signal

Dwg #: 101379 Advantex (SS)
104600 Advantex (AL)
101800 Value Series

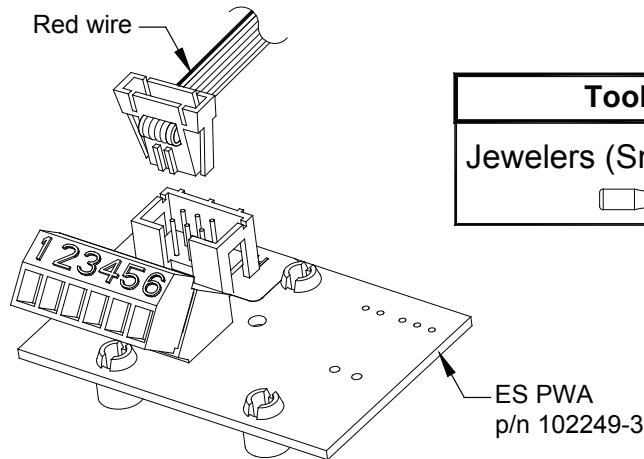


Tools Required

Jewelers (Small) Screwdriver



Advantex/Value Series product consists of two switches:

 - 1) PushPad/LBM (Latch Bolt Monitor) monitors the pushpad and the deadlocking actuator in the latchbolt. PushPad/LBM Switch *Normally Open held closed (Door Secure).
- 2) Authorized (Auth) Access Switch is activated by operating outside trim.

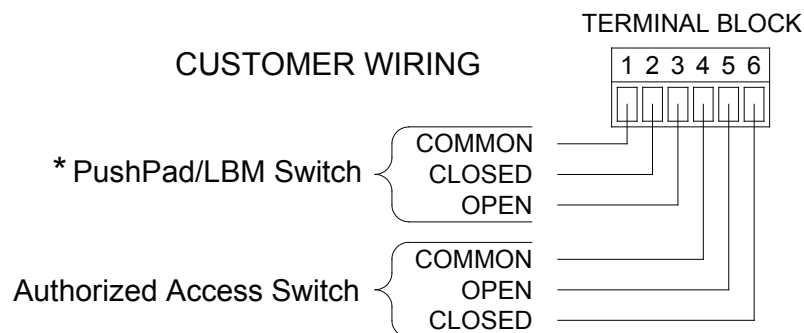

Theory of Operation:

- Door Closed - Deadlocking actuator activates PushPad/LBM Switch. Authorized Access Switch is not affected.
- Door Closed - Depressing the PushPad changes the state of the PushPad/LBM Switch. Authorized Access Switch is not affected.
- Door Closed - Authorized Access Switch is activated by operating outside trim. As the latchbolt begins to retract, the PushPad/LBM Switch is also activated.

Owner's Copy