



**SILENT  
KNIGHT**

by Honeywell

# **INTELLIKNIGHT<sup>®</sup> MODEL 5808**

**Addressable Fire Control Panel**



**Installation and  
Operations Manual**

Document 151274-L8

07/23/2013 Rev: T

P/N 151274-L8:T ECN 13-0482



---

## Installation Procedure

---

**Installation Precautions** - Adherence to the following will aid in problem-free installation with long-term reliability: **WARNING** - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until manuals are read and understood. **CAUTION** - System Re-acceptance Test after Software Changes: To ensure proper system operation, this product must be tested in accordance with NFPA 72 after any programming operation or change in site-specific software. Re-acceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring. All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified. This system meets NFPA requirements for operation within the range of 0°C-49°C (32°F-120°F) or humidity within the range of 10%-93% at 30°C (86°F) noncondensing. However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and its peripherals be installed in an environment with a normal room temperature of 15-27° C/60-80° F. **Verify that wire sizes are adequate** for all initiating and indicating device loops. Most devices cannot tolerate more than a 10% I.R. drop from the specified device voltage. **Like all solid state electronic devices**, this system may operate erratically or can be damaged when subjected to lightning induced transients. Although no system is completely immune from lightning transients and interference, proper grounding will reduce susceptibility. Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes. Consult with the Technical Services Department if any problems are anticipated or encountered. **Remove DC power** prior to removing or inserting circuit boards. Failure to do so can damage circuits. Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, or printed circuit board location. **Do not tighten screw terminals** more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal. Fire alarm control panels contain static-sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static suppressive packaging to protect electronic assemblies removed from the unit.

Follow the instructions in the installation, operating, and programming manuals.

These instructions must be followed to avoid damage to the control panel and associated equipment. FACP (Fire Alarm Control Panel) operation and reliability depend upon proper installation.

**Equipment used in the system** may not be technically compatible with the control. It is essential to use only equipment listed for service with your control panel.

**Telephone lines** needed to transmit alarm signals from a premise to a central monitoring station may be out of service or temporarily disabled. **The most common cause** of fire alarm malfunctions, however, is inadequate maintenance. All devices and system wiring should be tested and maintained by professional fire alarm installers following written procedures supplied with each device. System inspection and testing should be scheduled monthly or as required by national and/or local fire codes. Adequate written records of all inspections should be kept.

---



---

# Contents

---



---

## Section 1

### Introduction ..... 1-1

---

- 1.1 Overview of Basic System .....1-1
  - 1.1.1 Hardware Features .....1-1
  - 1.1.2 Software Features .....1-2
- 1.2 About this Manual .....1-2
  - 1.2.1 Terms Used in this Manual .....1-2
- 1.3 Compatible Products .....1-3
- 1.4 How to Contact Silent Knight .....1-4

## Section 2

### Agency Listings, Approvals, and Requirements ..... 2-1

---

- 2.1 Federal Communications Commission (FCC) .....2-1
- 2.2 Underwriters Laboratories (UL) .....2-3
  - 2.2.1 Requirements for All Installations .....2-3
  - 2.2.2 Requirements for Central Station Fire Alarm Systems .....2-4
  - 2.2.3 Requirements for Local Protected Fire Alarm Systems .....2-4
  - 2.2.4 Requirements for Remote Station Protected Fire Alarm Systems .....2-4
  - 2.2.5 Requirements for Auxiliary Protected Fire Alarm Systems for Fire Alarm Service .....2-4

## Section 3

### Before You Begin Installing ..... 3-1

---

- 3.1 What's in the Box? .....3-1
- 3.2 Environmental Specifications .....3-1
- 3.3 Electrical Specifications .....3-2
- 3.4 Wiring Specifications .....3-4
- 3.5 Board Assembly Diagram .....3-6
- 3.6 Calculating Current Draw and Standby Battery .....3-7
  - 3.6.1 Current Draw Worksheet Requirements .....3-7
    - 3.6.1.1 Current Draw Worksheet for SK SLC Devices .....3-8
    - 3.6.1.2 Current Draw Worksheet for SD SLC Devices .....3-11
    - 3.6.1.3 Maximum Battery Standby Load .....3-13
- 3.7 Installation Tasks Overview .....3-14

## Section 4

### Control Panel Installation ..... 4-1

---

- 4.1 Mounting the Control Panel Cabinet .....4-1
  - 4.1.1 Preventing Water Damage .....4-1
  - 4.1.2 Removing the 5808 Assembly from the Housing .....4-1
- 4.2 AC Connection .....4-2

- 4.3 Battery Connection .....4-3
  - 4.3.1 RBB Accessory Cabinet .....4-4
    - 4.3.1.1 Installing the RBB Accessory Cabinet and Batteries .....4-4
- 4.4 SBUS Wiring .....4-6
  - 4.4.1 Calculating Wiring distance for SBUS modules .....4-6
  - 4.4.2 Wiring Configurations .....4-9
- 4.5 5860 Remote Annunciator Installation .....4-10
  - 4.5.1 Mounting the 5860 .....4-11
    - 4.5.1.1 Flush Mounting .....4-12
    - 4.5.1.2 Surface Mounting .....4-14
  - 4.5.2 Connecting the 5860 to the Panel .....4-15
- 4.6 5824 Serial/Parallel Printer Interface Module Installation .....4-16
  - 4.6.1 Selecting 5824 Options .....4-18
- 4.7 5880 LED I/O Module .....4-19
  - 4.7.1 5880 Board Layout .....4-19
  - 4.7.2 FACP Connection .....4-20
  - 4.7.3 LED Wiring .....4-21
  - 4.7.4 Dry Contact Wiring .....4-22
- 4.8 5865-3 / 5865-4 LED Annunciator Installation .....4-23
  - 4.8.1 FACP Connection .....4-24
  - 4.8.2 5865 Mounting .....4-25
- 4.9 Configuring Modules .....4-27
  - 4.9.1 Assigning Module IDs .....4-27
- 4.10 Telephone Connection .....4-28
- 4.11 Notification Appliance/Auxiliary Power Circuits .....4-29
  - 4.11.1 Conventional Notification Appliance .....4-29
    - 4.11.1.1 Class B Notification Wiring .....4-29
    - 4.11.1.2 Class A Notification Wiring .....4-30
  - 4.11.2 Auxiliary Power Installation .....4-31
    - 4.11.2.1 Door Holder Power .....4-31
    - 4.11.2.2 Constant Power .....4-32
    - 4.11.2.3 Resettable Power .....4-32
    - 4.11.2.4 Sounder Sync Power .....4-32
- 4.12 On-Board Programmable Relays (Conventional) .....4-33
  - 4.12.1 Trouble Relay .....4-33
  - 4.12.2 Programmable Relays .....4-33
- 4.13 Remote Station Applications .....4-34
  - 4.13.1 Keltron Model 3158 Installation .....4-34
  - 4.13.2 City Box Connection Using the 5220 Module .....4-35
  - 4.13.3 NFPA 72 Polarity Reversal .....4-36
    - 4.13.3.1 Using the 5220 Module .....4-36
    - 4.13.3.2 Using the 7644 Module .....4-38
  - 4.13.4 Using the SD500-ARM Addressable Relay Module .....4-39
  - 4.13.5 Using a MR-201/T Control Relay From Air Products .....4-40
  - 4.13.6 Transmitter Activated by Dry Contacts .....4-41

## Section 5

### **SK and SD SLC Device Installation** ..... 5-1

- 5.1 List of SK SLC Devices .....5-1
- 5.2 List of SD SLC Devices .....5-2
- 5.3 Maximum Number of Devices .....5-3

|       |   |      |
|-------|---|------|
| 5.4   | Wiring Requirements for SLC Devices .....               | 5-3  |
| 5.4.1 | Wiring SLC in Style 4 (Class B) Configuration .....     | 5-3  |
| 5.4.2 | Wiring SLC in Style 6 & 7 (Class A) Configuration ..... | 5-5  |
| 5.5   | SK Detector Installation .....                          | 5-6  |
| 5.5.1 | Wiring SK detectors: .....                              | 5-6  |
| 5.6   | Addressing SK SLC Devices .....                         | 5-7  |
| 5.7   | SD Detector Installation .....                          | 5-8  |
| 5.7.1 | Wiring SD Detectors .....                               | 5-8  |
| 5.8   | Addressing SD Devices .....                             | 5-9  |
| 5.8.1 | SD505-APS, SD505-AHS, & SD505-AIS .....                 | 5-9  |
| 5.8.2 | SLC Devices with DIP Switches .....                     | 5-10 |

## Section 6

### Programming Overview ..... 6-1

---

|       |   |      |
|-------|---|------|
| 6.1   | JumpStart Autoprogramming .....                               | 6-1  |
| 6.1.1 | Input Points .....  | 6-2  |
| 6.1.2 | Output Points .....   | 6-2  |
| 6.1.3 | Running JumpStart .....                                       | 6-2  |
| 6.2   | Mapping Overview .....  | 6-4  |
| 6.2.1 | Input Point Mapping .....                                     | 6-5  |
| 6.2.2 | Output Circuit Mapping .....                                  | 6-6  |
| 6.2.3 | Zone Event Mapping .....                                      | 6-7  |
| 6.2.4 | Mapping LED Points .....                                      | 6-9  |
| 6.3   | Programming Using the 5660 Silent Knight Software Suite ..... | 6-10 |
| 6.4   | Programming Using an Annunciator .....                        | 6-10 |
| 6.4.1 | Entering / Exiting the Programming Menu .....                 | 6-10 |
| 6.4.2 | Moving through the Menus .....                                | 6-11 |
| 6.4.3 | Selecting Options and Entering Data .....                     | 6-11 |
| 6.4.4 | Editing Keys .....  | 6-12 |
| 6.5   | Programming Menu Quick Reference .....                        | 6-13 |

## Section 7

### Programming ..... 7-1

---

|         |                                       |      |
|---------|---------------------------------------|------|
| 7.1     | UL 864 Programming Requirements ..... | 7-1  |
| 7.2     | SLC Family .....                      | 7-2  |
| 7.3     | Modules .....                         | 7-2  |
| 7.3.1   | Edit Modules .....                    | 7-2  |
| 7.3.1.1 | Naming Modules .....                  | 7-2  |
| 7.3.1.2 | Module, Wiring Class .....            | 7-3  |
| 7.3.2   | Adding a Module .....                 | 7-3  |
| 7.3.3   | Deleting a Module .....               | 7-4  |
| 7.4     | Zone .....                            | 7-4  |
| 7.4.1   | Edit Zone .....                       | 7-4  |
| 7.4.1.1 | Edit Zone Name .....                  | 7-4  |
| 7.4.1.2 | Edit Zone Properties .....            | 7-5  |
| 7.4.1.3 | Zone Outputs .....                    | 7-7  |
| 7.4.1.4 | Cadence Patterns .....                | 7-10 |
| 7.4.1.5 | Zone Accessory Options .....          | 7-11 |
| 7.4.2   | Add Zone .....                        | 7-11 |

|          |  |      |
|----------|--|------|
| 7.4.3    | Delete Zone .....  | 7-11 |
| 7.4.4    | View Zone Points .....   | 7-12 |
| 7.5      | Group .....  | 7-12 |
| 7.5.1    | Edit Group .....   | 7-12 |
| 7.5.1.1  | Edit Group Name .....  | 7-13 |
| 7.5.1.2  | Edit Group Properties .....  | 7-13 |
| 7.5.2    | Add Group .....  | 7-15 |
| 7.5.3    | Delete Group .....   | 7-16 |
| 7.5.4    | View Group Points .....  | 7-16 |
| 7.5.5    | Edit Output Group Templates .....                                    | 7-16 |
| 7.6      | Point .....  | 7-17 |
| 7.6.1    | Point Programming for the SLC .....                                  | 7-18 |
| 7.6.2    | Point Programming For Internal or External Power Module (5496) ..... | 7-22 |
| 7.6.3    | Point Programming For 5880 and 5865 Modules .....                    | 7-24 |
| 7.6.3.1  | Assigning a Name to a Point .....                                    | 7-25 |
| 7.7      | System Options .....   | 7-26 |
| 7.7.1    | Reporting Account .....  | 7-26 |
| 7.7.1.1  | Edit Accounts .....  | 7-27 |
| 7.7.1.2  | Auto Test Time .....   | 7-29 |
| 7.7.2    | Phone Lines .....  | 7-30 |
| 7.7.2.1  | Dialing Prefix .....   | 7-30 |
| 7.7.2.2  | Number of Answer Rings .....   | 7-31 |
| 7.7.2.3  | Dial Option (TouchTone or Pulse) .....                               | 7-31 |
| 7.7.2.4  | Rotary Format .....  | 7-31 |
| 7.7.2.5  | Line Monitor .....   | 7-31 |
| 7.7.2.6  | Answering Machine Bypass .....                                       | 7-32 |
| 7.7.3    | Sys. Event Outputs .....   | 7-32 |
| 7.7.3.1  | Trouble Events .....   | 7-33 |
| 7.7.3.2  | System Alarm Cadence .....   | 7-34 |
| 7.7.4    | Miscellaneous Options 1 .....  | 7-35 |
| 7.7.4.1  | Water Flow Delay .....   | 7-35 |
| 7.7.4.2  | Low AC Report Delay .....  | 7-36 |
| 7.7.4.3  | Automatic Daylight Saving Time Adjustment .....                      | 7-36 |
| 7.7.4.4  | Clock Display Format (AM/PM or Military) .....                       | 7-36 |
| 7.7.4.5  | Change AC Line Frequency .....                                       | 7-36 |
| 7.7.5    | Miscellaneous Options 2 .....  | 7-37 |
| 7.7.5.1  | Synchronize Strobes Active During Silence .....                      | 7-37 |
| 7.7.5.2  | Auto Display Oldest Event .....                                      | 7-37 |
| 7.7.5.3  | Report by Zone or by Point .....                                     | 7-38 |
| 7.7.5.4  | Single Key Acknowledge .....   | 7-38 |
| 7.7.6    | Miscellaneous Options 3 .....  | 7-38 |
| 7.7.6.1  | Alarm Verification Time .....  | 7-38 |
| 7.7.6.2  | Plex Door Option .....   | 7-38 |
| 7.7.6.3  | Daylight Saving Time Start and End .....                             | 7-39 |
| 7.7.7    | Edit Banner Message .....  | 7-40 |
| 7.8      | JumpStart Autoprogramming .....                                      | 7-41 |
| 7.9      | Computer Account .....   | 7-41 |
| 7.10     | Access Codes .....   | 7-42 |
| 7.10.1   | Profile Edit Menu .....  | 7-44 |
| 7.10.1.1 | Edit Name .....  | 7-44 |
| 7.10.1.2 | Edit Access Code .....   | 7-44 |
| 7.10.1.3 | Panel Functions .....  | 7-44 |



## Section 8 System Operation ..... 8-1

---

|        |  |      |
|--------|--|------|
| 8.1    | Default User and Installer Codes .....     | 8-1  |
| 8.2    | Annunciator Description .....              | 8-1  |
| 8.2.1  | LCD Displays .....                         | 8-2  |
| 8.2.2  | Banner .....                               | 8-2  |
| 8.3    | Key Operation .....                        | 8-2  |
| 8.4    | Menu System .....                          | 8-3  |
| 8.4.1  | Main Menu Overview .....                   | 8-3  |
| 8.4.2  | Using the Menus .....                      | 8-4  |
| 8.5    | Basic Operation .....                      | 8-4  |
| 8.5.1  | Setting Time and Date .....                | 8-4  |
| 8.5.2  | Disable / Enable NACs by Group .....       | 8-4  |
| 8.5.3  | Disable / Enable a Template .....          | 8-4  |
| 8.5.4  | Disable / Enable a Zone .....              | 8-5  |
| 8.5.5  | Disable / Enable a Point .....             | 8-5  |
| 8.5.6  | View Event History .....                   | 8-5  |
| 8.5.7  | Clear Event History .....                  | 8-5  |
| 8.5.8  | Conduct a Fire Drill .....                 | 8-5  |
| 8.5.9  | Conduct an Indicator Test .....            | 8-6  |
| 8.5.10 | Conduct a Walk Test .....                  | 8-6  |
| 8.5.11 | Conduct a Dialer Test .....                | 8-7  |
| 8.5.12 | Silence alarms or troubles .....           | 8-7  |
| 8.5.13 | Reset alarms .....                         | 8-7  |
| 8.5.14 | Check Detector Through Point Status .....  | 8-7  |
| 8.5.15 | View Status of a Point .....               | 8-9  |
| 8.5.16 | View Alarms or Troubles .....              | 8-9  |
| 8.5.17 | View System Information .....              | 8-9  |
| 8.5.18 | Reset dialer .....                         | 8-9  |
| 8.5.19 | Communicating with a Remote Computer ..... | 8-9  |
| 8.5.20 | Working with a Printer .....               | 8-11 |
| 8.6    | Operation Mode Behavior .....              | 8-12 |
| 8.7    | Releasing Operations .....                 | 8-17 |
| 8.7.1  | Single Interlock Zone Releasing .....      | 8-18 |
| 8.7.2  | Double Interlock Zone Releasing .....      | 8-19 |
| 8.8    | Smoke Alarm Verification .....             | 8-20 |

## Section 9 Reporting ..... 9-1

---

|     |   |     |
|-----|---|-----|
| 9.1 | Receivers Compatible with the Control Panel ..... | 9-1 |
| 9.2 | Reporting Formats Dialer Outputs .....            | 9-1 |

## Section 10 Testing and Troubleshooting ..... 10-1

---

|        |                       |      |
|--------|-----------------------|------|
| 10.1   | Troubleshooting ..... | 10-1 |
| 10.2   | Common Problems ..... | 10-1 |
| 10.2.1 | Event History .....   | 10-2 |

10.3 Built-in Troubleshooting and Testing Tools .....10-3  
    10.3.1 SLC Device Locator .....10-3  
    10.3.2 SLC Multi Locator .....10-4  
    10.3.3 I/O Point Control .....10-5  
10.4 Impedances that Cause Earth Ground Faults .....10-6

**Section 11**

**Installation Records** ..... 11-1

---

11.1 SLC Device Point Record .....11-1

**Appendix A**

**Compatible Devices** ..... A-1

---

**Appendix B**

**Special Characters Lists** .....B-1

---

**Silent Knight Fire Product Warranty and Return Policy**

**Manufacturer Warranties and Limitation of Liability**

**Model 5808 Basic Operating Instructions**

---

# Section 1

## Introduction

---

---

The 5808 Fire Alarm Control / Communicator is an addressable fire control system that meets the requirements of UL 864.

### 1.1 Overview of Basic System

---

The 5808 base system is an addressable system with a built-in annunciator that can also be used to program the system.

#### 1.1.1 Hardware Features

- The 5808 has one signaling line circuit (SLC) that supports 99 SK detectors and 99 SK modules or 127 SD protocol devices.
- 6.0A of output power is available through 4 sets of terminals for notification appliance circuits or auxiliary applications. Each circuit is power limited per UL 864 and can source up to 3.0A (total output power for all 4 circuits must not exceed 6.0A).
- Built-in dual phone line, digital alarm communicator/transmitter (DACT).
- Reports events to central station by point or by zone.
- UL Listed for pre-action and deluge releasing systems.
- Two general purpose Form C programmable relays.
- One Form C Trouble Relay.
- Basic system operation can be performed using a key or a user code.
- Can be used with up to 8 Model 5860 Remote Annunciators (sold separately).
- Can be used with Model 5865-3, 5865-4, and 5880 in any combination for a total of eight devices on one control panel. See Sections 4.7 and 4.8 for additional information on these models.
- Printing of detector status, event history, and real time event log available through the Model 5824 serial/parallel printer interface module (sold separately).
- 125 software zones, 125 output groups.
- Add four notification/auxiliary power circuits with each 5496 Intelligent Power Module (up to 8 per system).

## 1.1.2 Software Features

- Advanced smoke detector features:
  - Automatic drift compensation
  - Maintenance alert region
  - Point status meets calibrated smoke test requirements for NFPA 72
- “JumpStart” feature for easy programming
- Non-volatile event history stores 1000 events
- A choice of output patterns available for notification outputs, including ANSI 3.41 temporal signal
- Built-in synchronization appliance support for AMSECO, Faraday, Gentex<sup>®</sup>, System Sensor<sup>®</sup>, and Wheelock<sup>®</sup>.

## 1.2 About this Manual

---

This manual is intended to be a complete reference for all installation and operation tasks for the 5808. Please let us know if the manual does not meet your needs in any way. We value your feedback!

### 1.2.1 Terms Used in this Manual

The following terminology is used with the 5808 system:

**Table 1-1 Manual Terminology**

| Term                             | Description   |
|----------------------------------|---|
| SLC                              | Signaling Line Circuit  |
| Module                           | The term module is used for all hardware devices except for SLC addressable devices and notification appliances. This includes the 5808 panel itself.                           |
| Input Point                      | An addressable sensing device, such as a smoke or heat detector or a contact monitor device.  |
| Input Zone                       | A protected area made up of input points.   |
| Output Point (or Output Circuit) | A notification point or circuit for notification appliances. Relay circuits and auxiliary power circuits are also considered output points.                                     |
| Group (or “Output Group”)        | A group of output points. Operating characteristics are common to all output points in the group.   |
| Output (or “Cadence”) Pattern    | The pattern that the output will use, for example, Constant, March Code, ANSI 3.41. Applies to zones and special system events. See Section 7.7.3.2 for additional information. |
| Mapping                          | Mapping is the process of specifying which outputs are activated when certain events occur in the system. Section 6.2 explains mapping in detail.                               |

## 1.3 Compatible Products

The chart below lists the products available from Silent Knight for use with the 5808.

**Table 1-2 5808 Compatible Products**

| Type of Device             | Model   | Description  |   |
|----------------------------|---|--|---|
| SK Addressable SLC Devices | See Section 5.1 for a list of compatible devices. |  |   |
| SD Addressable SLC Devices | See Section 5.2 for a list of compatible devices. |  |   |
| Other Modules              | 5824 Serial/Parallel Printer Interface Module     | Allows a printer to be attached for the system for on-site event logging, detector status and event history reports. Two maximum per system.   |   |
|                            | 5496 Intelligent Power Module                     | Add 4 Notification/Auxiliary power circuits with each 5496 Intelligent Power Module (up to 8, 5496s per system).   | 5496s can be used in any combination, up to a total of eight devices on one panel.                    |
|                            | 5860 and 5860R Remote Fire Alarm Annunciator      | Same operation, similar appearance as on-board annunciator. Up to 8 5860s per system. 5860 is gray; 5860R is red.  |   |
|                            | 5860TG and 5860TR Trim Ring                       | Trim ring kits for surface mounting the 5860 annunciator. 5860TG is gray; 5860TR is red.   |   |
|                            | 5865-3 and 5865-4 LED Annunciator                 | LED annunciator can display up to 30 LEDs (15 red and 15 yellow). 5865-4 has key switches for silence and reset, and a system trouble LED.   | 5865-3, 5865-4, and 5880 can be used in any combination, up to a total of eight devices on one panel. |
|                            | 5880 LED I/O Module                               | Driver for up to 40 LEDs. Interfaces with customized annunciator boards. In addition the 5880 has eight generic switch input points.   |   |
|                            | 5883 General Purpose Relay Module                 | Provides 10 Form C relays. Designed to be driven by the 5880. Up to four, 5883s can be used with each 5880 module.   |   |
| Software                   | 5660 Silent Knight Software Suite (SKSS)          | Facility management software. For communication and panel programming with a Windows-based computer and *modem (not sold by Silent Knight, see Table 1-3 for compatible modems). Enables remote viewing of detector status and event history. For remote viewing of detector status and event history. Requires a modem (not sold by Silent Knight). |   |
|                            | 5670 Silent Knight Software Suite (SKSS)          |  |   |
| Misc.                      | 7860 Telephone Cord                               | RJ31X cord for connecting phone line to the IFP-100.   |   |
|                            | RBB   | Remote Battery Box for mounting backup batteries that are too large to fit into the main control panel cabinet. Dimensions: 16" W x 10" H x 6" D (40.64 cm W x 25.4 cm H x 15.24 cm D)   |   |

*Note: 5865-3, 5865-4, and 5880 can be used in any combination, up to a total of eight devices on one panel.*

The following modems have been tested by Silent Knight for compatibility with the 5808 and the Silent Knight Software Suite software packages:

**Table 1-3: Compatible Modems**

| <b>Manufacturer</b> | <b>Model</b>      |
|---------------------|-------------------|
| US Robotics         | 28.8              |
| Motorola            | LifeStyle         |
|                     | 28.8, 3400 series |
|                     | Premier 33.6      |
| MultiTech           | MT19321ZDX        |

## **1.4 How to Contact Silent Knight**

---

If you have a question or encounter a problem not covered in this manual, contact Silent Knight Technical Support at 800-446-6444.

To order parts, contact Silent Knight Sales at 800-328-0103.

## Limitations of Fire Alarm Systems

Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premise following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in Guide for the Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off or give early warning in as many as 35% of all fires. While fire alarm systems are designed to provide warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons. For example:

- Particles of combustion or smoke from a developing fire may not reach the sensing chambers of smoke detectors because:

Barriers such as closed or partially closed doors, walls, or chimneys may inhibit particle or smoke flow.

Smoke particles may become cold, stratify, and not reach the ceiling or upper walls where detectors are located.

Smoke particles may be blown away from detectors by air outlets

Smoke particles may be drawn into air returns before reaching the detector.

In general, smoke detectors on one level of a structure cannot be expected to sense fires developing on another level.

- The amount of smoke present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.
- Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.
- Smoke detectors are subject to false alarms and nuisance alarms and may have been disconnected by users. For example, a smoke detector located in or near a kitchen may go into nuisance alarm during normal operation of kitchen appliances. In addition, dusty or steamy environments may cause a smoke detector to falsely alarm. If the location of a smoke detector causes an abundance of false alarms or nuisance alarms, do not disconnect the smoke detector; call a professional to analyze the situation and recommend a solution.
- Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially within bedrooms), smoking in bed, violent explosions (caused by escaping gas, improper storage of flammable

materials, etc.).

- Heat detectors do not sense particles of combustion and are designed to alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Heat detectors are designed to protect property, not life.
- Warning devices (including horns, sirens, and bells) may not alert people or wake up sleepers who are located on the other side of closed or partially open doors. A warning device that activates on a different floor or level of a dwelling or structure is less likely to awaken or alert people. Even persons who are awake may not notice the warning if the alarm is muffled by noise from a stereo, radio, air conditioner or other appliance, or by passing traffic. Audible warning devices may not alert the hearing-impaired (strobes or other devices should be provided to warn these people). Any warning device may fail to alert people with a disability, deep sleepers, people who have recently used alcohol or drugs, or people on medication or sleeping pills.

Please note that:

- i) Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
  - ii) Studies have shown that certain people, even when they hear a fire alarm signal, do not respond or comprehend the meaning of the signal. It is the property owner's responsibility to conduct fire drills and other training exercises to make people aware of fire alarm signals and instruct on the proper reaction to alarm signals.
  - iii) In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.
- Telephone lines needed to transmit alarm signals from a premises to a central station may be out of service or temporarily out of service. For added protection against telephone line failure, backup radio transmission systems are recommended.
  - System components, though designed to last many years, can fail at any time. As a precautionary measure, it is recommended that smoke detectors be checked, maintained, and replaced per manufacturer's recommendations.
  - System components will not work without electrical power. If system batteries are not serviced or replaced regularly, they may not provide battery backup when AC power fails.
  - Environments with high air velocity or that are dusty or dirty require more frequent maintenance.

In general, fire alarm systems and devices will not work without power and will not function properly unless they are maintained and tested regularly.

While installing a fire alarm system may make the owner eligible for a lower insurance rate, an alarm system is not a substitute for insurance. Property owners should continue to act prudently in protecting the premises and the people in their premises and should properly insure life and property and buy sufficient amounts of liability



insurance to meet their needs.

**Requirements and recommendations for proper use of fire alarm systems including smoke detectors and other fire alarm devices:**

Early fire detection is best achieved by the installation and maintenance of fire detection equipment in all rooms and areas of the house or building in accordance with the requirements and recommendations of the current edition of the National Fire Protection Association Standard 72, *National Fire Alarm Code* (NFPA 72), the manufacturer's recommendations, State and local codes and the recommendations contained in Guide for the Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. For specific requirements, check with the local Authority Having Jurisdiction (ex. Fire Chief) for fire protection systems.

Requirements and Recommendations include:

- Smoke Detectors shall be installed in sleeping rooms in new construction and it is recommended that they shall also be installed in sleeping rooms in existing construction.
- It is recommended that more than one smoke detector shall be installed in a hallway if it is more than 30 feet long.
- It is recommended that there shall never be less than two smoke detectors per apartment or residence.
- It is recommended that smoke detectors be located in any room where an alarm control is located, or in any room where alarm control connections to an AC source or phone lines are made. If detectors are not so located, a fire within the room could prevent the control from reporting a fire.
- All fire alarm systems require notification devices, including sirens, bells, horns, and/or strobes. In residential applications, each automatic alarm initiating device when activated shall cause the operation of an alarm notification device that shall be clearly audible in all bedrooms over ambient or background noise levels (at least 15dB above noise) with all intervening doors closed.
- It is recommended that a smoke detector with an integral sounder (smoke alarm) be located in every bedroom and an additional notification device be located on each level of a residence.
- To keep your fire alarm system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations and UL and NFPA standards. At a minimum the requirements of Chapter 14 of NFPA 72, 2010 Edition shall be followed. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be performed annually by authorized personnel only.
- The most common cause of an alarm system not functioning when a fire occurs is inadequate maintenance. As such, the alarm system should be tested weekly to make sure all sensors and transmitters are working properly.



---

## Section 2

# Agency Listings, Approvals, and Requirements

---

---

### 2.1 Federal Communications Commission (FCC)

---

The following information must be provided to the telephone company before the 5808 can be connected to the phone lines:

|   |                           |                            |
|---|---------------------------|----------------------------|
| A | Manufacturer:             | Silent Knight by Honeywell |
| B | Model Number:             | 5808                       |
| C | FCC registration number:  | AC6 USA-34758-AL-E         |
|   | Ringer equivalence:       | 0.8B                       |
| D | Type of jack:             | RJ31X                      |
| E | Facility Interface Codes: | Loop Start: 02LS2          |
| F | Service Order Code:       | 9.0F                       |

This equipment complies with Part 68 of the FCC rules and the requirements adopted by ACTA. On the inside cover of this equipment is a label that contains, among other information, a product identifier. If requested, this information must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord (not provided) and modular jack must be utilized with this product. It is designed to be used with a modular jack that is also compliant.

The REN (ringer equivalence number) provided on this installation sheet is used to determine the number of devices that may be connected to the public switched telephone network. This number must not exceed 5.0. Since this product has an REN of .8, the number of devices is limited. The REN number is embedded in the FCC registration number as 0.8B.

If the 5808 causes harm to the telephone network, the telephone company will notify you in advance that the temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary

modifications to maintain uninterrupted service.

If trouble is experienced with the 5808, for repair or warranty information, please contact Silent Knight technical support at 800-446-6444 or [www.silentknight.com](http://www.silentknight.com). If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the 5808 until the problem has been resolved.

This product cannot be adjusted or repaired in the field. It must be returned to the factory for service.

This equipment is not designed for use with party line service. Connection to party line service is subject to state tariffs. You may contact the state public utility commission, public service commission or corporation commission for information.

Since the 5808 is a commercial fire alarm panel, it must be connected upstream of all other equipment utilizing the phone lines. If you have questions about the installation, contact your telephone company or a qualified installer.

**Warning**

This device has been verified to comply with FCC Rules Part 15. Operation is subject to the following conditions: (1) This device may not cause radio interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

## 2.2 Underwriters Laboratories (UL)

---

### 2.2.1 Requirements for All Installations

General requirements are described in this section. When installing an individual device, refer to the specific section of the manual for additional requirements. The following subsections list specific requirements for each type of installation (for example, Central Station Fire Alarm systems, Local Protected Fire Alarm systems, and so on). See Section 8.7 for information on releasing operation.

1. All field wiring must be installed in accordance with NFPA 70 National Electric Code.
2. Use the addressable smoke detectors specified in Section 5 of this manual and or conventional detectors listed in the compatibility chart. (See Appendix A.)
3. Use UL listed notification appliances compatible with the 5808 from those specified in the Appendix A at the back of this manual.
4. A full system checkout must be performed any time the panel is programmed.

#### **Restricted Options:**

- The loss of AC signal is defaulted to 3 hours however the system allows settings from 0 - 3 hours. For UL certified installations this number must be set from 1 to 3 hours.
- The system allows the use of non-latching spot type smoke detectors. This feature may not be used in commercial applications whereby a general alarm is sounded. It is intended for elevator recall, door holding applications, and hotel/motel room applications.
- The system allows the Alarm Verification time to be set from 1 to 255 seconds. For UL certified installations the setting must be a minimum of 60 seconds.
- Call forwarding shall not be used.
- When two count is used detector spacing shall be cut in half, you shall not use the alarm verification feature, and no delay shall be used.
- P.A.S feature shall be used only with automatic detectors.

## **2.2.2 Requirements for Central Station Fire Alarm Systems**

Minimum system requirements are one Silent Knight addressable initiating device.

1. Use both phone lines. Enable phone line monitors for both lines.
2. You must program a phone number and a test time so that the 5808 sends an automatic daily test to the central station.
3. The AC Loss Hours option must be set from 1-3 hours.
4. The Attempts to Report option must be set for 5.

## **2.2.3 Requirements for Local Protected Fire Alarm Systems**

At least one UL listed supervised notification appliance must be used. Minimum system requirements are one Silent Knight addressable initiating device.

## **2.2.4 Requirements for Remote Station Protected Fire Alarm Systems**

Minimum system requirements are one Silent Knight addressable initiating device and either a 5220, Keltron 3158 or the built-in Digital Alarm Communicator Transmitter (DACT).

1. Do not exceed the current load restrictions shown in Section 3.6.1.3.
2. The AC Loss Hours option must be set from 1-3 hours.

## **2.2.5 Requirements for Auxiliary Protected Fire Alarm Systems for Fire Alarm Service**

The Model 5220 Direct Connect module must be installed (see Section 4.13.3.1 for wiring).

---

## Section 3

# Before You Begin Installing

---

---

This section of the manual is intended to help you plan your tasks to facilitate a smooth installation. Please read this section thoroughly, especially if you are installing a 5808 panel for the first time.

### 3.1 What's in the Box?

---

The 5808 ships with the following hardware:

- A cabinet with all hardware assembled
- Two keys for the front door
- Two keys for user operation of the on-board annunciator (installer operations require the Installer's Code)
- Ten 4.7K ohm end-of-line resistors
- A battery cable for batteries wired in series

### 3.2 Environmental Specifications

---

It is important to protect the 5808 control panel from water. To prevent water damage, the following conditions should be FOLLOWED when installing the units:

- Mount indoors in dry locations only
- Do not mount directly on exterior walls, especially masonry walls (condensation)
- Do not mount directly on exterior walls below grade (condensation)
- Protect from plumbing leaks
- Protect from splash caused by sprinkler system inspection ports
- Do not mount in areas with humidity-generating equipment (such as dryers, production machinery)

When selecting a location to mount the 5808 control panel, the unit should be mounted where it will NOT be exposed to temperatures outside the range of 0°C-49°C (32°F-120°F) or humidity not exceeding 93% noncondensing.

### 3.3 Electrical Specifications

Table 3-1 list the terminal block on the 5808 as well as a description of the each individual terminal and their respective electrical rating.

**Table 3-1: Terminal Descriptions and Electrical Specifications**

| Terminal No.     | Label    |  | Description                                    | Rating                   |                          |
|------------------|----------|--|--|--------------------------|--------------------------|
|                  | Group    | Individual                                     |  | Voltage                  | Current                  |
| Terminal Block 1 | AC INPUT | B  | AC input (hot)                                 | 120 VAC, 60 Hz           | 3.6 A                    |
|                  |          | Earth  | Earth Ground                                   | N/A                      | N/A                      |
|                  |          | W  | AC input (neutral)                             | 120 VAC, 60 Hz           | 3.6 A                    |
| Terminal Block 2 | SLC IN   | -  | Used for Class A installations                 | 32 VDC                   | 150 mA                   |
|                  |          | +  |  |                          |                          |
|                  | SLC OUT  | -  | SLC terminals                                  | 32 VDC                   | 150 mA                   |
|                  |          | +  |  |                          |                          |
|                  | SLC PROG | -  | Used for programming SLC Detectors             | 32 VDC                   | 150 mA                   |
|                  |          | +  |  |                          |                          |
| Terminal Block 3 | TELCO 1  | RING   | Phone Line 1 Telco Ring                        | 24 VDC                   | 2.5 A, resistive         |
|                  |          | TIP  | Phone Line 1 Telco Tip                         |                          |                          |
|                  | PHONE 1  | RING   | Phone Line 1 Phone Ring                        |                          |                          |
|                  |          | TIP  | Phone Line 1 Phone Tip                         |                          |                          |
|                  | TELCO 2  | RING   | Phone Line 2 Telco Ring                        |                          |                          |
|                  |          | TIP  | Phone Line 2 Telco Tip                         |                          |                          |
| PHONE 2          | RING     | Phone Line 2 Phone Ring                        |  |                          |                          |
|                  | TIP      | Phone Line 2 Phone Tip                         |  |                          |                          |
| Terminal Block 4 | TROUBLE  | NC   | Normally closed relay contact                  | 24 VDC                   | 2.5 A, resistive         |
|                  |          | COM  | Common terminal                                |                          |                          |
|                  |          | NO   | Normally open relay contact                    |                          |                          |
|                  | RELAY 1  | NC   | Normally closed relay contact                  | 24 VDC                   | 2.5 A, resistive         |
|                  |          | COM  | Common terminal                                |                          |                          |
|                  |          | NO   | Normally open relay contact                    |                          |                          |
|                  | RELAY 2  | NC   | Normally closed relay contact                  | 24 VDC                   | 2.5 A, resistive         |
|                  |          | COM  | Common terminal                                |                          |                          |
|                  |          | NO   | Normally open relay contact                    |                          |                          |
|                  | NAC1*    | -  | Notification Appliance Circuit/Auxiliary power | 24 VDC                   | 3.0 Amp NAC or Aux power |
|                  |          | +  |  |                          |                          |
|                  | NAC2*    | -  | Notification Appliance Circuit/Auxiliary power | 24 VDC                   | 3.0 Amp NAC or Aux power |
|                  |          | +  |  |                          |                          |
|                  | NAC3*    | -  | Notification Appliance Circuit/Auxiliary power | 24 VDC                   | 3.0 Amp NAC or Aux power |
|                  |          | +  |  |                          |                          |
| NAC4*            | -        | Notification Appliance Circuit/Auxiliary power | 24 VDC   | 3.0 Amp NAC or Aux power |                          |
|                  | +        |  |  |                          |                          |



**Table 3-1: Terminal Descriptions and Electrical Specifications**

| Terminal No.     | Label   |                              | Description                  | Rating  |   |
|------------------|---------|------------------------------|------------------------------|---------|---|
|                  | Group   | Individual                   |                              | Voltage | Current                                   |
| Terminal Block 5 | SBUS    | B                            | SBUS Communication           | 5 VDC   | 100 mA                                    |
|                  |         | A                            |                              |         |   |
|                  |         | +                            | SBUS Power                   | 24 VDC  | 1.0 A                                     |
|                  | -       |                              |                              |         |   |
|                  | BATTERY | +                            | To Positive battery terminal | 24 VDC  | Up to 35 Ah (see Section 4.3 for details) |
| -                |         | To Negative battery terminal |                              |         |   |

\* Regulated/special application when used for releasing.

## 3.4 Wiring Specifications

---

Induced noise (transfer of electrical energy from one wire to another) can interfere with telephone communication or cause false alarms. To avoid induced noise, follow these guidelines:

- Isolate input wiring from high current output and power wiring. Do not pull one multi-conductor cable for the entire panel. Instead, separate the wiring as follows:

|                       |                     |
|-----------------------|---------------------|
| High voltage          | AC power Terminals  |
| SLC loops             |                     |
| Audio input/output    | Phone line circuits |
| Notification circuits | NAC1 through NAC4   |
| SBUS                  |                     |
| Relay circuits        |                     |

- Do not pull wires from different groups through the same conduit. If you must run them together, do so for as short a distance as possible or use shielded cable. Connect the shield to earth ground at the panel. You must route high and low voltages separately.
- Route the wiring around the inside perimeter of the cabinet. It should not cross the circuit board where it could induce noise into the sensitive microelectronics or pick up unwanted RF noise from the high speed circuits. See Figure 3-1 for an example.
- High frequency noise, such as that produced by the inductive reactance of a speaker or bell, can also be reduced by running the wire through ferrite shield

beads or by wrapping it around a ferrite toroid.

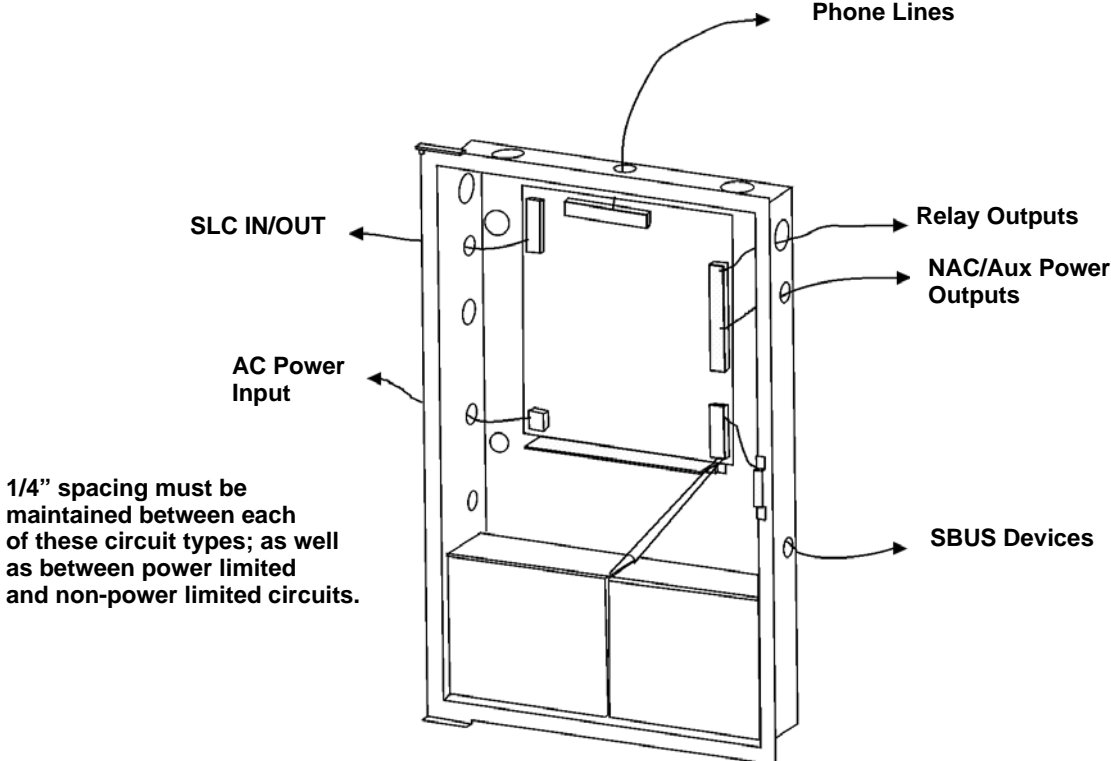


Figure 3-1 Wire Routing Example

## 3.5 Board Assembly Diagram

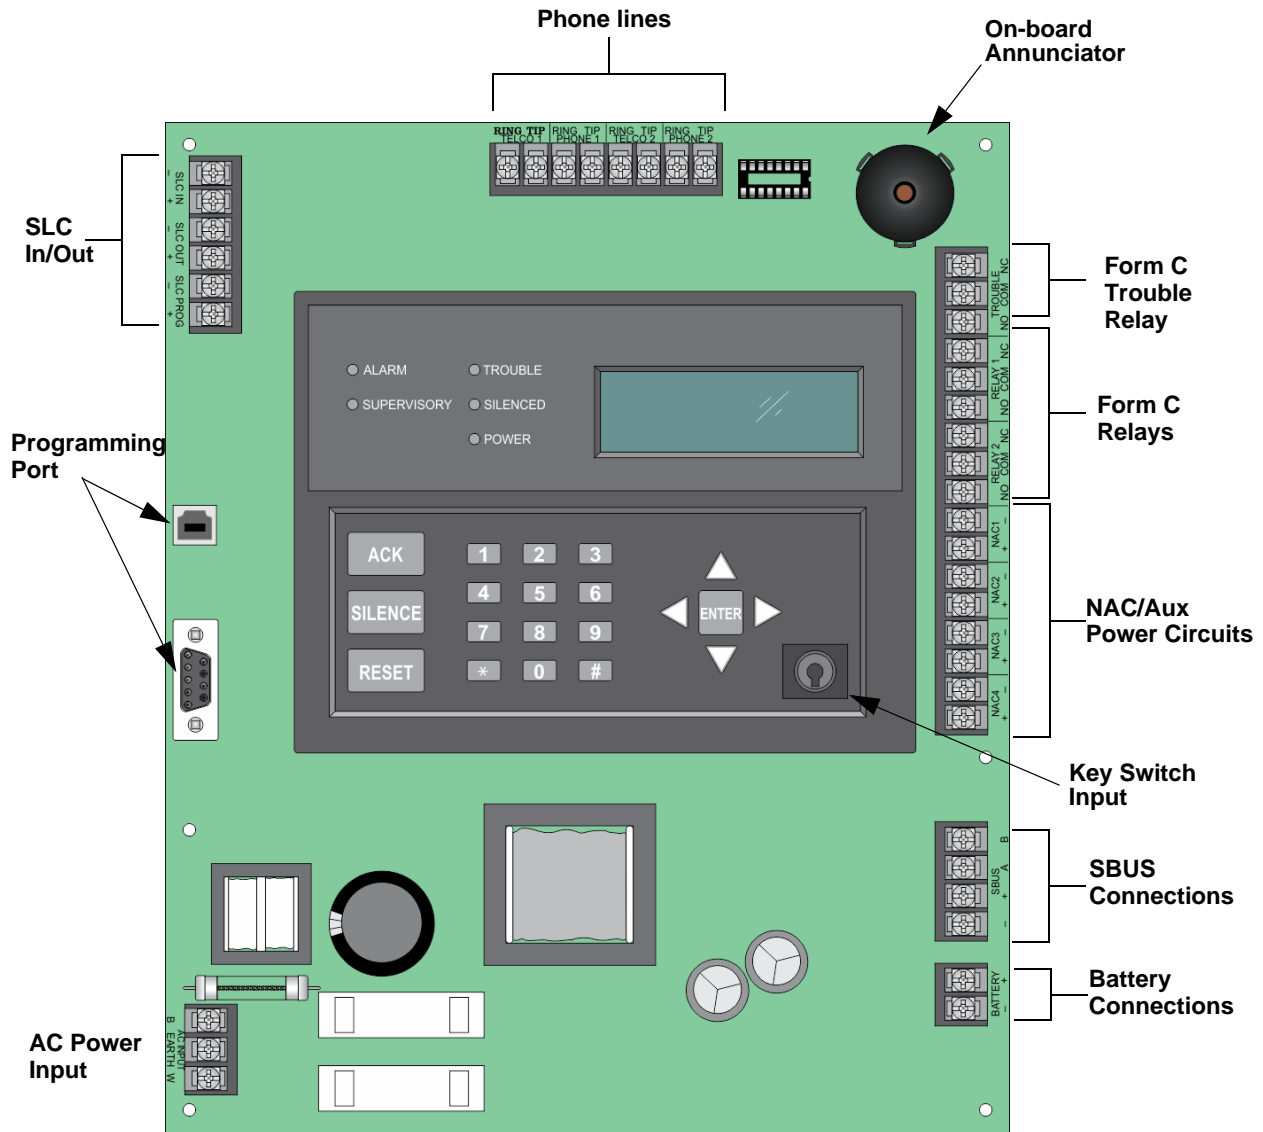


Figure 3-2 Model 5808 Assembly

Figure 3-2 shows the circuit boards and annunciator. If you should need to remove the control board for repair, remove the nine mounting screws (six on the circuit board and 3 on the heat-sink) which hold the control board in the cabinet. Then lift the control board out of the cabinet.

## 3.6 Calculating Current Draw and Standby Battery

---

This section is for helping you determine the current draw and standby battery needs if you are using SK addressable devices (Table 3-2) or SD addressable devices (Table 3-3).

### 3.6.1 Current Draw Worksheet Requirements

The following steps must be taken when determining 5808 current draw and standby battery requirements.

1. Use the Current Draw Worksheet to determine current draw and standby battery requirements. Use Table 3-2 if installing SK SLC Devices and Table 3-3 if installing SD SLC Devices to determine current draw. For the 5808, the worst case current draw is listed for the panel, addressable devices, and all SBUS expanders. Fill in the number of addressable devices that will be used in the system and compute the current draw requirements for alarm and standby. Record this information in the Current Draw Worksheet on Line A.
2. Add up the current draw for all auxiliary devices and record in the table at Line B.
3. Add up all notification appliance loads and record in the table at Line C.
4. For notification appliance circuits and auxiliary devices not mentioned in the manual, refer to the device manual for the current ratings.
5. Make sure that the total alarm current you calculated, including current for the panel itself, does not exceed 6.0 A. This is the maximum alarm current for the 5808 control panel.

If the current is above 6.0 A you will need to use a notification power expander(s) such as the Silent Knight 5496 intelligent power module, to distribute the power loads so that the 5808 or the power expanders do not exceed their power rating. Refer to the current draw worksheets provided with the 5496 manual so you do not exceed their power requirements.

6. Complete the remaining instructions in the appropriate Current Draw Worksheet for determining battery size requirements.

### 3.6.1.1 Current Draw Worksheet for SK SLC Devices

Use Table 3-2 to determine current requirements during alarm/battery standby operation when SK SLC devices are installed. You can install up to 99 SK detectors and 99 SK modules. (Copy the page if additional space is required.)

**Table 3-2: Current Draw Worksheet for SK Devices**

| Device   | Number of Devices      | Current per Device                 |        | Standby Current | Alarm Current  |      |    |  |
|--|------------------------|------------------------------------|--------|-----------------|----------------|------|----|--|
| For each device use this formula: This column X This column = Current per number of devices. |                        |                                    |        |                 |                |      |    |  |
| Fire Panel (Current draw from battery)   | 1                      | Standby:                           | 170 mA | 170 mA          |                |      |    |  |
|  |                        | Alarm:                             | 365 mA |                 | 365 mA         |      |    |  |
| Addressable SLC Detectors  |                        |                                    |        |                 |                |      |    |  |
| SK-Photo   | (99 max.) <sup>1</sup> | Standby/Alarm: .30 mA <sup>6</sup> |        | mA              | mA             |      |    |  |
| SK-Photo-T   |                        |                                    |        | mA              | mA             |      |    |  |
| SK-Ion   |                        |                                    |        | mA              | mA             |      |    |  |
| SK-Heat  |                        |                                    |        | mA              | mA             |      |    |  |
| SK-Heat-HT   |                        |                                    |        | mA              | mA             |      |    |  |
| SK-Duct (includes PhotoR) <sup>5</sup>   |                        |                                    |        |                 |                |      |    |  |
| SK-Acclimate   |                        |                                    |        | mA              | mA             |      |    |  |
| SK-Heat-ROR  |                        |                                    |        | mA              | mA             |      |    |  |
| SK-Beam (without integral test)  |                        |                                    |        | SLC             | Standby/Alarm: | 2 mA |    |  |
|  |                        |                                    |        | Aux. Pwr        | Standby:       | 2 mA | mA |  |
| Alarm:   | 8.5 mA                 |                                    | mA     |                 |                |      |    |  |
| SK-Beam-T (with integral test) <sup>4</sup>  | SLC                    | Standby/Alarm:                     | 2 mA   |                 |                |      |    |  |
|  | Aux. Pwr               | Standby:                           | 2 mA   | mA              |                |      |    |  |
| Alarm:   |                        | 8.5 mA                             |        | mA              |                |      |    |  |
| SK-FIRE-CO   | SLC                    | Standby:                           | .30 mA | mA              |                |      |    |  |
|  |                        | Alarm:                             | 7.2mA  |                 | mA             |      |    |  |

**Table 3-2: Current Draw Worksheet for SK Devices**

| Device                             | Number of Devices      | Current per Device      |                   | Standby Current | Alarm Current |
|------------------------------------|------------------------|-------------------------|-------------------|-----------------|---------------|
| Addressable SLC Devices            |                        |                         |                   |                 |               |
| SK-Monitor                         | (99 max.) <sup>1</sup> | Standby/Alarm: 0.375 mA |                   | mA              | mA            |
| SK-Minimon                         |                        |                         |                   | mA              | mA            |
| SK-Pull-SA/SK-Pull-DA              |                        |                         |                   | mA              | mA            |
| SK-Monitor-2                       |                        | Standby/Alarm: 0.75 mA  |                   | mA              | mA            |
| SK-Mon-10                          |                        | Standby/Alarm: 3.5 mA   |                   | mA              | mA            |
| SK-Control                         |                        | SLC                     | Standby: 0.375 mA | mA              |               |
|                                    |                        |                         | Alarm: 0.375 mA   |                 | mA            |
|                                    |                        | Aux. Power              | Standby: 1.7 mA   | mA              |               |
|                                    |                        |                         | Alarm: 7 mA       |                 | mA            |
| SK-Control-6                       |                        | SLC                     | Standby: 2.25 mA  | mA              |               |
|                                    |                        |                         | Alarm: 2.25 mA    |                 | mA            |
|                                    |                        | Aux. Pwr                | Standby: 8 mA     | mA              |               |
|                                    |                        |                         | Alarm: 20 mA      |                 | mA            |
| SK-Relay                           |                        | Standby/Alarm: 0.255 mA |                   | mA              | mA            |
| SK-Relay-6                         |                        | Standby/Alarm: 1.45 mA  |                   | mA              | mA            |
| SK-RelayMon-2                      |                        | Standby: 1.3 mA         |                   | mA              |               |
|                                    |                        | Alarm: 24 mA            |                   |                 | mA            |
| SK-Zone                            | Aux Pwr                | Standby: 12 mA          | mA                |                 |               |
|                                    |                        | Alarm: 90 mA            |                   | mA              |               |
|                                    | SLC                    | Standby/Alarm: 0.27 mA  |                   | mA              | mA            |
| SK-Zone-6                          | Aux Pwr                | Standby: 50 mA          | mA                |                 |               |
|                                    |                        | Alarm: 270 mA           |                   | mA              |               |
|                                    | SLC                    | Standby/Alarm: 2 mA     |                   | mA              | mA            |
| SLC Accessories                    |                        |                         |                   |                 |               |
| B200SR Sounder Base                | (99 max.)              | Aux Pwr                 | Standby: .5 mA    | mA              |               |
|                                    |                        |                         | Alarm: 35 mA      |                 | mA            |
|                                    |                        | SLC                     | Alarm: 0.7 mA     |                 |               |
| B200S Sounder Base                 | (99 max.)              | Aux Pwr                 | Standby: .5 mA    | mA              |               |
|                                    |                        |                         | Alarm: 35 mA      |                 | mA            |
|                                    |                        | SLC                     | Alarm: 0.7 mA     |                 |               |
| B224RB Relay Base                  | Standby/Alarm: 0.5 mA  |                         | mA                | mA              |               |
| RTS151/151 KEY                     | Alarm: 7.5 mA          |                         |                   | mA              |               |
| RA100Z                             | Alarm: 10 mA           |                         |                   | mA              |               |
| SLC Isolator Devices               |                        |                         |                   |                 |               |
| SK-ISO (Isolator Module)           | (100 max.)             | Standby/Alarm: .45 mA   |                   | mA              | mA            |
| B224BI Isolator Base               |                        | Standby/Alarm: 0.5 mA   |                   |                 |               |
| Accessories Modules                |                        |                         |                   |                 |               |
| 5860 Remote Fire Alarm Annunciator | (8 max)                | Standby: 20 mA          |                   | mA              |               |
|                                    |                        | Alarm: 25 mA            |                   |                 | mA            |
| 5824 Serial / Parallel Module      | (2 max.)               | Standby/Alarm: 45 mA    |                   | mA              | mA            |
| 5496 Notification Power Expander   | (8 max.)               | Standby/Alarm: 10 mA    |                   | mA              | mA            |

Table 3-2: Current Draw Worksheet for SK Devices

|   | Device   | Number of Devices                           | Current per Device              | Standby Current | Alarm Current |
|---|--|---|---------------------------------|-----------------|---------------|
|   | 5895XL Intelligent Power expander                                      | (8 max.)                                    | Standby/Alarm: 10 mA            | mA              | mA            |
|   | 5865-4 LED Annunciator (with reset and silence switches)               | (8 max.)                                    | Standby: 35 mA                  | mA              |               |
|   |  |   | Alarm: 145 mA                   |                 | mA            |
|   | 5865-3 LED Annunciator   |   | Standby: 35 mA                  | mA              |               |
|   |  |   | Alarm: 145 mA                   |                 | mA            |
|   | 5880 LED I/O Module  |   | Standby: 35 mA                  | mA              |               |
|   |  |   | Alarm: 200 mA                   |                 | mA            |
|   | 5883 Relay Interface   |   | Standby: 0 mA                   | mA              |               |
|   |  |   | Alarm: 220 mA (22 mA per relay) |                 | mA            |
| A | <b>Total System Current</b>  |   |                                 |                 |               |
|   | Auxiliary Devices <sup>2</sup>   | Refer to devices manual for current rating. |                                 |                 |               |
|   |  | Alarm/Standby:                              | mA                              | mA              | mA            |
|   |  | Alarm/Standby:                              | mA                              | mA              | mA            |
|   |  | Alarm/Standby:                              | mA                              | mA              | mA            |
|   |  | Alarm/Standby:                              | mA                              | mA              | mA            |
| B | <b>Auxiliary Devices Current</b>                                       |   |                                 |                 |               |
|   | Notification Appliance Circuits  | Refer to devices manual for current rating. |                                 |                 |               |
|   |  | Alarm:                                      | mA                              |                 | mA            |
|   |  | Alarm:                                      | mA                              |                 | mA            |
|   |  | Alarm:                                      | mA                              |                 | mA            |
|   |  | Alarm:                                      | mA                              |                 | mA            |
| C | <b>Notification Appliances Current</b>                                 |   |                                 |                 | mA            |
| D | Total current ratings of all devices in system (line A + line B + C)   |   |                                 | mA              | mA            |
| E | Total current ratings converted to amperes (line D x .001):            |   |                                 | A               | A             |
| F | Number of standby hours (24 or 60 for NFPA 72, chapter 1, 1-5.2.5):    |   |                                 | H               |               |
| G | Multiply lines E and F. <b>Total standby AH</b>                        |   |                                 | AH              |               |
| H | Alarm sounding period in hours. (For example, 5 minutes = .0833 hours) |   |                                 |                 | H             |
| I | Multiply lines E and H. <b>Total alarm AH</b>                          |   |                                 |                 | AH            |
| J | Add lines G and I. <sup>3</sup> <b>Total ampere hours required</b>     |   |                                 | AH              |               |

- Total does not include isolator devices or accessory bases.
- If using door holders, you do not need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 6.0A total current that can be drawn from the panel.
- Use next size battery with capacity greater than required.
- SK-Beam-T draws a maximum of 500mA from Auxiliary power only when the test feature is used. This should be considered when determining auxiliary power capacity but not calculated into current requirements for day to day operation.
- The SK-Duct housing contains a vacant mount for a SK-Relay (sold separately). Current draw for the SK-Relay is calculated by increasing the SK-Relay row of the calculation sheet by one for each SK-Relay used with a SK-Duct.
- The FACP can only support 5 devices w/LED's on. This current draw has been added to the panels alarm current.



### 3.6.1.2 Current Draw Worksheet for SD SLC Devices

Use Table 3-3 to determine current requirements during alarm/battery standby operation when SD SLC devices are installed. (Copy the page if additional space is required.)

**Table 3-3: Current Draw worksheet for SD Devices**

| Device   | Number of Devices       | Current per Device                          |                             | Standby Current | Alarm Current |
|--|-------------------------|---|-----------------------------|-----------------|---------------|
| For each device use this formula: This column X This column = Current per number of devices. |                         |   |                             |                 |               |
| 5808 Fire Panel (Current draw from battery)  | 1                       | Standby:                                    | 170 mA                      | 170 mA          |               |
|  |                         | Alarm:                                      | 365 mA                      |                 | 325 mA        |
| <b>Addressable SLC Devices</b>   |                         |   |                             |                 |               |
| SD500-AIM  | (127 max.) <sup>1</sup> | Standby/Alarm: .30 mA <sup>5</sup>          |                             |                 | mA            |
| SD500-MIM  |                         |   |                             |                 | mA            |
| SD500-ARM  |                         |   |                             |                 | mA            |
| SD500-PS   |                         |   |                             |                 | mA            |
| SD505-AHS  |                         |   |                             |                 | mA            |
| SD505-AIS  |                         |   |                             |                 | mA            |
| SD505-APS  |                         |   |                             |                 | mA            |
| SD500-ANM  | (127 max.) <sup>1</sup> | Aux. Pwr                                    | Standby: 8 mA               |                 | mA            |
|  |                         |   | Alarm: 60 mA                |                 | mA            |
|  |                         | SLC   | Standby/Alarm: 55 mA        |                 | mA            |
| SD500-LED  | (40 max.) <sup>1</sup>  | Aux. Pwr                                    | Standby: 10 mA              |                 | mA            |
|  |                         |   | Alarm: 220 mA               |                 | mA            |
|  |                         | SLC   | LED: 10 mA                  |                 | mA            |
|  |                         |   | Standby/Alarm: .55 mA       |                 | mA            |
| SD500-SDM  | (127 max.) <sup>1</sup> | SLC   | Standby/Alarm: .55 mA       |                 | mA            |
|  |                         | Aux. Pwr                                    | Standby: 20 mA              |                 | mA            |
|  |                         |   | Alarm: 106 mA               |                 | mA            |
| <b>SLC Accessory Bases</b>   |                         |   |                             |                 |               |
| SD505-6RB  | (127 max.)              | Standby/Alarm: .082 mA                      |                             |                 | mA            |
| SD505-6SB  | (127 max.)              | Aux. Pwr                                    | Standby: 1 mA               |                 | mA            |
|  |                         |   | Alarm: 32 mA                |                 | mA            |
| SD505-6SB  | (127 max.)              | SLC   | Standby/Alarm: .082 mA      |                 | mA            |
|  |                         | Aux. Pwr                                    | Standby: 20 mA <sup>2</sup> |                 | mA            |
|  |                         |   | Alarm: 62 mA <sup>2</sup>   |                 | mA            |
| SD505-DUCTR  | (127 max.)              | SLC   | Standby/Alarm: .5 mA        |                 | mA            |
| SD505-DTS-K  | (127 max.)              | None, included with SD505-DUCTR worst case. |                             |                 |               |
| SD505-DUCT   | (127 max.)              | SLC   | Standby/Alarm: .5 mA        |                 | mA            |
| <b>SLC Isolator Devices</b>  |                         |   |                             |                 |               |
| SD500-LIM  | (254 max.)              | Standby/Alarm: .092 mA                      |                             |                 | mA            |
| SD505-6IB  | (127 max.)              |   |                             |                 | mA            |
| <b>Accessories Modules</b>   |                         |   |                             |                 |               |
| 5860 Remote Fire Alarm Annunciator   | (8 max.)                | Standby:                                    | 20 mA                       |                 | mA            |
|  |                         | Alarm:                                      | 65 mA                       |                 | mA            |
| 5824 Serial/Parallel Printer Interface   | (2 max.)                | Standby/Alarm: 45 mA                        |                             |                 | mA            |

Table 3-3: Current Draw worksheet for SD Devices

|  | Device  | Number of Devices                           | Current per Device | Standby Current             | Alarm Current |    |
|--|---|---|--------------------|-----------------------------|---------------|----|
| A                                      | 5865-4 LED Annunciator<br>(with reset and silence switches)           | (8 max.)                                    | Standby:           | 35 mA                       | mA            |    |
|  |   |   | Alarm:             | 145 mA                      |               | mA |
|  | 5865-3 LED Annunciator  |   | Standby:           | 35 mA                       | mA            |    |
|  |   |   | Alarm:             | 145 mA                      |               | mA |
|  | 5880 LED I/O Module   |   | Standby:           | 35 mA                       | mA            |    |
|  |   |   | Alarm:             | 200 mA                      |               | mA |
|  | 5883 Relay Interface  | (32 max.)                                   | Standby:           | 0 mA                        | mA            |    |
|  |   |   | Alarm:             | 220 mA<br>(22 mA per relay) |               | mA |
|  | 5496 Notification Power Expander                                      | (8 max.)                                    | Standby/Alarm:     | 10 mA                       | mA            | mA |
|  | 5895XL Intelligent Power Expander                                     |   | Standby/Alarm:     | 10 mA                       | mA            | mA |
|  | 5865-4 LED Annunciator<br>(with reset and silence switches)           | (8 max.)                                    | Standby:           | 35 mA                       | mA            |    |
|  |   |   | Alarm:             | 145 mA                      |               | mA |
| <b>Total System Current</b>            |   |   |                    |                             |               |    |
| Auxiliary Devices <sup>3</sup>         |   | Refer to devices manual for current rating. |                    |                             |               |    |
|  |   | Alarm/Standby:                              | mA                 | mA                          | mA            |    |
|  |   | Alarm/Standby:                              | mA                 | mA                          | mA            |    |
|  |   | Alarm/Standby:                              | mA                 | mA                          | mA            |    |
| <b>Auxiliary Devices Current</b>       |   |   |                    |                             |               |    |
| Notification Appliance Circuits        |   | Refer to devices manual for current rating. |                    |                             |               |    |
|  |   | Alarm:                                      | mA                 |                             | mA            |    |
|  |   | Alarm:                                      | mA                 |                             | mA            |    |
|  |   | Alarm:                                      | mA                 |                             | mA            |    |
|  |   | Alarm:                                      | mA                 |                             | mA            |    |
| <b>Notification Appliances Current</b> |   |   |                    |                             | mA            |    |
| D                                      | Total current ratings of all devices in system (line A + line B + C)  |   |                    | mA                          | mA            |    |
| E                                      | Total current ratings converted to amperes (line D x .001):           |   |                    | A                           | A             |    |
| F                                      | Number of standby hours (24 or 60 for NFPA 72, chapter 1, 1-5.2.5):   |   |                    | H                           |               |    |
| G                                      | Multiply lines E and F. <b>Total standby AH</b>                       |   |                    | AH                          |               |    |
| H                                      | Alarm sounding period in hours. (For example, 5 minutes =.0833 hours) |   |                    |                             | H             |    |
| I                                      | Multiply lines E and H. <b>Total alarm AH</b>                         |   |                    |                             | AH            |    |
| J                                      | Add lines G and I. <sup>4</sup> <b>Total ampere hours required</b>    |   |                    | AH                          |               |    |

- Total does not include isolator devices or accessory bases.
- If using 24 VDC aux power only. No standby or alarm current for battery calculation if using 24 VAC, 120 VAC or 240 VAC.
- If using door holders, you do not need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 6.0A total current that can be drawn from the panel.
- Use next size battery with capacity greater than required.
- The FACP can only support 5 devices w/LED's on. This current draw has been added to the panels alarm current.

### 3.6.1.3 Maximum Battery Standby Load

The table below shows the maximum battery standby load for the 5808 based on 24 and 60 hours of standby. The standby load calculations of line D in the Current Draw Calculation Worksheet (Table 3-2 for SK devices and Table 3-3 for SD devices) must be less than the number shown in the Table 3-4 for the battery size used and standby hours required.

**Table 3-4: Maximum Battery Standby Load**

| Rechargeable Battery Size | Max. Load for 24 hrs. Standby, 5 mins. Alarm | *Max. Load for 60 hrs. Standby, 5 mins. Alarm |
|---------------------------|--|---|
| 7 AH                      | 221 mA                                       | 85 mA   |
| 12 AH                     | 475 mA                                       | 190 mA  |
| 18 AH                     | 685 mA                                       | 270 mA  |
| 35 AH                     | 1.1 A  | 450 mA  |

\* Required for NFPA 72 Auxiliary Protected Fire Alarm systems for Fire Alarm Service (City Box) and Remote Station Protected Fire Alarm systems (Polarity Reversal) and Digital Alarm Communicator/Transmitter (DACT).

|   |
|---|
| <b>Warning!</b>   |
| Silent Knight does not support the use of batteries smaller than those listed in table above. If you use a battery too small for the installation, the system could overload the battery resulting in the installation having less than the required 24 hours standby power. Use Table 3-4 to calculate the correct battery amperes/hour rating needed for your installation. |

## 3.7 Installation Tasks Overview

This section provides a chart listing tasks that need to be performed when installing the IntelliKnight 5808 system. The chart is intended to be a handy way for you to make sure you have completed all necessary tasks. Unless noted, these tasks do not have to be performed in the order they are listed here.

**Important:** Connect and address SLC devices before running JumpStart.

| Task   | See Sec.<br>(for more info.)                |
|--|---|
| <b>Main Panel Hardware Installation</b>  |   |
| Mount the control panel cabinet.   | 4.1   |
| Connect AC.  | 4.2   |
| Connect phone lines.   | 4.10  |
| Install 5860 Remote Fire Alarm Annunciator modules if used.  | 4.5   |
| Install 5865 or LED Annunciator modules if used.   | 4.8   |
| Install 5880 LED I/O module if customized LED annunciation will be used.   | 4.7   |
| Install notification appliances.   | 4.11  |
| Install auxiliary power devices (if used).   | 4.11.2                                      |
| If using a printer, install the 5824 Serial/Parallel Printer Interface Module.   | 4.6   |
| Connect batteries (typically last step).   | 4.3   |
| <b>SLC Device Hardware Installation</b><br><b>Perform these steps before running JumpStart.</b>  |   |
| Connect device bases to the loop.  | SK5.5<br>SD 5.7                             |
| Set device addresses.  | SK 5.6<br>SD 5.8                            |
| Physically connect detectors to their bases. Connect relay and contact monitor modules.  | 5.4 & see<br>device install<br>instructions |
| <b>JumpStart</b>   |   |
| JumpStart is for initial system programming. JumpStart automatically selects some options for SLC devices. See "Input Point Configuration" section of this chart for other options. JumpStart makes selections for the following options. You can customize options, if necessary. | 6.1 & 7.8                                   |
| Device type (detector or switch) configured by JumpStart.  | To change, see<br>7.6                       |
| Program type of detector (heat, photoelectric, or ionization) selected by JumpStart.   | To change, see<br>7.6                       |
| <b>System Software Configuration</b>   |   |
| Select low AC hours report time (6 hours by default).  | 7.7.4.2                                     |
| Select Auto Test Time (2:00 AM by default).  | 7.7.1.2                                     |
| Enable/disable automatic DST adjustment feature (enabled by default).  | 7.7.4.3                                     |
| Change clock display format (12-hour with AM/PM by default).   | 7.7.4.4                                     |
| Set up reporting accounts.   | 7.7.1                                       |
| Select options for phone lines.  | 7.7.2                                       |
| Select system-wide response to trouble conditions, if desired.   | 7.7.3                                       |

| Task  | See Sec.<br>(for more info.) |
|---|------------------------------|
| Select system-wide cadence patterns for special conditions (fire drill, Aux1 and Aux2 alarms) if desired.   | 7.7.3.2                      |
| Customize banner message (message that displays on LCD in normal mode) if desired.  | 7.7.7                        |
| <b>Input Point (SLC Device) Configuration</b>   |                              |
| JumpStart automatically selects some options for SLC devices (see “JumpStart” section of this chart). You can change options selected by JumpStart, if necessary and further customize input point options. |                              |
| Program type of switch (manual pull, fire drill, and so on), if necessary. (JumpStart assigns all switches as Manual Pull type.)  | 7.6                          |
| If the installation includes duct detectors, program detector type. (JumpStart does not distinguish duct detectors from ordinary smoke detectors.)  | 7.6                          |
| Assign a name (or description) to the point.  | 7.6.3.1                      |
| Assign input points to zones, if necessary. (JumpStart assigns all input points to Zone 1.)   | 7.6.3.1                      |
| <b>Zone Configuration</b>   |                              |
| Add the zone to the system if it does not already exist. (Zone 1 created by JumpStart.)   | 7.4.2                        |
| Program a name (or description) for the zone.   | 7.4.1.1                      |
| Select alarm delay options (detection characteristics) for zone.  | 7.4.1.1                      |
| Select heat detector trip temperature and. (JumpStart selects 150°F for heat detectors and.)  | 7.4.1.2                      |
| <b>Output Point Configuration</b>   |                              |
| Conventional notification circuits (circuits 1-6):  |                              |
| Enable circuits used for notification appliances through programming, if necessary. (JumpStart enables circuits 1-6 as Notification.)   | 7.5.1                        |
| Conventional relay circuits (circuits 7-8):   |                              |
| Select options for relay circuits, if desired. Note: Relay circuits will always output continuously (constant pattern), even if assigned to an Output Group that uses a different output pattern.           | 7.5.1                        |
| Auxiliary power circuits (circuits 1-6):  |                              |
| Enable any circuit used for auxiliary power devices through programming.  | 7.6                          |
| Select type of power (door holder, constant, or resettable)   | 7.6                          |
| Addressable relay modules   |                              |
| Assign addressable relay modules to output groups through programming. (JumpStart assigns all relay modules to Group 1.)  | 7.6                          |
| LED output points (from the 5880 LED I/O module or 5865/66 LED Annunciator)   |                              |
| Assign LED modules to output groups through programming.  | 7.6.3                        |
| All output circuits (1-8):  |                              |
| Disable (set to UNUSED) any unused circuits. If you do not disable unused output circuits, they will cause a trouble condition (unless an EOL resistor is used).  | 7.6                          |
| Select a name for the point, if desired.  | 7.6                          |
| <b>Output Group Configuration</b>   |                              |
| Add the group to the system if it does not already exist.   | 7.5.2                        |
| Assign output points to the group.  | 7.6                          |
| Program a name (or description) for the group, if desired.  | 7.5.1.1                      |

| Task   | See Sec.<br>(for more info.) |
|--|------------------------------|
| <b>Select "group properties" (see below).</b>                            |                              |
| Latching / non-latching  | 7.5.1.2                      |
| Silencing option   | 7.5.1                        |
| Select options for activation with system switches.                      | 7.5.1                        |
| Map zones to output groups that will activate when zone goes into alarm. | 7.4.1.3                      |
| Select a cadence pattern for outputs in the zone.                        | 7.4.1.4                      |

---

## Section 4

# Control Panel Installation

---

---

### Caution!

To avoid the risk of electrical shock and damage to the unit, power should be OFF at the control panel while installing or servicing.

## 4.1 Mounting the Control Panel Cabinet

---

Read the environmental specifications in Section 3.2 before mounting the 5808 panel.

The 5808 cabinet dimensions are:

16" W x 26.4" H x 3.5" D (40.64 cm W x 67.06 cm H x 8.89 cm D).

The 5808 panel should be located within a secured area, where it is accessible to main drop wiring runs and where it can be easily tested and serviced. End-users responsible for maintaining the panel should be able to hear alarms and troubles. When selecting a location, keep in mind that the panel itself is the main source of alarm and trouble annunciation.

When mounting on interior walls, use appropriate screw anchors in plaster. When mounting on concrete, especially when moisture is expected, attach a piece of 3/4 inch plywood to the concrete surface and then attach the 5808 to the plywood. Also mount any other desired components to the plywood.

DO NOT flush-mount the 5808 cabinet in a wall designated as a fire break.

### 4.1.1 Preventing Water Damage

Water damage to the fire system can be caused by moisture entering the cabinet through the conduits. Conduits that are installed to enter the top of the cabinet are most likely to cause water problems. Installers should take reasonable precautions to prevent water from entering the cabinet. Water damage is not covered under warranty.

### 4.1.2 Removing the 5808 Assembly from the Housing

If it should ever be necessary to remove the control panel assembly from the cabinet for repair, do so by removing the screws that hold the control panel in to the cabinet. Do not attempt to disassemble the circuit boards.

## 4.2 AC Connection

---

At installation, connect the AC terminals to the power source as shown in Figure 4-1. It may be necessary for a professional electrician to make this connection.

The AC terminals are rated at 120 VAC, 60 Hz, 3.6A.

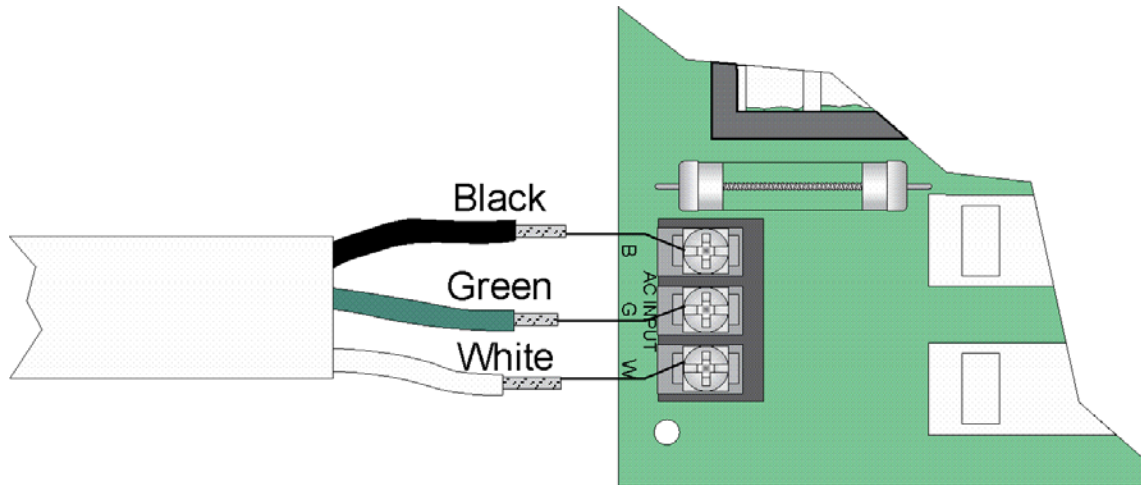


Figure 4-1 120VAC Power Connection



## 4.3 Battery Connection

The control panel battery charge capacity is 7.0 to 35 AH. The main control cabinet can house batteries up to 18 AH, larger capacity batteries can be housed in a RBB (see Section 4.3.1 for details). Use 12V batteries of the same AH rating. Determine the correct AH rating as per your current load calculation (see Section 3.6).

Wire batteries in series to produce a 24-volt equivalent. Do not parallel batteries to increase the AH rating.

The following steps and diagram explain how to connect the batteries.

1. Connect the black wire from the control panel negative (–) battery terminal to the negative (–) side of Battery #2.
2. Connect the jumper wire provided (P/N 140694) from the positive (+) side of Battery #2 to the negative (–) side of Battery #1.
3. Connect the red wire from the control panel positive (+) terminal to the positive (+) side of Battery #1.

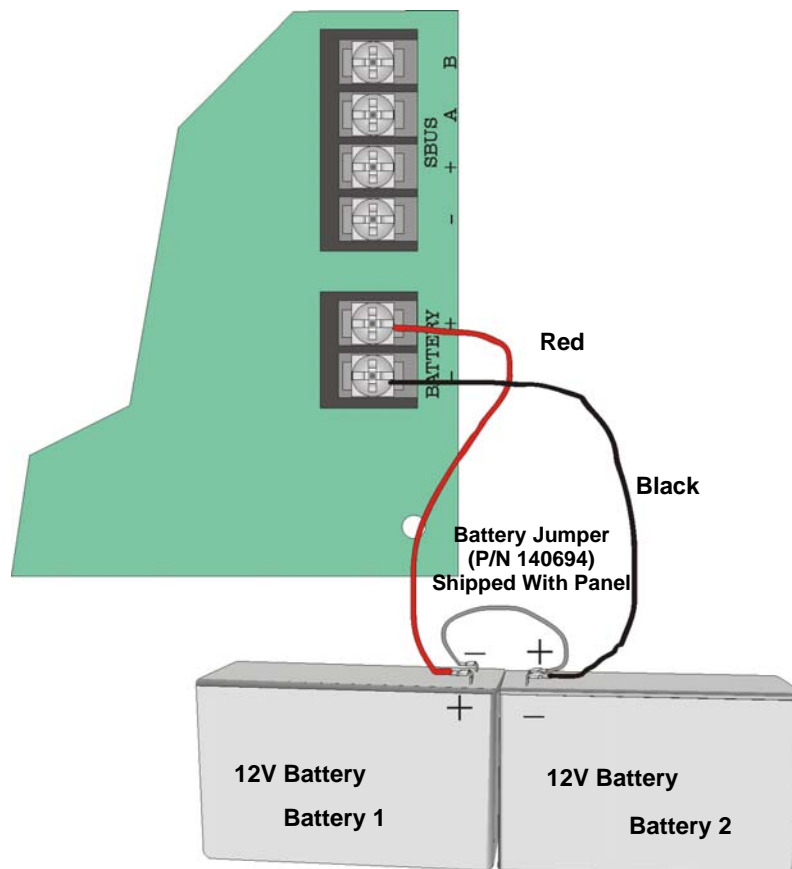


Figure 4-2 Battery Connection

### 4.3.1 RBB Accessory Cabinet

The Model RBB Accessory cabinet can be used when your backup batteries requirements use backup batteries that are too large to fit into the main control panel cabinet. The RBB cabinet holds batteries up to the 35 AH size. The RBB dimensions are 16" W x 10" H x 6" D (40.64 cm W x 25.4 cm H x 15.24 cm D).

#### 4.3.1.1 Installing the RBB Accessory Cabinet and Batteries

To properly install the accessory cabinet and backup batteries, follow these steps:

1. Mount the accessory cabinet. See figure Figure 4-3 for the four cabinet mounting holes.
  - If mounting onto drywall the accessory cabinet must be mounted onto 3/4-inch plywood. This is necessary because the weight of the batteries inside the accessory cabinet could cause the cabinet to pull away from the drywall.
  - When mounting on concrete, especially when moisture is expected, attach a piece of 3/4" plywood to the concrete surface and then attach the RBB cabinet to the plywood.
  - If using the battery cable extenders provided (P/N 140643), mount the RBB cabinet no more than 18" away from the main control panel cabinet. This will ensure that the battery cables reach the battery terminals.

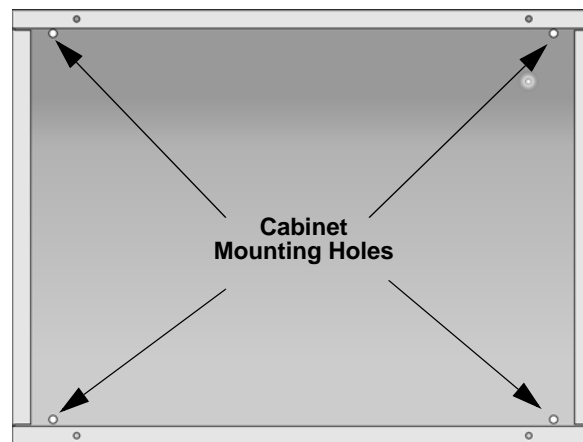


Figure 4-3 RBB Cabinet Mounting Holes

2. Connect the main control panel battery cables to the battery cable extenders as shown in Figure 4-4.


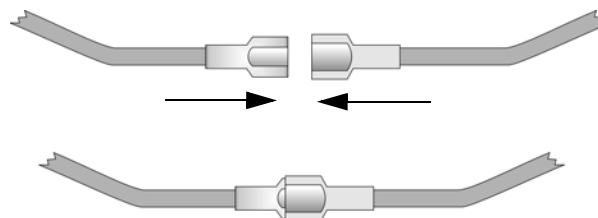


Figure 4-4 Splicing Control Panel Battery Cable to RBB Battery Cable Extenders


- Run extended battery cable from control panel cabinet through conduit to RBB cabinet.  
See Figure 4-5.

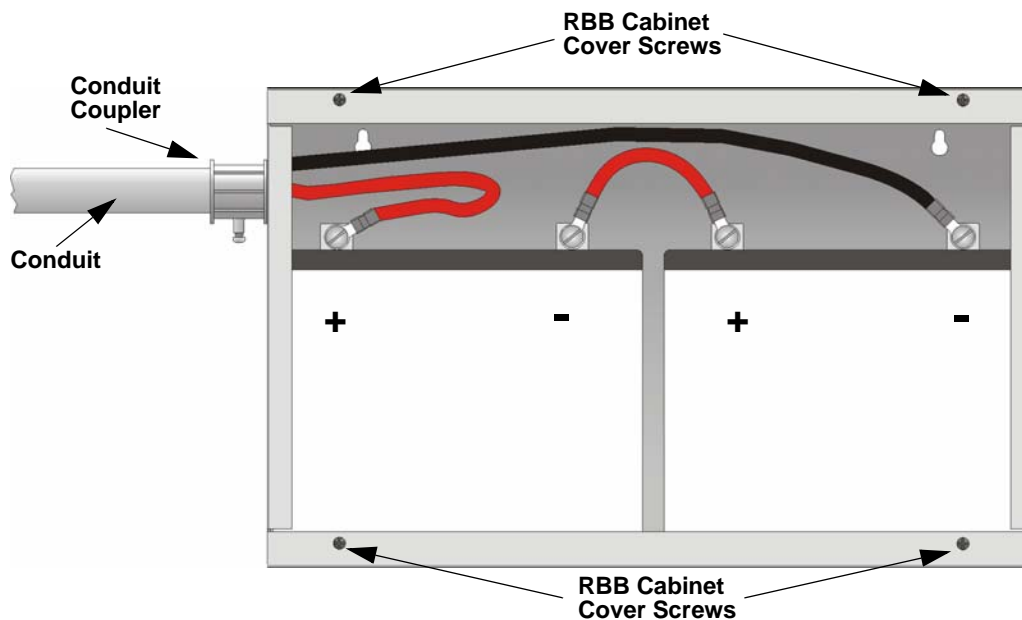

**Figure 4-5 Battery Connections in the RBB Cabinet**

*Note: Figure 4-5 is an example of how the wire connections can be routed. However, any other cabinet knock-outs (on either the main control panel or the RBB cabinet), that are not previously being used may be utilized to connect conduit between the two cabinets.*

- Connect battery leads to the backup battery terminals. See Figure 4-5.  
Observe the proper polarity to prevent damage to the batteries or the control panel.
- Insert the RBB cover screws into the cover mounting holes (see Figure 4-5).  
Screw the cover screw  $\frac{3}{4}$  of the way into the cover mounting hole.
- Align the cover plate mounting keyhole over the cover mounting screws.  
See Figure 4-6.

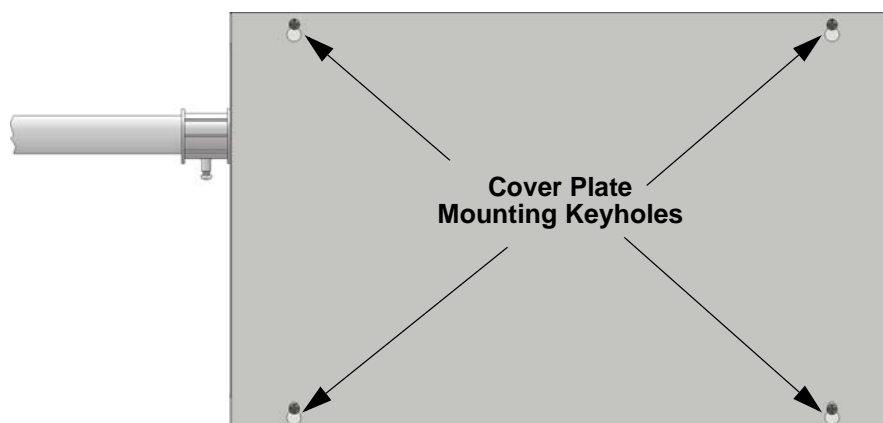

**Figure 4-6 Cover Plate Mounting Keyholes and Cover Mounting Screws Alignment**

7. Slide the cover into place and tighten the cover mounting screws. See Figure 4-6.

## 4.4 SBUS Wiring

---

This section contains information on calculating SBUS wire distances and the types of wiring configurations (Class B).

### 4.4.1 Calculating Wiring distance for SBUS modules

The following instructions will guide you in determining the type of wire and the maximum wiring distance that can be used with control panel SBUS accessory modules.

To calculate the wire gauge that must be used to connect SBUS modules to the control panel, it is necessary to calculate the total worst case current draw for all modules on a single 4-conductor bus. The total worst case current draw is calculated by adding the individual worst case currents for each module. The individual worst case values are shown in the table below.

*Note: Total worst case current draw on a single SBUS cannot exceed 1 amp.*

| Model Number                                  | Worst Case Current Draw |
|---|-------------------------|
| 5860 Fire Annunciator                         | .100 amps               |
| 5824 Serial/Parallel Printer Interface Module | .040 amps               |
| 5880 LED I/O Module                           | .250 amps               |
| 5865 LED Fire Annunciator                     | .200 amps               |
| 5496 Intelligent Power Supply                 | .010 amps               |

After calculating the total worst case current draw, Table 4-1 specifies the maximum distance the modules can be located from the panel on a single wire run. The table insures 6.0 volts of line drop maximum. In general, the wire length is limited by resistance, but for heavier wire gauges, capacitance is the limiting factor.

These cases are marked in the chart with an asterisk (\*). Maximum length can never be more than 6,000 feet, regardless of gauge used. (The formula used to generate this chart is shown in the note below).

**Table 4-1: Wiring Distances Per Wire Gauge Using Copper Wire**

| Wiring Distance: SBUS Modules to Panel |          |          |            |            |
|--|----------|----------|------------|------------|
| Total Worst Case Current Draw (amps)   | 22 Gauge | 18 Gauge | 16 Gauge   | 14 Gauge   |
| 0.100                                  | 1852 ft. | 4688 ft. | * 6000 ft. | * 6000 ft. |
| 0.200                                  | 926 ft.  | 2344 ft. | 3731 ft.   | 5906 ft.   |
| 0.300                                  | 617 ft.  | 1563 ft. | 2488 ft.   | 3937 ft.   |
| 0.400                                  | 463 ft.  | 1172 ft. | 1866 ft.   | 2953 ft.   |
| 0.500                                  | 370 ft.  | 938 ft.  | 1493 ft.   | 2362 ft.   |
| 0.600                                  | 309 ft.  | 781 ft.  | 1244 ft.   | 1969 ft.   |
| 0.700                                  | 265 ft.  | 670 ft.  | 1066 ft.   | 1687 ft.   |
| 0.800                                  | 231 ft.  | 586 ft.  | 933 ft.    | 1476 ft.   |
| 0.900                                  | 206 ft.  | 521 ft.  | 829 ft.    | 1312 ft.   |
| 1.000 (Max)                            | 185 ft.  | 469 ft.  | 746 ft.    | 1181 ft.   |

*Note: The following formulas were used to generate the wire distance chart:*

$$\text{Maximum Resistance (Ohms)} = \frac{6.0 \text{ Volts}}{\text{Total Worst Case Current Draw (amps)}}$$

$$\text{Maximum Wire Length (Feet)} = \frac{\text{Maximum Resistance (Ohms)}}{\text{Rpu}} \quad * 500$$

(6000 feet maximum)

where: Rpu = Ohms per 1000 feet for various Wire Gauges (see table below)

**Table 4-2: Typical Wire Resistance Per 1000 ft. Using Copper Wire**

| Wire Gauge | Ohms per 1000 feet (Rpu) |
|------------|--------------------------|
| 22         | 16.2                     |
| 18         | 6.4                      |
| 16         | 4.02                     |
| 14         | 2.54                     |

**Wiring Distance calculation example:**

Suppose a system is configured with the following SBUS modules:

- 2 - Module 5860 Fire Annunciator
- 1 - 5496 Notification Power Expander
- 1 - 5865 LED Fire Annunciator
- 1 - 5824 Serial/Parallel Printer Interface Module

The total worst case current is calculated as follows:

|                                      |                 |                    |
|--------------------------------------|-----------------|--------------------|
| 5860 Current Draw                    | = 2 x .100 amps | = .200 amps        |
| 5496 Current Draw                    | = 1 x .010 amps | = .010 amps        |
| 5865 Current Draw                    | = 1 x .200 amps | = .200 amps        |
| 5824 Current Draw                    | = 1 x .040 amps | = .040 amps        |
| <hr/>                                |                 |                    |
| <b>Total Worst Case Current Draw</b> |                 | <b>= .450 amps</b> |

Using this value, and referring to the Wiring Distance table, it can be found that the available options are:

- 370 feet maximum using 22 Gauge wire
- 938 feet maximum using 18 Gauge wire
- 1493 feet maximum using 16 Gauge wire
- 2362 feet maximum using 14 Gauge wire

## 4.4.2 Wiring Configurations

Figure 4-7 illustrates Class B configuration.

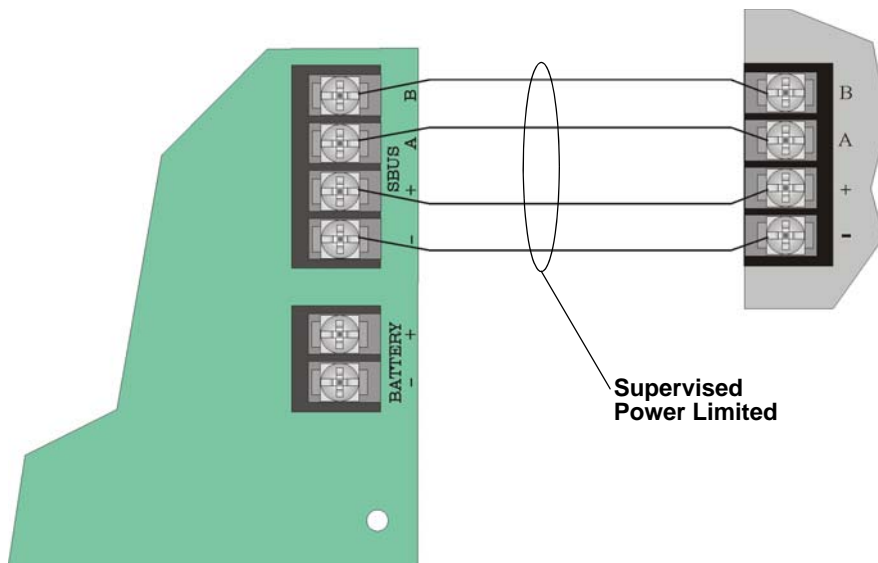


Figure 4-7 SBUS Class B Wiring

## 4.5 5860 Remote Annunciator Installation

The optional Model 5860 Remote Annunciator, shown in Figure 4-8, performs the same functions as the on-board annunciator. Operation is identical. Up to 8 annunciators can be added to the 5808 system.

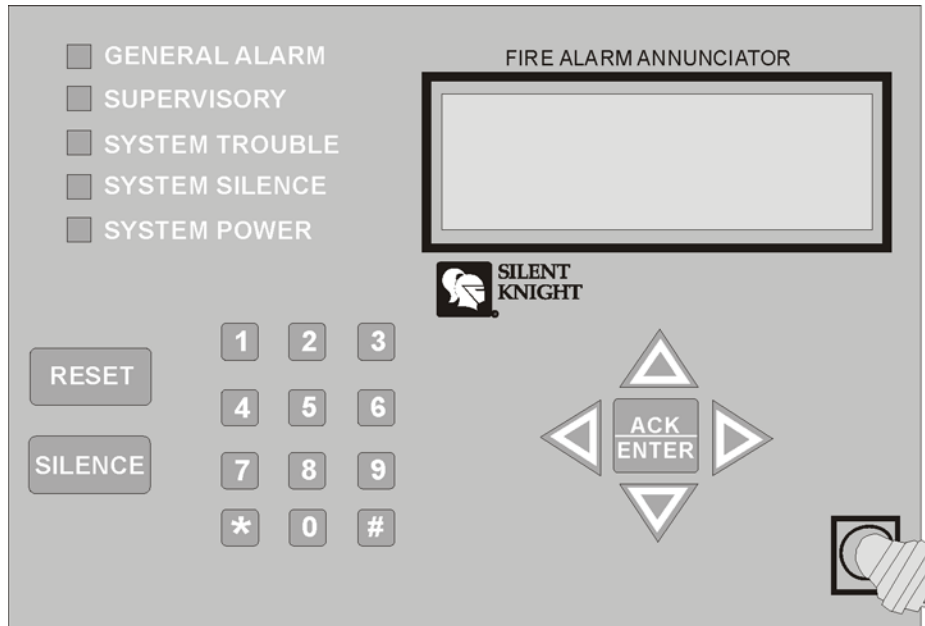


Figure 4-8 Model 5860 Remote Annunciator, Front View

5860 installation involves the following steps:


1. Make sure power is off at the panel.
2. Mount the 5860 in the desired location (see Section 4.5.1).
3. Connect the 5860 to the panel (see Section 4.5.2).
4. Use the DIP switches on the back of the 5860 to assign an ID# to the 5860 (see Section 4.9.1).
5. The new 5860 module must be added to the system through programming. Jump-Start will add the module automatically (see Section 6.1). You can also add it manually (see Section 7.3.2). Select a name, if desired (see Section 7.3.1.1).



### 4.5.1 Mounting the 5860

This section of the manual describes mounting the remote annunciator. The annunciator can be flush- or surface-mounted.

Figure 4-9 shows the parts of the annunciator. Instructions for disassembling and mounting appear on the following pages.

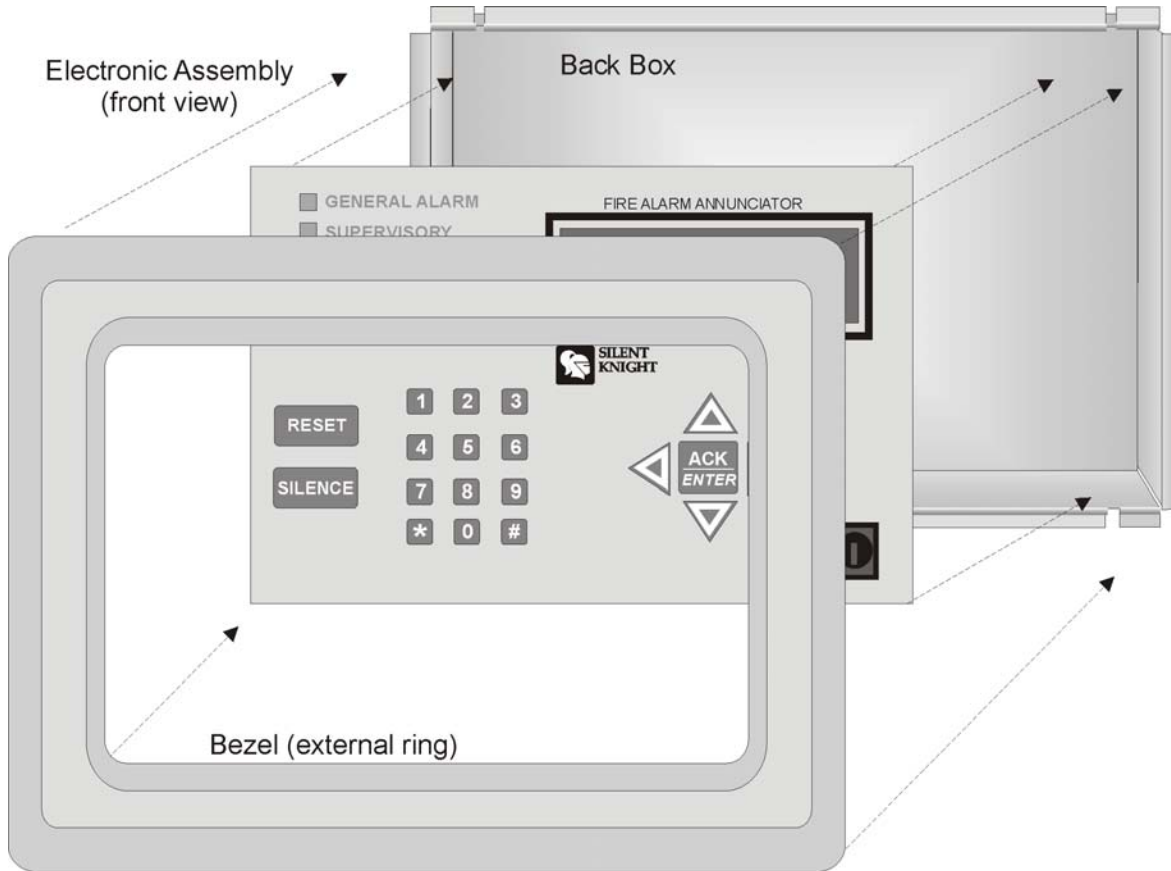

Assembled annunciator also includes mounting wires and 4 set screws.

**Figure 4-9 Annunciator Parts**

The 5860 comes from the factory fully assembled. You must disassemble it for mounting. To disassemble the annunciator, use a 5/64 hex wrench to remove the set screws, located on the bottom of the annunciator bezel. (See Figure 4-10 for location of the set screws.)

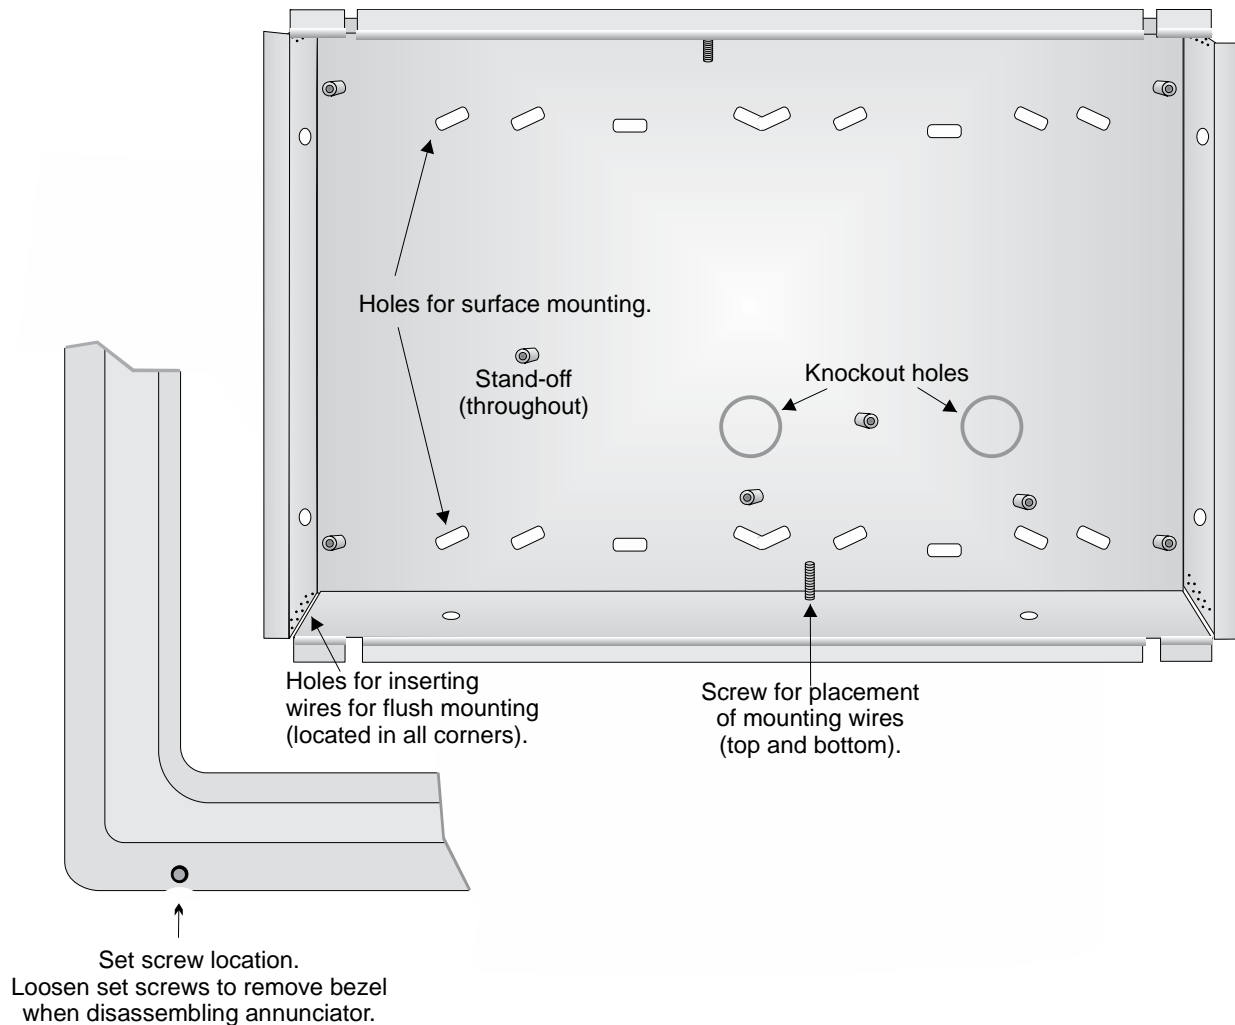


Figure 4-10 Annunciator Back Box and Bezel Details

### 4.5.1.1 Flush Mounting

This section of the manual describes flush mounting. You can flush-mount with or without an electrical box.

## Flush Mounting with an Electrical Box

The 5860 annunciator can be used with the following types of electrical boxes: 4S, single-gang, and double-gang.

If an electrical box is used, the box must be 1-3/8" back from the face of the wall to accommodate the annunciator. Studs used with an electrical box must be two by fours (or larger).

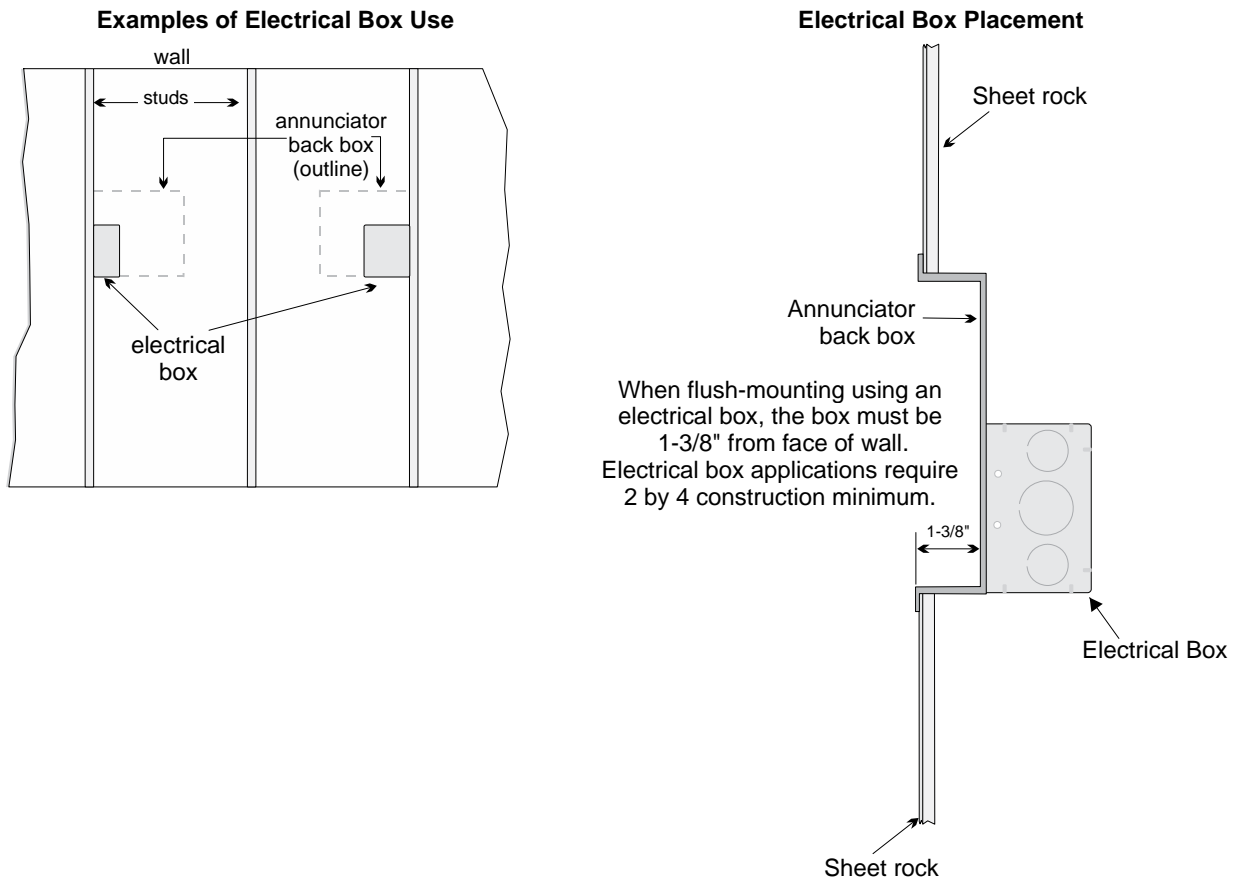



Figure 4-11 Placement of Electrical Box for Flush Mounting

## Flush Mounting Steps

1. Cut a hole in the sheet rock to the following dimensions: 8-1/4" w x 6-5/8" h. If an electrical box is used, the box must be 1-3/8" back from face of wall to accommodate the annunciator (see Figure 4-11).
2. Remove knockout holes as needed for wires.
3. Fit the annunciator back box into the hole and stabilize with mounting wires. Angle the mounting wires into the first hole past the sheet rock. Secure the wires behind the screws as shown in Figure 4-12. When all four wires are in place, the back box should fit snugly into the hole in the sheet rock.

4. After the annunciator wiring to the panel has been completed (described in Section 4.5.2), replace the electronic assembly in the back box. Place the bezel over the back box and tighten the set screws on the bezel.

Attach second set of wires to top of back box.

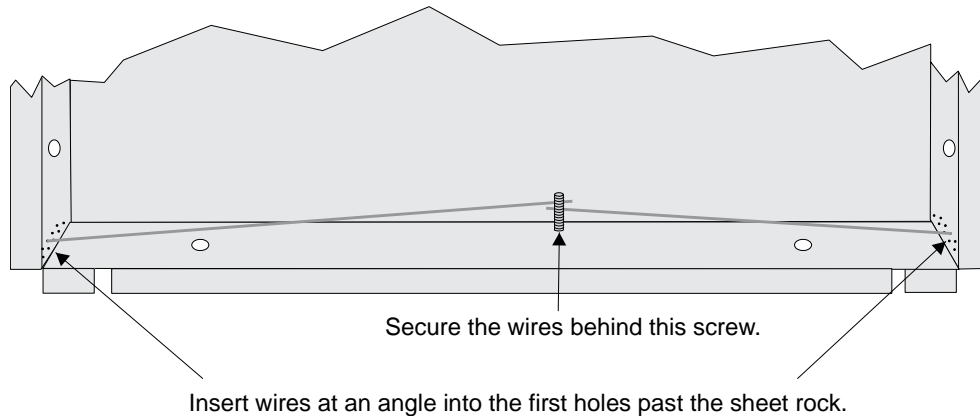

**Figure 4-12 Flush Mounting the Back Box**

#### **4.5.1.2 Surface Mounting**

The 5860 can be mounted directly to a surface or can be attached to a single, double, or four-square electrical box. The Model 5860TG/TR trim ring kit is available for use when surface mounting.

1. Drill holes in the surface to match the screw holes on the back box.
2. Fit the trim ring over the back box.
3. Attach the back box to the surface using screws provided.
4. After the annunciator wiring to the panel has been completed (described in Section 4.5.2), replace the electronic assembly in the back box. Place the bezel over the back box and tighten the set screws on the bezel.

## 4.5.2 Connecting the 5860 to the Panel

Connect the 5860 to the panel as shown in Figure 4-13.

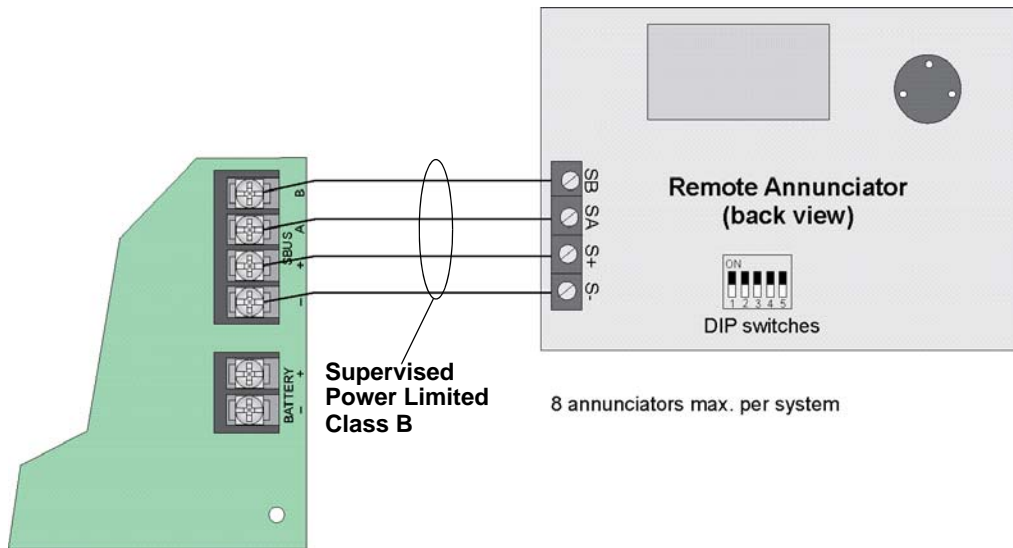


Figure 4-13 Model 5860 Connection to the Panel

## 4.6 5824 Serial/Parallel Printer Interface Module Installation

The 5824 serial/parallel printer interface module allows you to connect a printer to the panel, so you can print a real-time log of system events, a report of detector status, and event history. Instructions for installing the 5824 appear below.

The 5824 and the printer connected to the 5824 are for ancillary use only. The printer must be a UL 864 listed printer.

To install the 5824:

1. Make sure power is off at the panel.
2. Connect the 5824 to the panel as shown in Figure 4-14.

*Note: Two 5824s per panel maximum.*

3. Use the DIP switches on the back of the 5824 board to assign an ID# to the 5824 (see Section 4.9.1).
4. Configure the 5824 device through programming. See Section 4.6.1.
5. Connect a printer to the 5824 as shown in Figure 4-15.

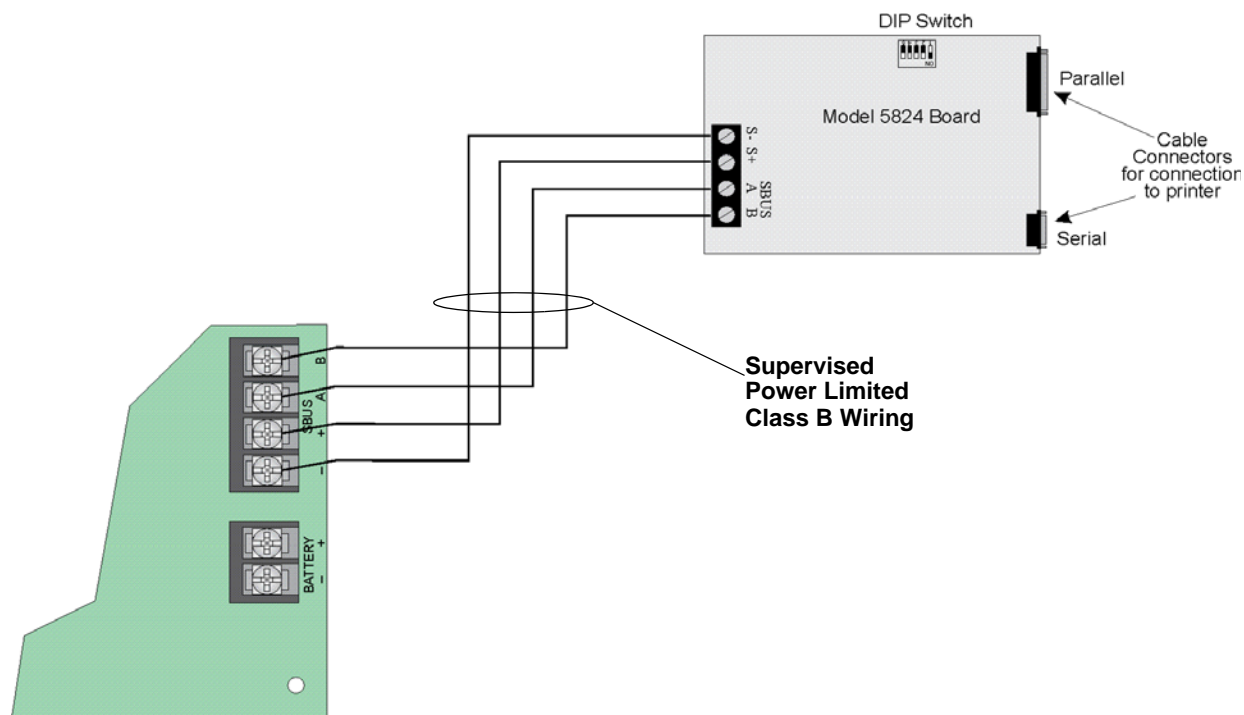


Figure 4-14 5824 Connection to the Panel

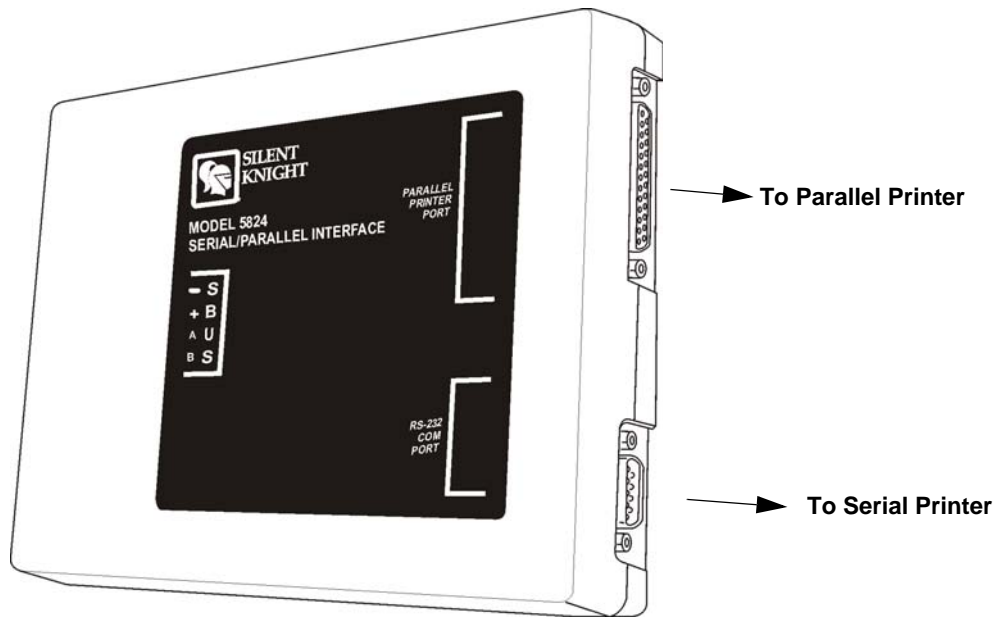


Figure 4-15 Printer Connection

## 4.6.1 Selecting 5824 Options


Configuring the 5824 includes the following steps:

- Add the module to the system. JumpStart will add the module automatically (see Section 6.1). You can also add it manually (see Section 7.3.2).
- Select a name, if desired (see Section 7.3.1.1).
- Select options for the printer and the output port. See below.

### Printer and Output Port Options

The printer is for ancillary use only.

1. From the Main Menu, select **7** for Program Menu.
2. Select **1** for Module.
3. Select **1** for Edit Module.
4. From the list that displays, select the 5824 module you want to configure.
5. Press **ENTER** to bypass the next two screens. A screen similar to the one shown in Figure 4-16 will display.

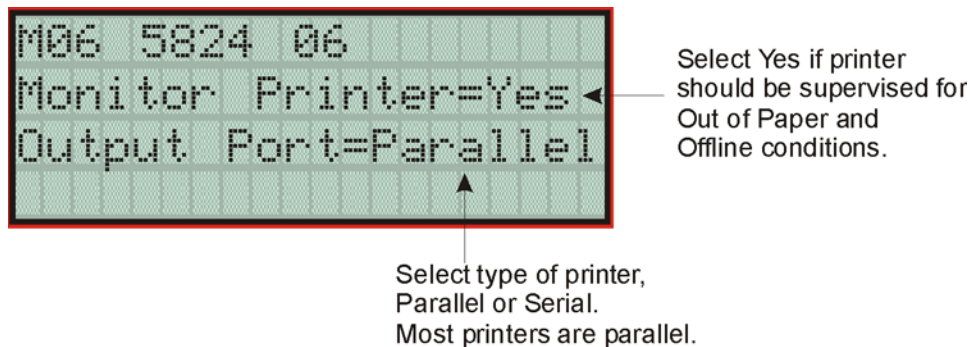

**Figure 4-16 Selecting Printer and Output Port Options**

6. Select options for the printer as needed for your installation. Most printers are parallel.
7. If you are using a serial printer, use the next screen to select serial port options as required for your printer. Refer to your printer manual if you need more information.

| Option     | Choices         |
|------------|-----------------|
| Baud Rate: | 75 - 19200      |
| Data Bits: | 5 - 8           |
| Stop Bits: | .5, 1, 2        |
| Parity:    | None, Even, Odd |



## 4.7 5880 LED I/O Module

The 5880 is an LED driver board that can be used in a wide variety of applications, including as an interface with most customized floor plan annunciator boards. The 5880 can drive up to 40 LEDs and has one PZT controller. The 5880 also has eight inputs for dry contact monitoring. The following sub-sections describe hardware installation. Refer to Section 6 for programming information.

### 4.7.1 5880 Board Layout

Figure 4-17 is a picture of the 5880 board showing locations of screw terminals for connection to the panel and contact monitor wiring; pin connectors for connecting LEDs; and the DIP switch for selecting an SBUS ID number.

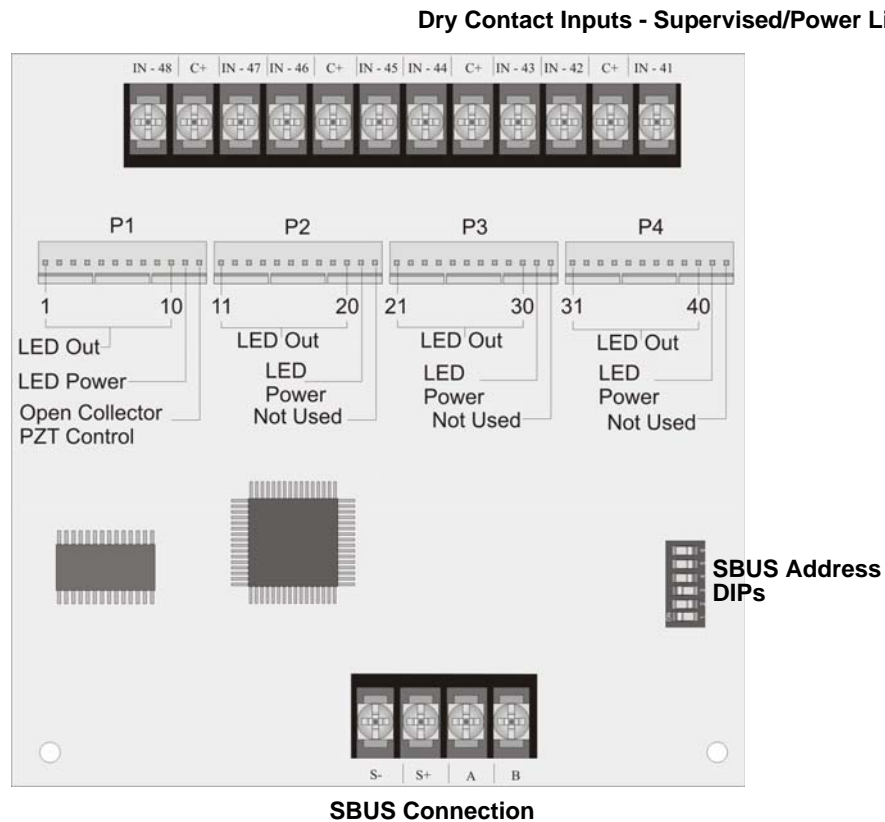


Figure 4-17 5880 Board Layout

## 4.7.2 FACP Connection

The 5880 connects to the panel via the SBUS. Make connections as shown in Figure 4-18. After the 5880 is connected to the panel, it must be added to the system. This programming step is described in Section 4.9.

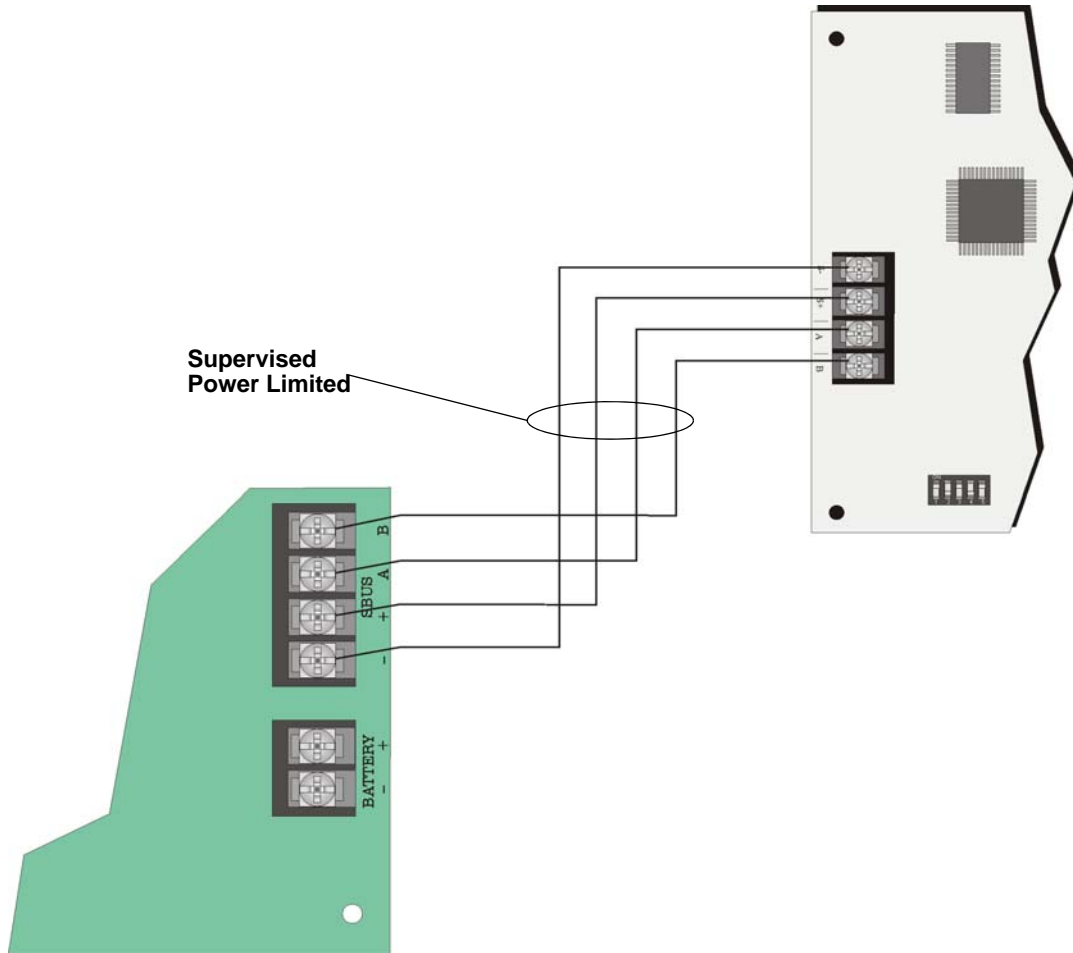


Figure 4-18 5880 Connection to Main Control Panel Assembly


### 4.7.3 LED Wiring

There are four 12-pin connectors on the 5880 board for connecting LEDs. Each LED gets its power from Pin 11. Internal resistors are sized so that there is approximately 10 mA of current for each LED, no series resistors are required. LED outputs can be mapped to output circuits. See Section 6 for programming details.

Wire the LEDs as shown in Figure 4-19.

On connector P1, Pin 12 is a common open collector output for controlling a PZT. If used, the 5880 PZT will match the PZT pattern of the on-board (or 5860) annunciator.

*Note: The circuit connected to common "Open Collector Output" (last pin on P1) must be current limited so that no more than 100 mA of current is allowed to flow into the open collector transistor.*

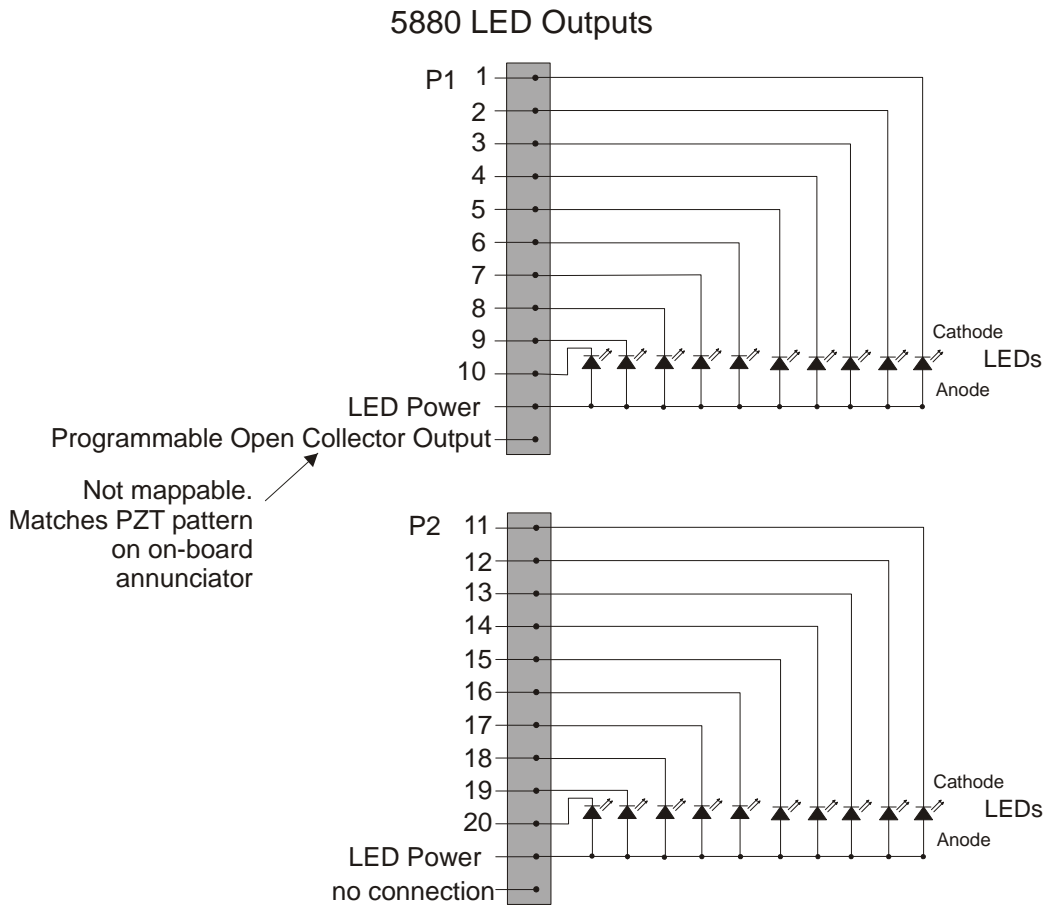

Connectors P3 and P4 wired same as P2.

**Figure 4-19 5880 Board Layout**

## 4.7.4 Dry Contact Wiring

The 8 input circuits on the 5880 board are for monitoring switch inputs-any type of switch supported by the control panel can be used with the 5880. For example, you can use a 5880 to monitor pull stations, water flow, tamper, reset, or silence switches.

Wire dry contacts as shown in Figure 4-20. Notice grouping of terminals; power terminals are shared by two inputs.

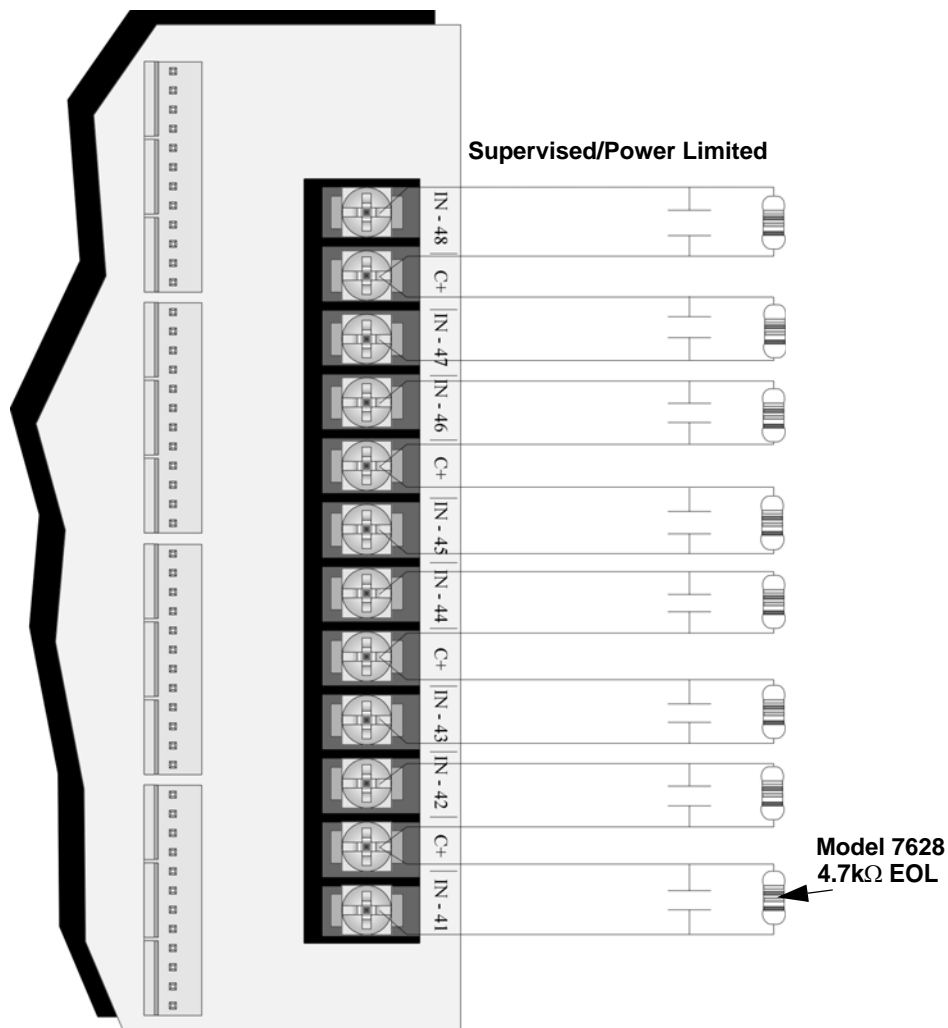



Figure 4-20 Dry Contact Wiring

## 4.8 5865-3 / 5865-4 LED Annunciator Installation

The 5865-3 and 5865-4 are LED annunciators. The 5865-4 has 30 mappable LEDs, remote silence and reset key switches, and a general system trouble LED. The 5865-3 has 30 mappable LEDs only. These are arranged as 15 pairs of red (typically used for alarm) and yellow (typically used for trouble) LEDs.

Installation of the 5865-3 and 5865-4 is identical. The key switches and the trouble LED follow the behavior of other system annunciators and do not require any installation steps. The following sub-sections describe how to install the 5865-3 and 5865-4 hardware. Refer to Section 6 for programming information.

*Note: This manual uses "5865" when referring to aspects of the 5865-3 and 5865-4 that are common to both models.*

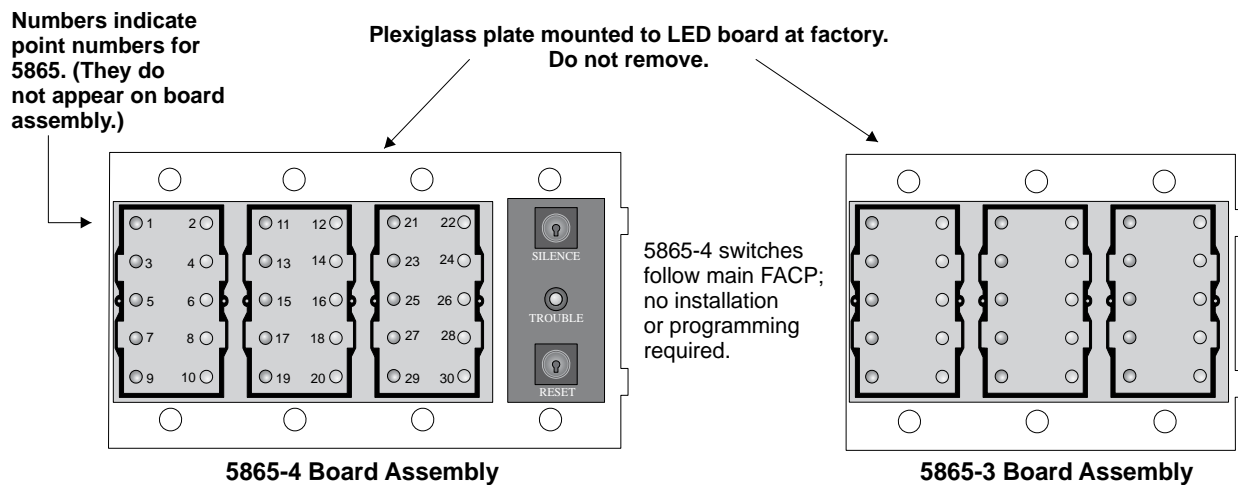

**Figure 4-21 5865-3 and 5865-4 Assembly (front view)**

## 4.8.1 FACP Connection

The 5865 connects to the panel via the SBUS. Make connections as shown in Figure 4-22. After the 5865 is connected to the panel, it must be added to the system. This programming step is described in Section 4.9.


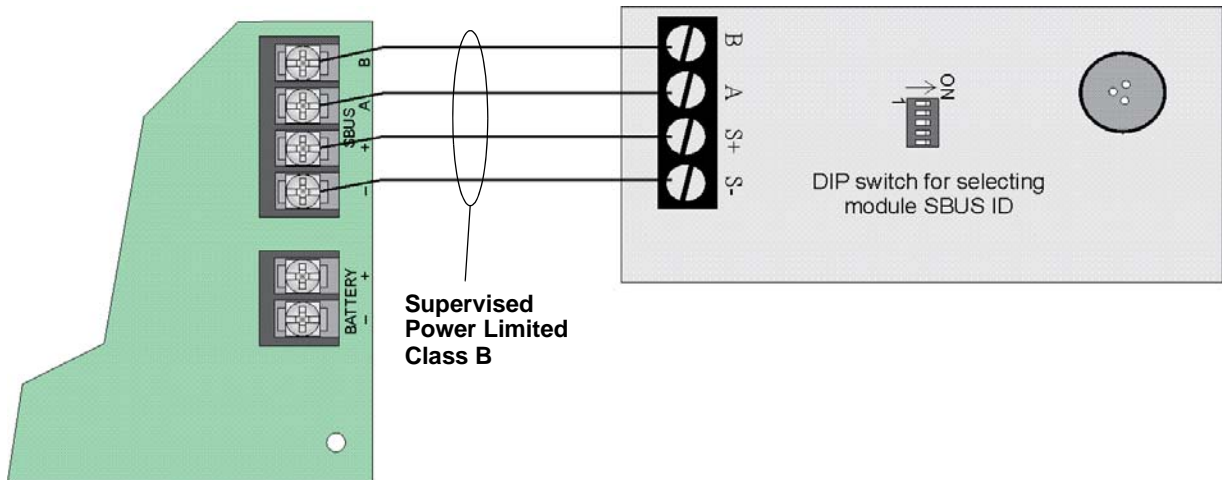


Figure 4-22 5865 Connection to the FACP

## 4.8.2 5865 Mounting

Mount the 5865-4 to a standard 4-gang electrical box. Mount the 5865-3 to a standard 3-gang electrical box. In Figure 4-23, the 5865-4 attached to a 4-gang box is used as an example.

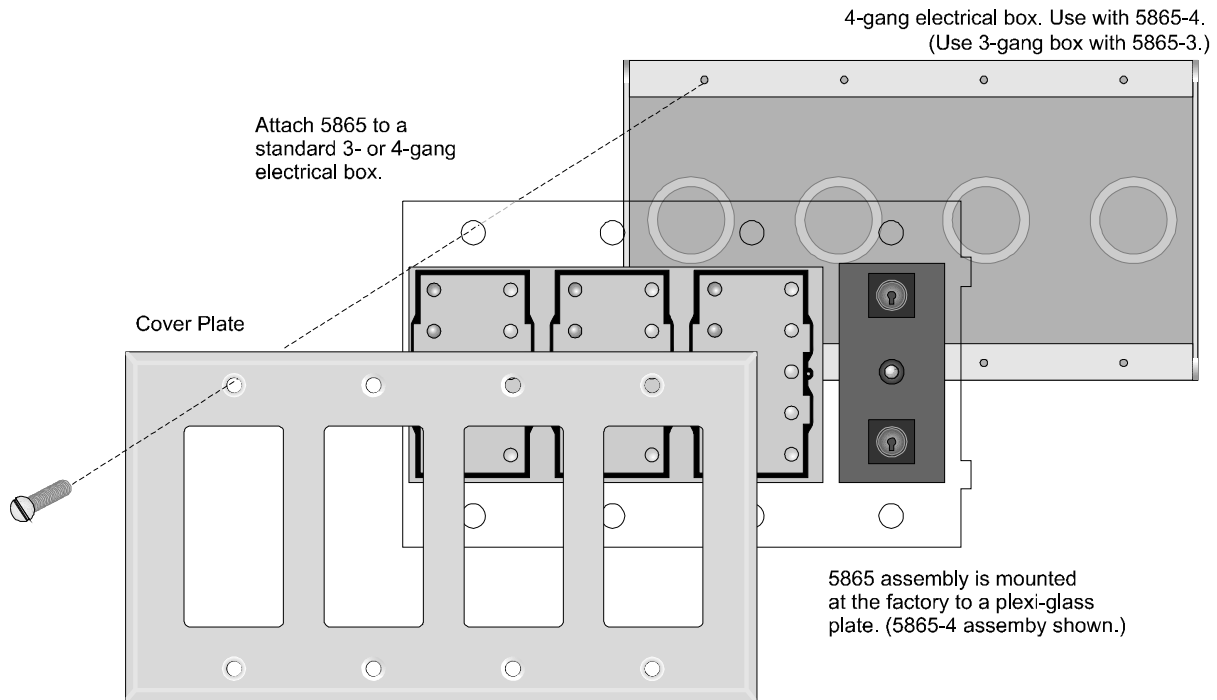

**Figure 4-23 5865 Mounting Example**

The 5865 ships with a set of zone description labels that can be inserted into the 5865 board assembly. These labels can be used in a typewriter or can be written on by hand. Slide the labels under the plexiglass as shown in Figure 4-24. The LEDs will

show through the label when illuminated.

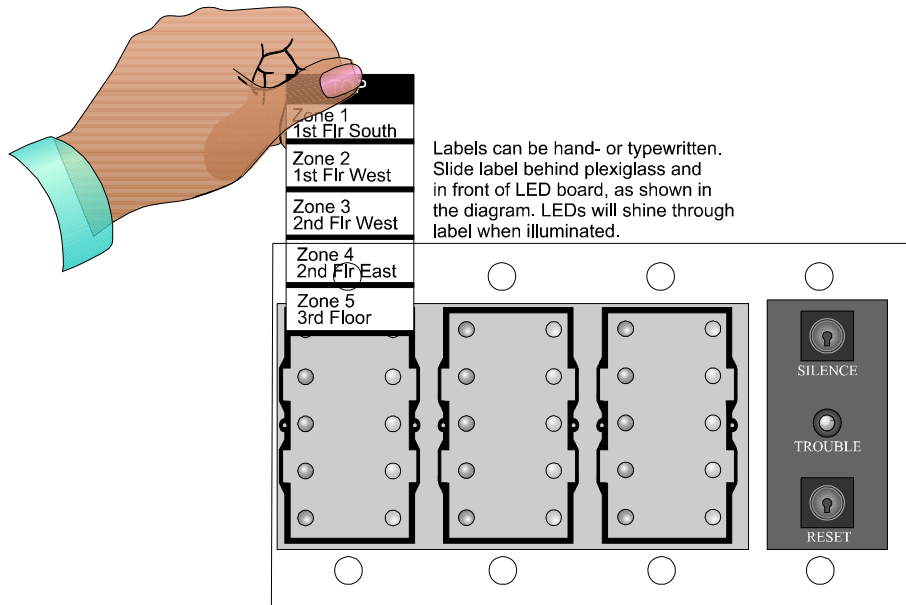


Figure 4-24 Inserting Zone Description Labels




## 4.9 Configuring Modules

This section describes how to configure any system hardware modules that have been added to the system.

### 4.9.1 Assigning Module IDs

When installing a hardware module (such as, 5824, 5860, 5496, 5865-3 or 5865-4), you must use the DIP switches on the module to assign an ID# to the module.

Figure 4-25 shows all possible DIP switch positions and their correlation to a numerical ID. For example, to select ID 2, place DIP switch 2 in the up position.

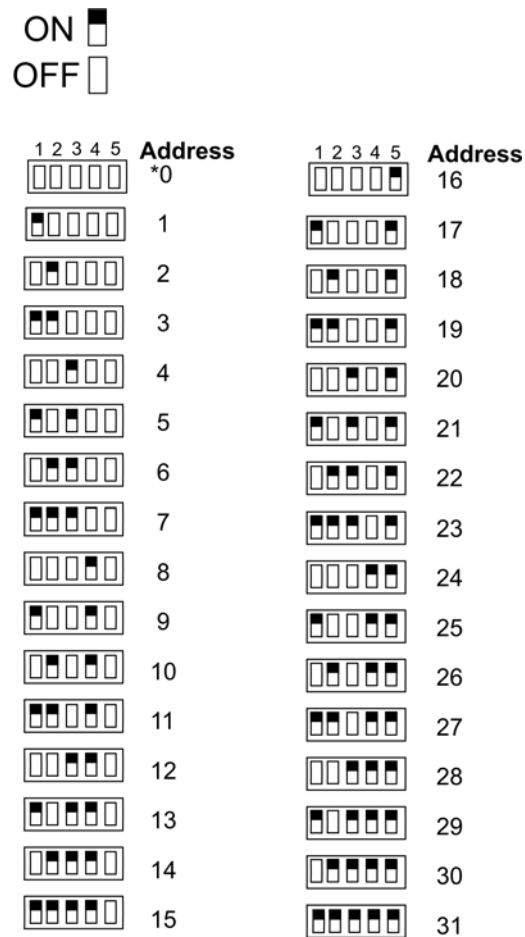

\*Note: Address 0 cannot be used.

Figure 4-25 Possible module addresses

## 4.10 Telephone Connection

Connect the telephone lines as shown in Figure 4-26. The Model 7860 phone cord is available from Silent Knight for this purpose.

A number of programmable options are available for customizing telephone lines. These options are described in Section 7.7.

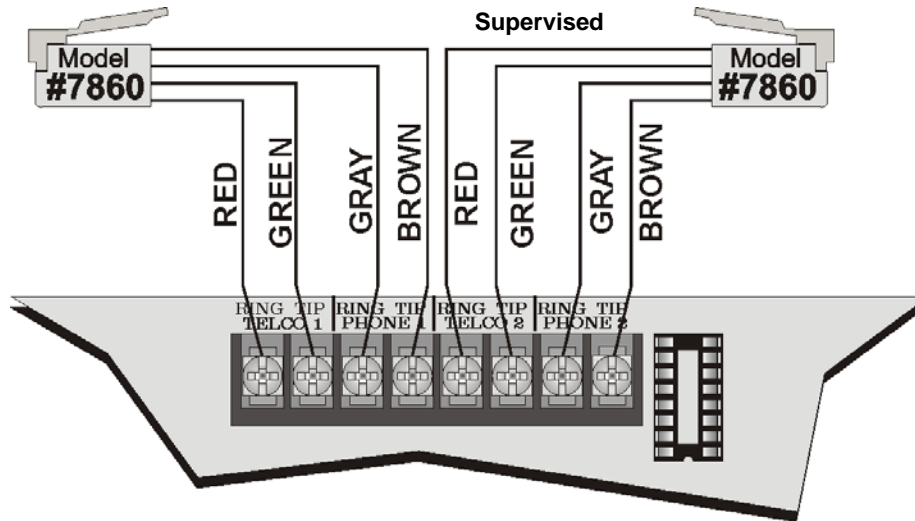


Figure 4-26 Connection of Telephone Lines

## 4.11 Notification Appliance/Auxiliary Power Circuits

*Note: These circuits are considered regulated unless used for releasing type service, in which case they are considered special applications.*

Four outputs are built-in to the 5808 FACP which can be programmed to be used as NACs (Class A or Class B) or as Aux power.

This section of the manual explains how to install conventional notification appliances and how these terminals can be used for auxiliary power.

### 4.11.1 Conventional Notification Appliance

This sub-section of the manual explains how to install conventional notification appliances for Class A (Style Z) and Class B (Style Y) configurations.

#### 4.11.1.1 Class B Notification Wiring

You must use an appliance from the list of compatible appliances in Appendix A.

To install a Class B notification appliance circuit:

1. Wire Class B Notification appliances as shown in Figure 4-27.
2. Configure the circuit through programming (see Section 7.6).

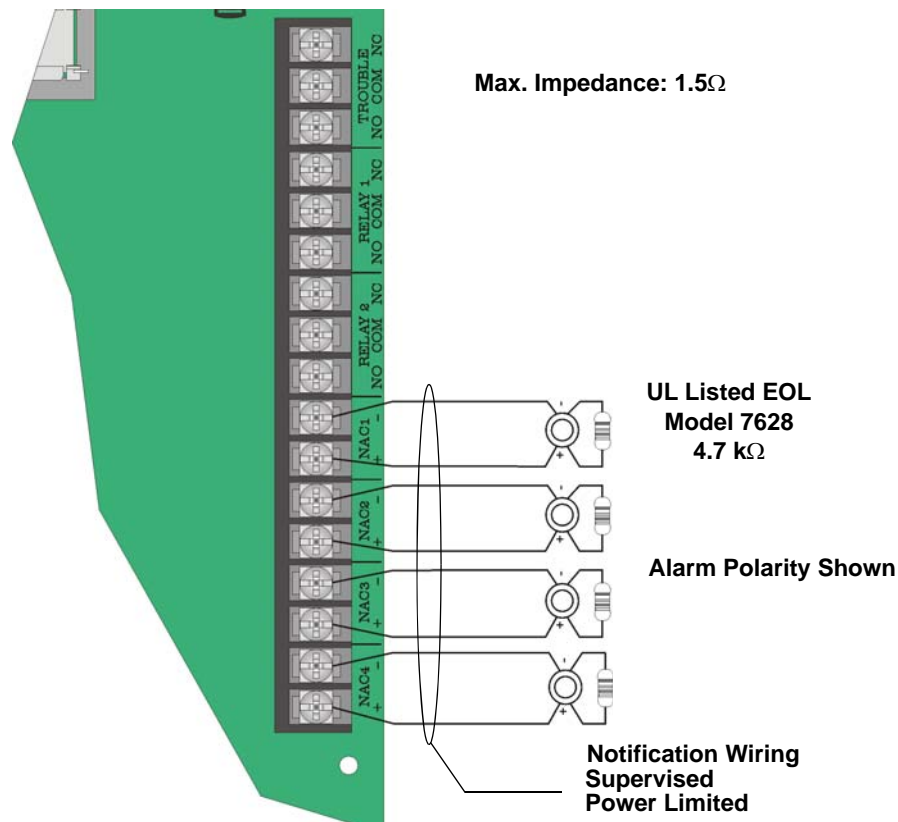


Figure 4-27 Class B Notification Appliance Circuit Wiring

### 4.11.1.2 Class A Notification Wiring

You must use an appliance from the list of compatible appliances in Appendix A.

To install a Class A notification appliance circuit:

1. Wire the Class A notification appliances as shown in Figure 4-28.

**Caution**

For proper system supervision do not use looped wire under terminals marked + and – of the Flexput connectors. Break wire runs to provide supervision of connections.

2. Configure the circuit for Class A in programming (see Section 7.6).

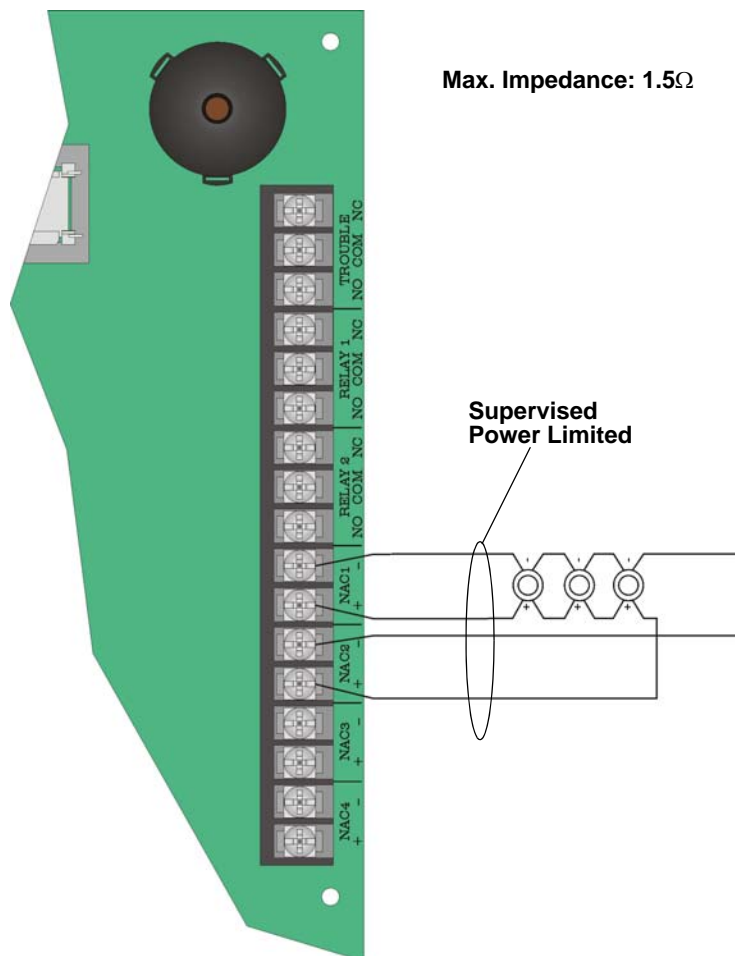


Figure 4-28 Class A Notification Appliance Circuit Configuration

## 4.11.2 Auxiliary Power Installation

NAC Circuits 1-4 on the control panel can be used as auxiliary power circuits. The three types of auxiliary power available are:

- Door Holder (see section 4.11.2.1)
- Constant (see section 4.11.2.2)
- Resettable Power (see section 4.11.2.3)
- Sounder Sync Power (see Section


Auxiliary power circuits are power limited. Each circuit can source up to 3A (total current for all NAC circuits must not exceed 6A).

To install an auxiliary power circuit:

1. Wire the NAC circuit(s) that will be used for auxiliary power. See Figure 3-2 for location of NAC circuits.
2. Configure the auxiliary power output through programming (see section 7.6).

### 4.11.2.1 Door Holder Power

Door holder power is intended for fire door applications. When there are no alarms in the system and the panel has AC power, door holder circuits have 24-volt power present at their terminals. Any alarm will cause power to disconnect. Power will be re-applied when the system is reset. If AC power is off for more than 15 seconds, the auxiliary door holder power will be disconnected to conserve the battery backup. When AC power is restored, power is immediately restored to the door holder circuits.

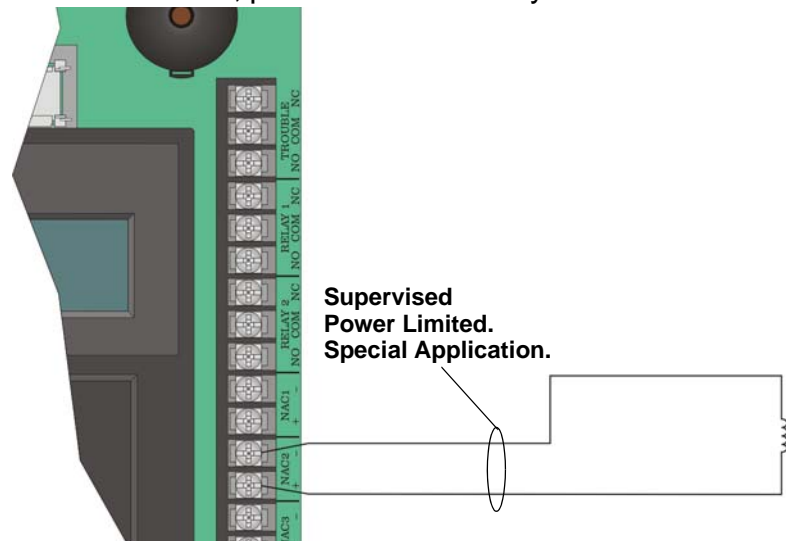

**Figure 4-29 Example of an Auxiliary Power For Door Holder**

*Note: Figure 4-29 uses UL listed door holder Model 1400 from Door Control International as an example.*

#### **4.11.2.2 Constant Power**

Use constant power for applications that require a constant auxiliary power source. Power is always present at Constant circuits.

#### **4.11.2.3 Resettable Power**


Resettable power is typically used to power beam detectors, flame detectors and conventional 4-wire smoke detectors. For circuits selected as Resettable, 24-volt power is always present at the terminals unless a system reset occurs. If a system reset occurs, power is disconnected from the terminals for 30 seconds, then re-applied.

#### **4.11.2.4 Sounder Sync Power**

Sounder Sync Power continuously outputs the System Sensor synchronization pattern and is intended for use with B200S sounder bases.

## 4.12 On-Board Programmable Relays (Conventional)

The control panel has two built-in programmable relays and a built-in trouble relay. All relays are Form C rated at 2.5 A @ 24 VDC (resistive).

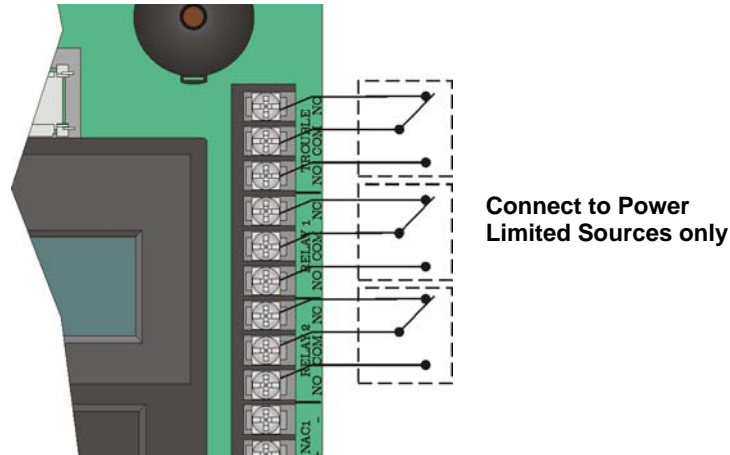

**Figure 4-30 Location of Conventional Relay Circuits**

*Note: The N.C. contact is the relay contact that is closed when the panel has power and there are no alarm or trouble conditions.*

### 4.12.1 Trouble Relay

The control panel has a dedicated common Form C trouble relay built into terminals labeled TROUBLE. The relay provides a normally open and a normally closed contact. The trouble relay will deactivate under any trouble condition.

### 4.12.2 Programmable Relays

The control panel has two Form C programmable relays built into terminals labeled RELAY 1 and RELAY 2. Each relay provides a normally open and a normally closed contact.

To install one or two programmable relays, follow these steps.

1. Wire Relay 1 and/or Relay 2 as needed for your application. See Figure 4-30 for the location of the relay terminals.
2. Configure the relay through programming (see section 7.6).

## 4.13 Remote Station Applications

### 4.13.1 Keltron Model 3158 Installation

The control panel is compatible with Keltron Model 3158, used for direct connection to a Keltron receiver. The 3158 reports alarms, supervisories, and troubles.

The steps for connecting the 3158 to the control panel. Refer to the 3158 installation instructions for complete information.

1. Wire the 3158 to the control panel as shown in the connection list and Figure 4-31.
2. Wire the 3158 within 20 feet of the control panel. Wiring must be enclosed in conduit.
3. Program control panel Relay 2 for alarm.
4. Program NAC circuit 2 for alarm.
5. Program NAC circuit 1 for supervisory non latching.

*Note: NACs must be programmed for continuous and non-silencing.*

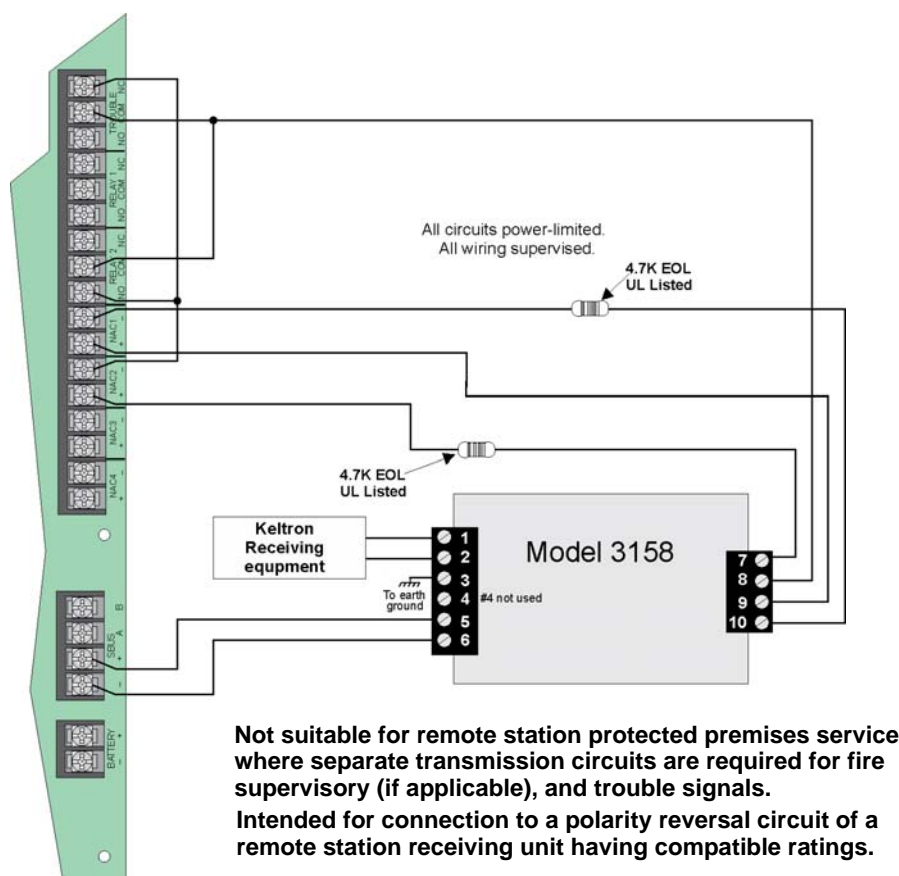


Figure 4-31 Keltron 3158 Connection to Control Panel



## 4.13.2 City Box Connection Using the 5220 Module

This section describes how to connect the control panel to a municipal fire alarm box or “city box” as required by NFPA 72 Auxiliary Protected Fire Alarm systems for fire alarm service. The city (master) box is an enclosure that contains a manually operated transmitter used to send an alarm to the municipal communication center which houses the central operating part of the fire alarm system.

City Box Standby Current:

0 (Notification supervision current accounted for in control panel draw.)

Alarm Current:

1 Amp for 1 second

The maximum coil and wire resistance (combined) must not exceed 30 ohms.

To install the 5220 for city box connection:

1. Use one of the knockouts on the right side of the control panel to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the control panel as shown in Figure 4-32. This drawing also shows how to connect the city box coil to terminals 3 and 4 on the 5220. Do not install an EOL resistor in the terminals of the NAC circuit used for this application.
3. Connect earth ground wire to the 5220 chassis with mounting screw.
4. Program the NAC circuit used as a continuous and non-silencing. Refer to Section 7.5.1 for zone grouping and mapping.

It is not possible to reset the remote indication until you clear the condition and reset

the control panel.

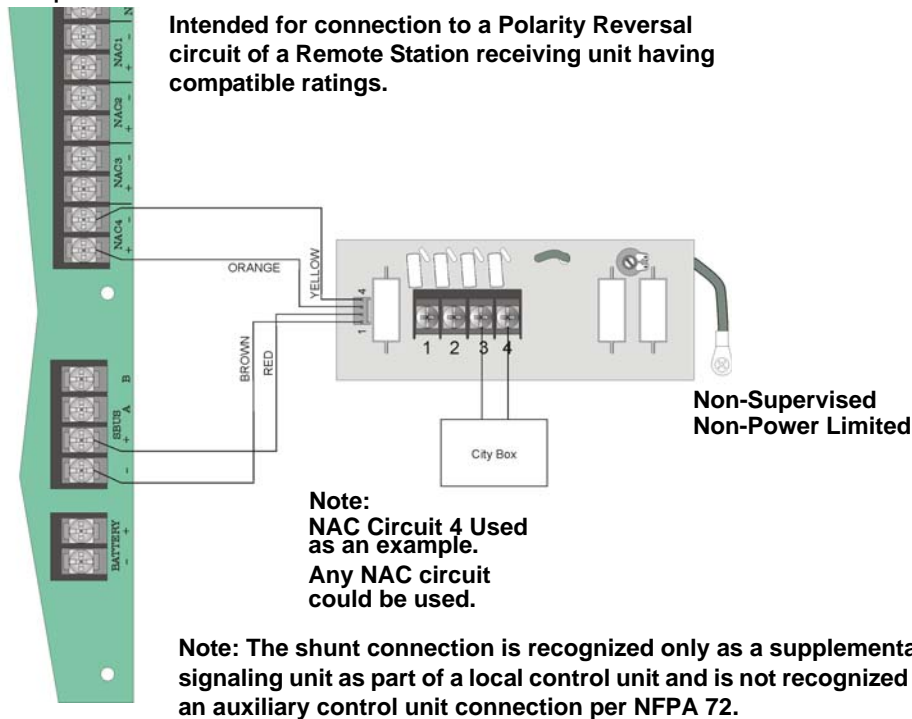


Figure 4-32 City Box Connection

### 4.13.3 NFPA 72 Polarity Reversal

*Note: Intended for connection to a polarity reversal circuit of a control unit at the protected premises having compatible rating.*

#### 4.13.3.1 Using the 5220 Module

When the 5220 is wired and programmed for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

If an alarm condition occurs, the alarm relay will close, overriding the trouble condition.

Standby Current: 100 mA, 24 VDC

Alarm: 100 mA, 24 VDC

To install the 5220 for polarity reversal, follow the steps below:

1. Locate the knockout on the right side of the control panel cabinet to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the control panel using the four-wire pigtail provided as shown in Figure 4-33. This diagram also shows how to connect the 5220 to the remote indi-

- ator. Do not install an EOL resistor in the terminals of the NAC circuit used for this application.
3. Connect earth ground wire to the 5220 chassis with mounting screw.
  4. Program the NAC circuit used as continuous and non-silencing. Refer to Section 7.5.1 for zone grouping and mapping.
  5. If necessary, adjust loop current using the potentiometer (R10) on the 5220 board. Normal loop current is 2-to-8 mA with a 1k ohm remote station protected premise unit. Maximum loop resistance is 3k ohm.

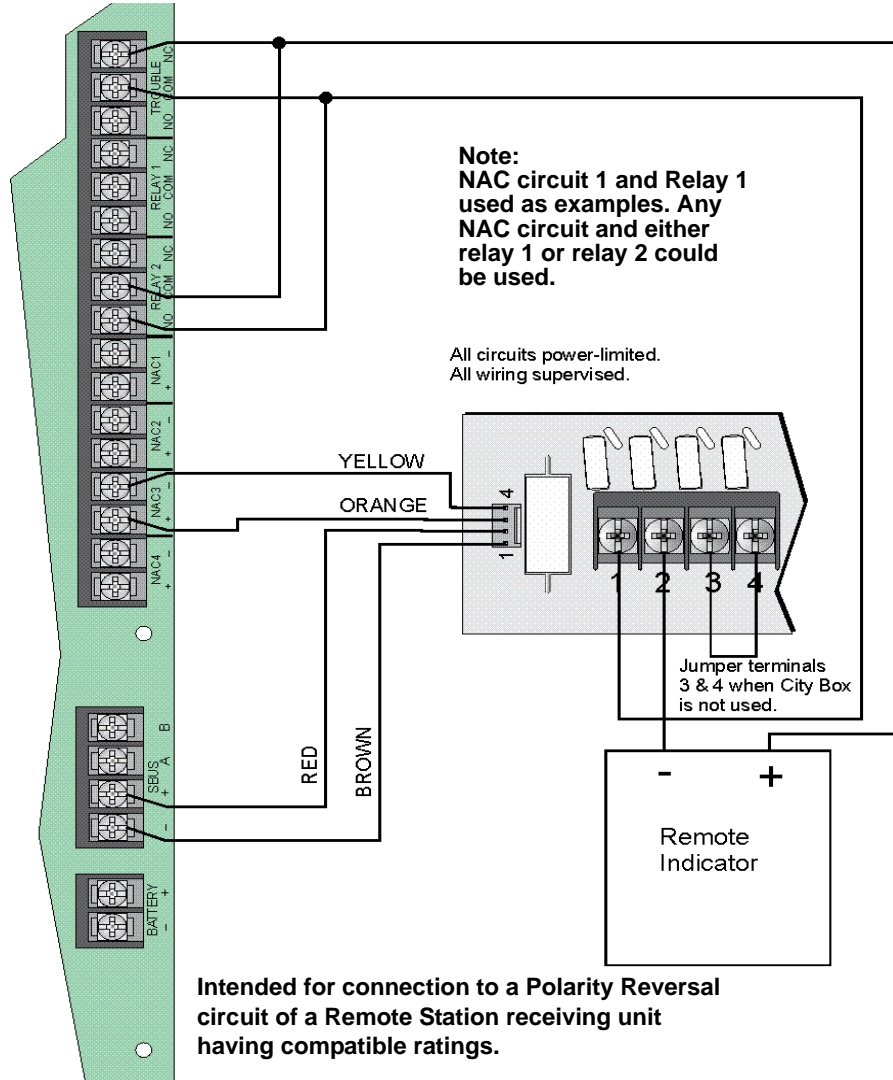


Figure 4-33 Polarity Reversal Connection Using the 5220 Module

### 4.13.3.2 Using the 7644 Module

When the 7644 is used for polarity reversal, it allows alarm and trouble events to be reported to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

#### To install the 7644 for polarity reversal:

1. Wire the 7644 to the control panel as shown in Figure 4-34. Do not install an EOL resistor on the terminals of the NAC circuit used.

*Note: Use only NAC circuits on the control panel for reverse polarity.*

2. Program the NAC circuit as a notification circuit. See Section 7.6.2.
3. Map the group to activate constant on from the zone event. See Section 7.4.1.3.
4. Program the output group characteristics as non-silenceable and reverse polarity. See Section 7.5.1.2.

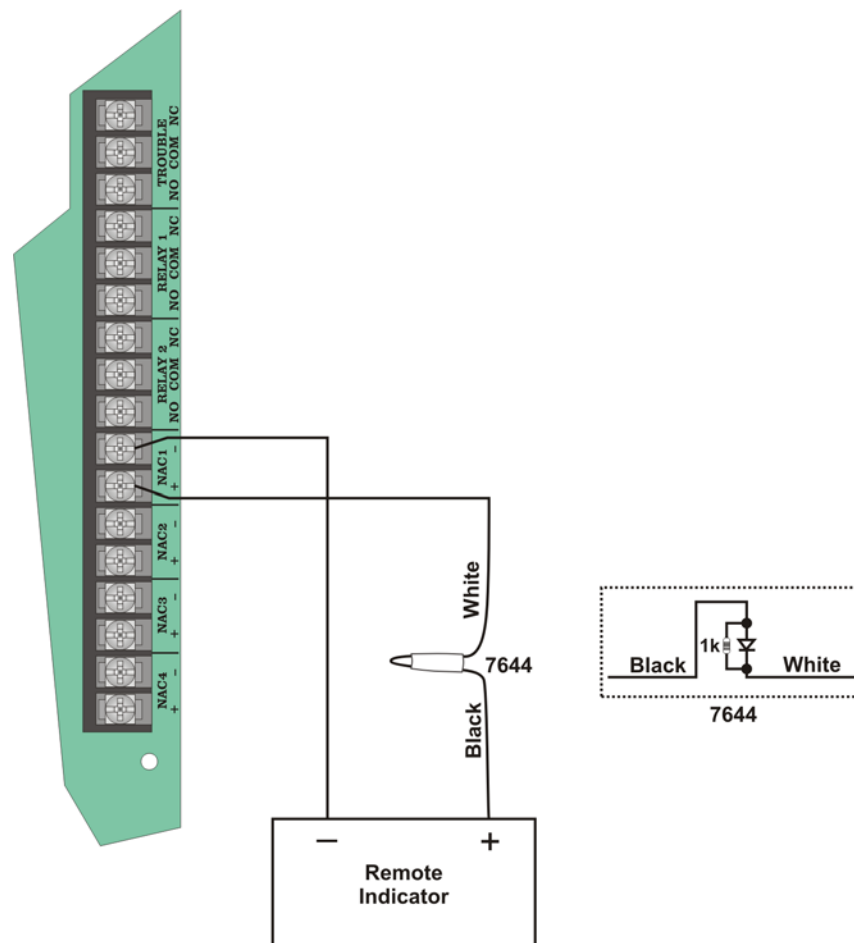


Figure 4-34 Polarity Reversal Connection Using the 7644

#### 4.13.4 Using the SD500-ARM Addressable Relay Module

When the SD500-ARM is wired for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

Relay 2 must be programmed for Alarm (default).

*Note: If you need to transmit supervisories or trouble conditions, additional SD500-ARM modules must be added. Use relay 1 to transmit supervisory conditions. Use the trouble relay to transmit trouble conditions.*

Wire the SD500-ARM as shown in Figure 4-35.

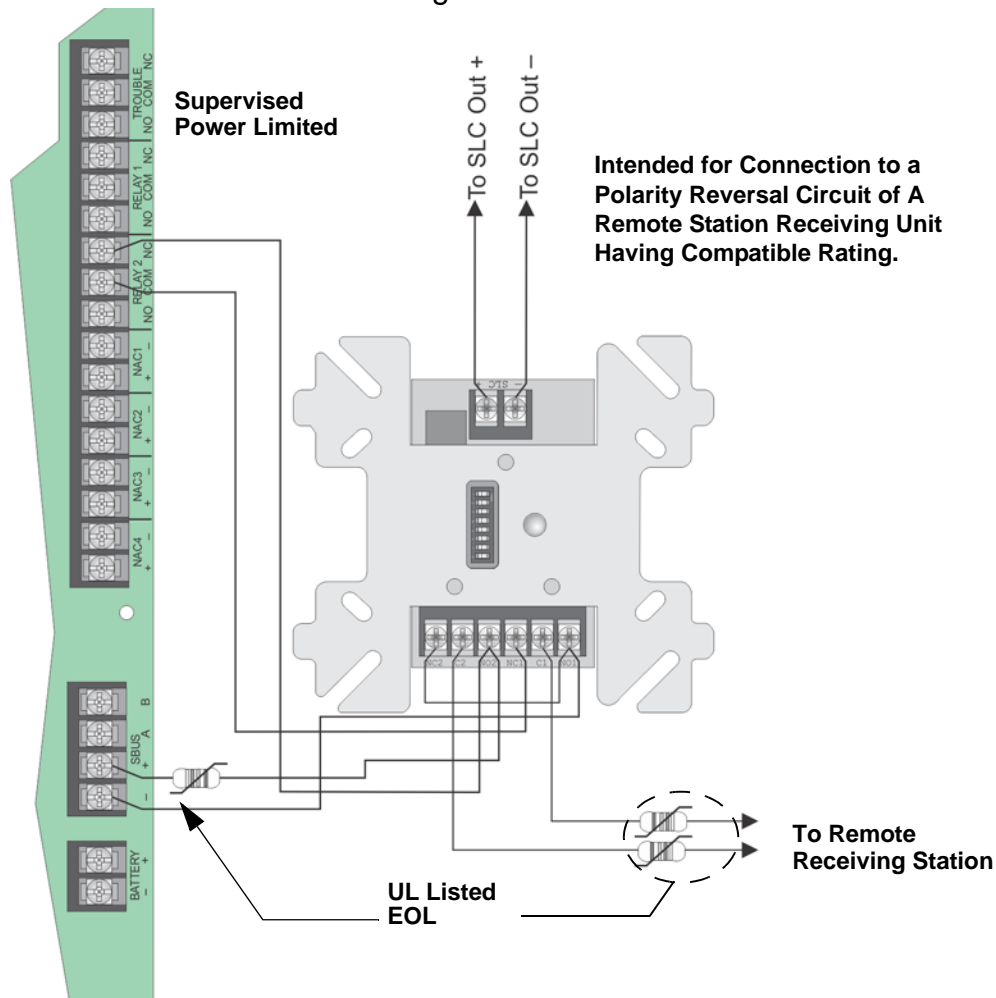


Figure 4-35 Polarity Reversal Connection Using the SD500-ARM Module

### 4.13.5 Using a MR-201/T Control Relay From Air Products

When the MR-201/T control relay is wired for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

If an alarm condition occurs, the alarm relay will close, overriding the trouble condition.


Current: 15 mA max.

Operating Voltage: 24 VDC nominal

Resistance: 4 KΩ

To install the MR-201/T for polarity reversal, follow the steps below:

1. Wire the MR-201/T as shown in Figure 4-36.

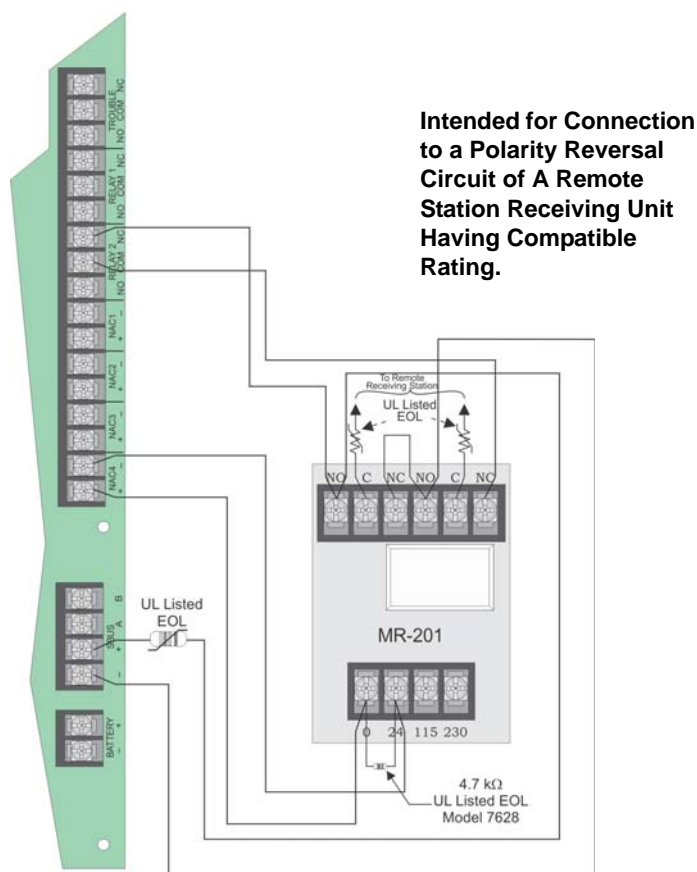

**Figure 4-36 Polarity Reversal Connection Using the MR-201/T Relay**


2. Program the NAC circuit for non silence NAC circuit (see Section 7.5.1).

*Note: If you need to transmit supervisories or trouble conditions, additional relay modules must be add-*

ed. Use relay 1 to transmit supervisory conditions. Use the trouble relay to transmit trouble conditions.

### 4.13.6 Transmitter Activated by Dry Contacts

This section describes the connection of a UL 864 listed remote station transmitter to the 5808 FACP dry contacts. The FACP contacts must be supervised by the remote station transmitter module using end-of-line resistors (ELRs) with a value determined by the transmitter manufacturer. Power is also provided by the remote station transmitter manufacturer. Refer to the remote station transmitter manufacturer's manual for details.

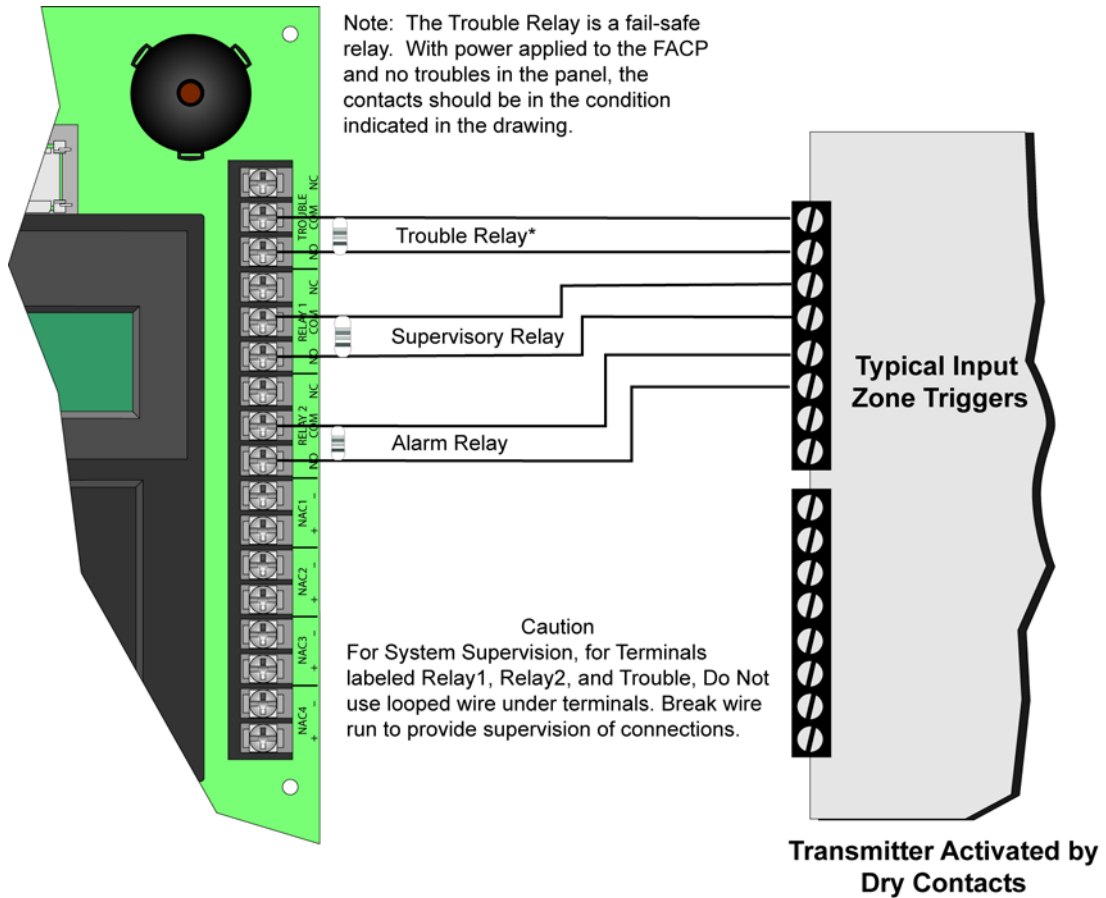





# Section 5

## SK and SD SLC Device Installation

**Caution!**

To avoid the risk of electrical shock and damage to the unit, power should be OFF at the control panel while installing or servicing.

### 5.1 List of SK SLC Devices

The following SK SLC devices can be used with the control panel. See the appropriate section number in this manual or the device installation instructions (packaged with the device) for more information.

*Note: The control panel supports the use of either SK SLC devices or SD SLC devices. You cannot install both SLC device types on the control panel*

| SK Model Number | Model Name/Description   | Section/ Install Sheet PN |
|-----------------|--|---------------------------|
| SK-Photo        | Photoelectric smoke detector                                     | 156-3426-00               |
| SK-Photo-T      | Photoelectric smoke detector with thermal (135°F)                |                           |
| SK-Acclimate    | Multi criteria photoelectric smoke detector with thermal (135°F) |                           |
| SK-Beam         | Reflected beam smoke detector without test feature               | 156-3433-00               |
| SK-Beam-T       | Reflected beam smoke detector with test feature                  |                           |
| SK-ION          | Ionization smoke detector  | 156-3428-001              |
| SK-Duct         | Photoelectric duct smoke detector with extended air speed range  | 156-3432-000              |
| SK-Heat         | Fixed temperature thermal detector (135°F)                       | 156-3429-000              |
| SK-Heat-ROR     | Rate-of-rise thermal detector with 135° fixed temperature        |                           |
| SK-Heat-HT      | Fixed high temperature thermal detector (190°F)                  |                           |
| SK-Pull-SA      | Addressable single action pull station                           | 156-3446-001              |
| SK-Pull-DA      | Addressable dual action pull station                             | 156-3447-001              |
| SK-ISO          | Fault isolator module  | 156-3445-000              |
| SK-Monitor      | Monitor module   | 156-3442-000              |
| SK-Minimon      | Mini monitor module  | 156-3444-000              |
| SK-Monitor-2    | Dual input monitor module  | 156-3435-000              |
| SK-Mon-10       | 10 input monitor module  | 156-3443-000              |
| SK-Relay        | Addressable relay module   | 156-3438-000              |
| SK-RelayMon-2   | Dual relay/monitor module  | 156-3735-000              |
| SK-Relay-6      | Six relay control module   | 156-3439-000              |
| SK-Zone         | Addressable zone interface module                                | 156-3440-000              |
| SK-Zone-6       | Six zone interface module  | 156-3441-000              |
| SK-Control      | Supervised control module  | 156-3436-000              |
| SK-Control-6    | Six circuit supervised control module                            | 156-3437-000              |
| SK-FIRE-CO      | CO Smoke Detector  | 156-3945-000              |

|        |                  |             |
|--------|------------------|-------------|
| B200SR | Sounder Base     | I56-3392-00 |
| B200S  | Sounder Base     | I56-3687-00 |
| B201LP | 6" mounting base | K200-07-00  |
| B224BI | 6" isolator base | I56-0725-00 |
| B224RB | 6" relay base    | I56-2815-00 |
| B501   | 4" mounting base | I56-0357-00 |

## 5.2 List of SD SLC Devices

The following SD SLC devices can be used with the control panel. See the appropriate section number in this manual or the device installation instructions (packaged with the device) for more information.

*Note: The control panel supports the use of either SD SLC devices or SK SLC devices. You cannot install both SLC device types on this control panel.*

| SD Model Number | Model Name/Description  | Section / Install Sheet PN |
|-----------------|---|----------------------------|
| SD505-APS       | Photoelectric smoke detector.   | Section 5.7                |
| SD505-AIS       | Ionization smoke detector   |                            |
| SD505-AHS       | Absolute temperature heat detector. Trip point range from 135°F–150°F (0°C–37°C).   |                            |
| SD505-6AB       | 6" base for use with the SD505-AHS, SD505-AIS, and SD505-APS.   | 150955                     |
| SD505-6IB       | 6" short circuit isolator base for use with the SD505-AHS, SD505-AIS, and SD505-APS   | 151175                     |
| SD505-6RB       | 6" relay base for use with the SD505-AHS, SD505-AIS, and SD505-APS  | 151192                     |
| SD505-6SB       | 6" sounder base for use with the SD505-AHS, SD505-AIS, and SD505-APS SLC devices  | 151191                     |
| SD505-DUCT      | Duct Smoke Detector. Duct Housing including the SD505-APS Analog Photoelectric Smoke Sensor. Intake tubing for duct available in three lengths: SD505-T2 (2.5 foot); SD505-T5 (5 foot); SD505-T10 (10 foot) | 1700-09882                 |
| SD505-DUCTR     | Duct Detector housing with relay base. Duct housing with relay base including SD505-APS Analog Photoelectric Smoke detector pre-installed   | 1700-09882                 |
| SD500-PS/-PSDA  | Single or dual action addressable pull station  | 151177                     |
| SD500-AIM       | Addressable input module (switch input), standard size, DIP switch configured   | 151071                     |
| SD500-MIM       | Mini input monitor module (switch input), small size, DIP switch configured. Fits in single-gang box with manual pull station switch.   | 151071                     |
| SD500-ANM       | Addressable notification module   | 151109                     |
| SD500ARM        | Addressable relay module DIP switch configured.   | 151091                     |
| SD500-SDM       | Addressable smoke detector module. Use to assign an address to a loop of conventional devices.  | 151193                     |
| SD500-LIM       | Line isolator module. Fits in a double gang box.  | 151125                     |
| SD500-LED       | Addressable LED driver module. Capable of driving up to 80 LEDs. Up to 40 SD500-LED Driver Modules can be used per SLC loop.  | 151232                     |
| SD505-DTS-K     | Remote test switch & LED indicator for the SD505-DUCTR  | 1700-09882                 |

## 5.3 Maximum Number of Devices

---

The 5808 supports SK or SD devices on one 5808 system. The maximum number of devices per system varies depending on device protocol. Device support is as follows:

- SK Devices—A 5808 system can support a total of 99 SK detectors *and* 99 SK modules.

**OR**

- SD Devices—A 5808 system can support a total of 127 SD SLC detectors and modules, in any combination.

## 5.4 Wiring Requirements for SLC Devices

---

The following information applies to all SLC devices. Refer to the section that describes the type of device you are installing for details.

### 5.4.1 Wiring SLC in Style 4 (Class B) Configuration

No special wire is required for addressable loops. The wire can be untwisted, unshielded, solid or stranded as long as it meets the National Electric Code 760-51 requirements for power limited fire protective signaling cables. Wire distances are computed using copper wire.

Maximum wiring resistance is 40 ohms for SK device and 50 ohms for SD devices.

Maximum loop length depends on the wire gauge. See Table 5-1 and Table 5-2.


**Table 5-1 Maximum wiring distance for SK Modules**

| Wire Gauge | Max. Distance for SK |
|------------|----------------------|
| 22 AWG     | 1200 feet            |
| 18 AWG     | 3100 feet            |
| 16 AWG     | 4900 feet            |
| 14 AWG     | 7900 feet            |
| 12 AWG     | 10,000 feet          |

**Table 5-2 Maximum wiring distance for SD Devices**


| Wire Gauge | Max. Distance for SD |
|------------|----------------------|
| 22 AWG     | 1500 feet            |
| 18 AWG     | 3900 feet            |
| 16 AWG     | 6200 feet            |
| 14 AWG     | 10,000 feet          |

Figure 5-1 and Figure 5-2 show how wire length is determined for out-and-back tap and T-tap style wiring.

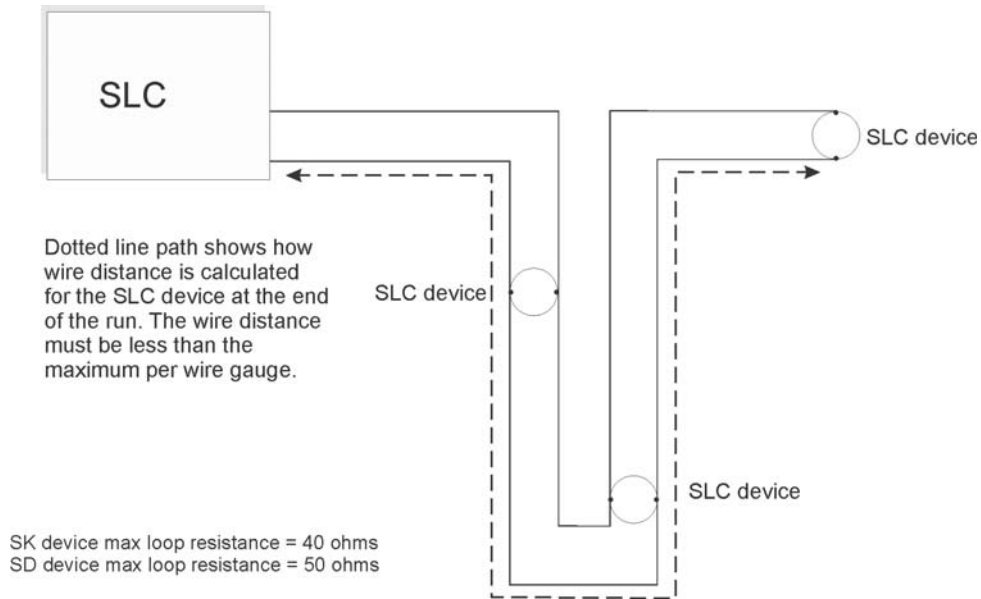

**Figure 5-1 Calculating wire run length for a simple out and back tap**

When using T-taps, the total length of all taps and the main bus must not exceed 40,000 feet. This requirement must be met in addition to the maximum distance requirements for the various wire gauges.


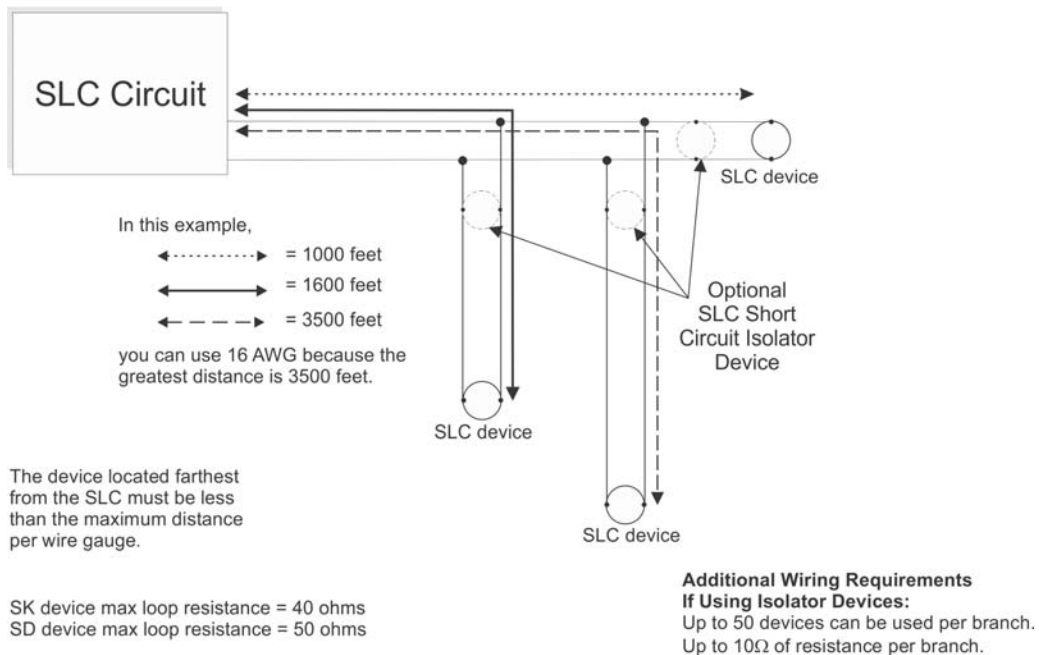


**Figure 5-2 Calculating Wire Run Length for a T-tap**

## 5.4.2 Wiring SLC in Style 6 & 7 (Class A) Configuration

Figure 5-3 illustrates how to wire the SLC loop for Style 6 or Style 7 Class A installations.

*Note: Style 6 does not use short circuit isolator devices.*

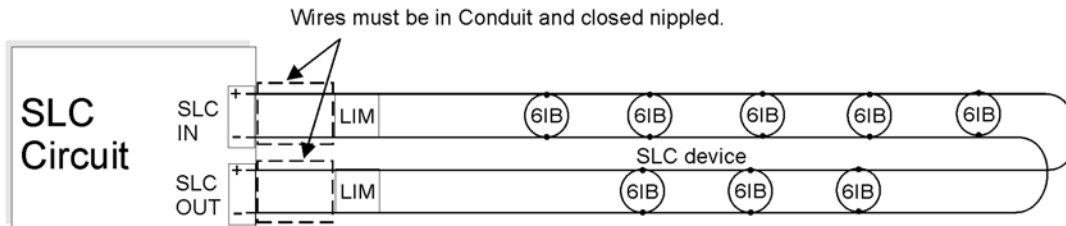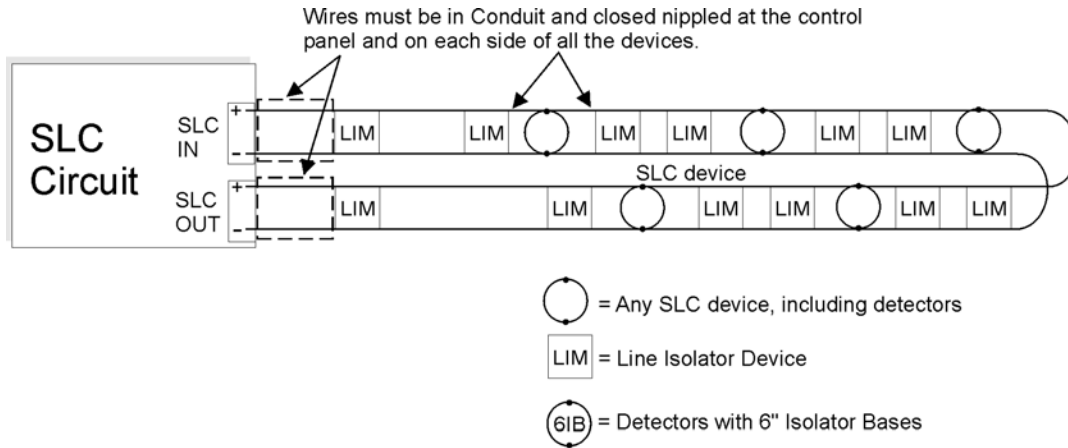

**Figure 5-3 Class A SLC Configuration**

*Note: No t-taps allowed on class A SLC loops.*

### Caution

For proper system supervision do not use looped wire under terminals marked SLC + and – of the SLC device connectors. Break wire runs to provide supervision of connections.

## 5.5 SK Detector Installation

This section describes how to install heat and smoke detectors. All detectors ship with installation instructions. Refer to the detector's installation instructions for more detailed information.

This information applies to the following SK models:

- SK-Photo Photoelectric Smoke Detector
- SK-Photo-T Photoelectric Smoke Detector with Thermal
- SK-Acclimate Photoelectric Smoke Detector with Thermal
- SK-Heat Fixed Temperature Detector
- SK-Heat-T High Temperature Thermal Detector
- SK-Heat-ROR Rate-of-Rise Thermal Detector
- SK-ION Ionization Smoke Detector
- SK-FIRE-CO CO Smoke Detector

### 5.5.1 Wiring SK detectors:

1. Wire device bases as shown in Figure 5-4.
2. Set the address for each device as described in Section 5.6.

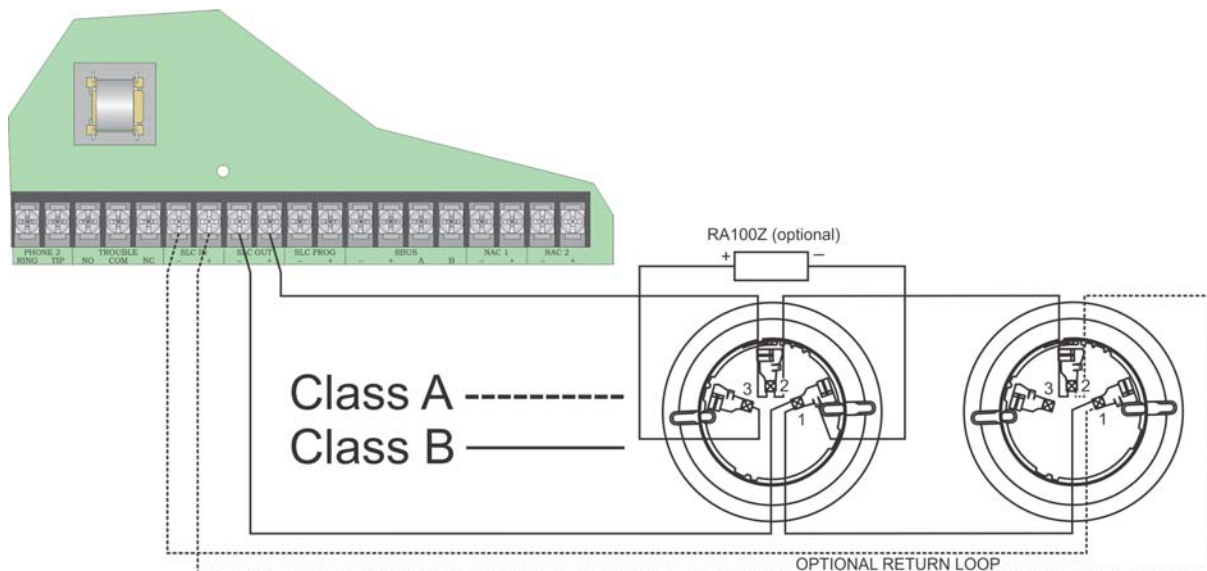


Figure 5-4 Heat and Smoke Detector Connection to the Panel.

## 5.6 Addressing SK SLC Devices

All SK devices are addressed using the two rotary dials that appear on the device board. Use the *ONES* rotary dial to set the ones place in a one or two digit number, and use the *TENS* rotary dial to set the tens place in a two digit number.

SK device addresses are handled differently than SD device addresses. The control panel recognizes when an SK detector or SK module is installed. For this reason, SK detectors can be assigned any unique address from 1 to 99, and SK modules can be assigned any unique address from 1 to 99. Unlike SD detectors and modules which share addresses 1 through 99, there can be an SK detector using address 1 and an SK module using address 1. 0 is an invalid address.

**Example 1:** To select device address 1, turn the *ONES* rotary dial to **1** and the *TENS* rotary dial to **0** as shown in Figure 5-5.

**Example 2:** To select device address 42, turn the *ONES* rotary dial to **2** and the *TENS* rotary dial to **4** as show in Figure 5-5.

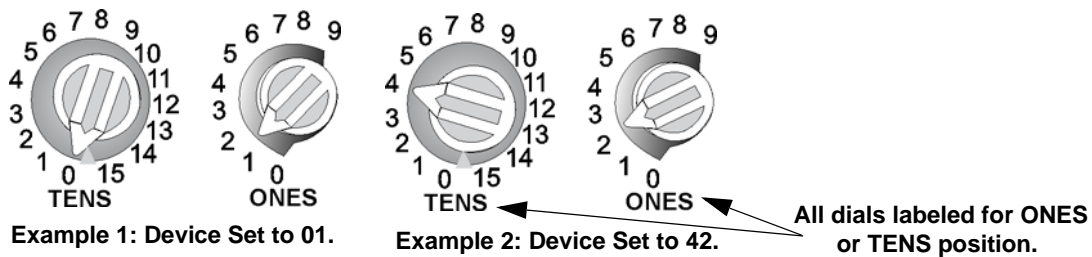


Figure 5-5 SK SLC Device Addressing Using Rotary Dials

## 5.7 SD Detector Installation

The information in this section applies to the following SD models: SD505-AHS Heat Detector, SD505-AIS Ionization Smoke Detector, and SD505-APS Photoelectric Smoke Detector.

### 5.7.1 Wiring SD Detectors

1. Wire device bases as shown in Figure 5-6.
2. Set the address for each device as described in Section 5.8.

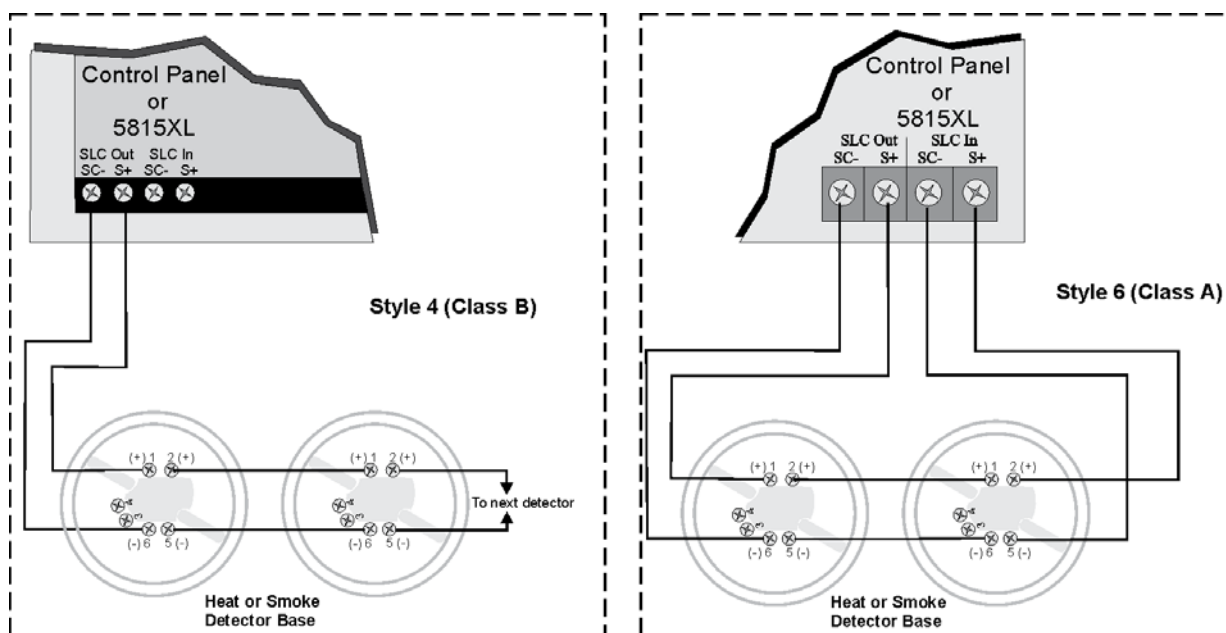


Figure 5-6 Heat or Smoke Detector Connection to the FACP (Class B)



## 5.8 Addressing SD Devices

This section tells how to address detectors and modules.

### 5.8.1 SD505-APS, SD505-AHS, & SD505-AIS

The SD505-APS photoelectric smoke detector, SD505-AHS heat detector, and SD505-AIS ionization smoke detector are easily addressed at the FACP. The Installer Code is required to perform this task.

**To address a SD505-APS, SD505-AHS, or SD505-AIS:**

1. Connect a detector base temporarily to the programming terminals as shown in Figure 5-7. (You can use the same base for each detector).

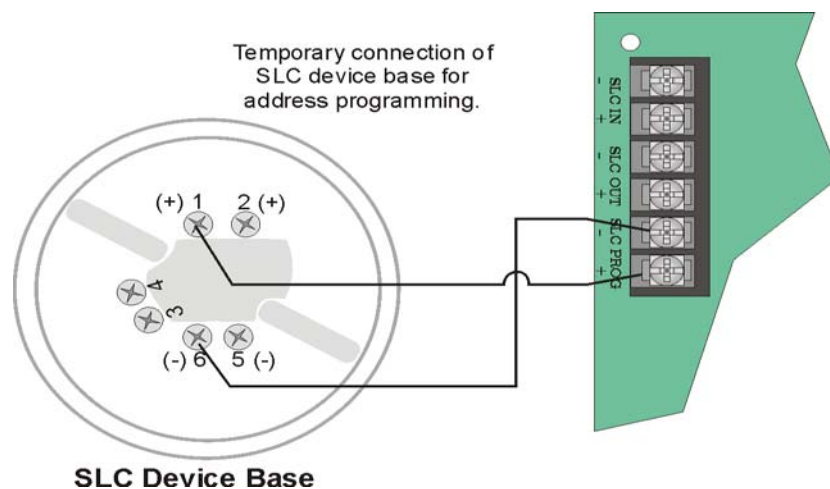



Figure 5-7 Temporary Connection of Detector Base to Panel for Addressing

2. Enter the Installer code, then press **ENTER**.
3. Select **2** for Point Functions.
4. Select **3** for Set SLC Dev Addr.
5. Select "Yes" by pressing the **▲** up arrow, then press **ENTER**. (The panel will go into trouble at this point. You can use the **SILENCE** key to stop the PZT. The trouble will clear automatically when the panel reinitializes when you finish programming.)
6. When the wait message clears, the following options display:
  - 1** for Read Address. Use to read (or check) a single detector's address.
  - 2** for Write Address. Use to program a single detector's address.
  - 3** for Seq. Programming. Use to program more than one detector in sequential

order.

7. If you are changing addresses, write the programmed address on the back of the device.
8. To exit press  left arrow until fully exited.

## 5.8.2 SLC Devices with DIP Switches

Input and relay module addresses are set using the DIP switches on the module board. The chart below shows the available addresses. For example, to select address 3, place DIP switches 1 and 2 in the up position. The range of valid addresses is 1-127. 0 is an invalid address.

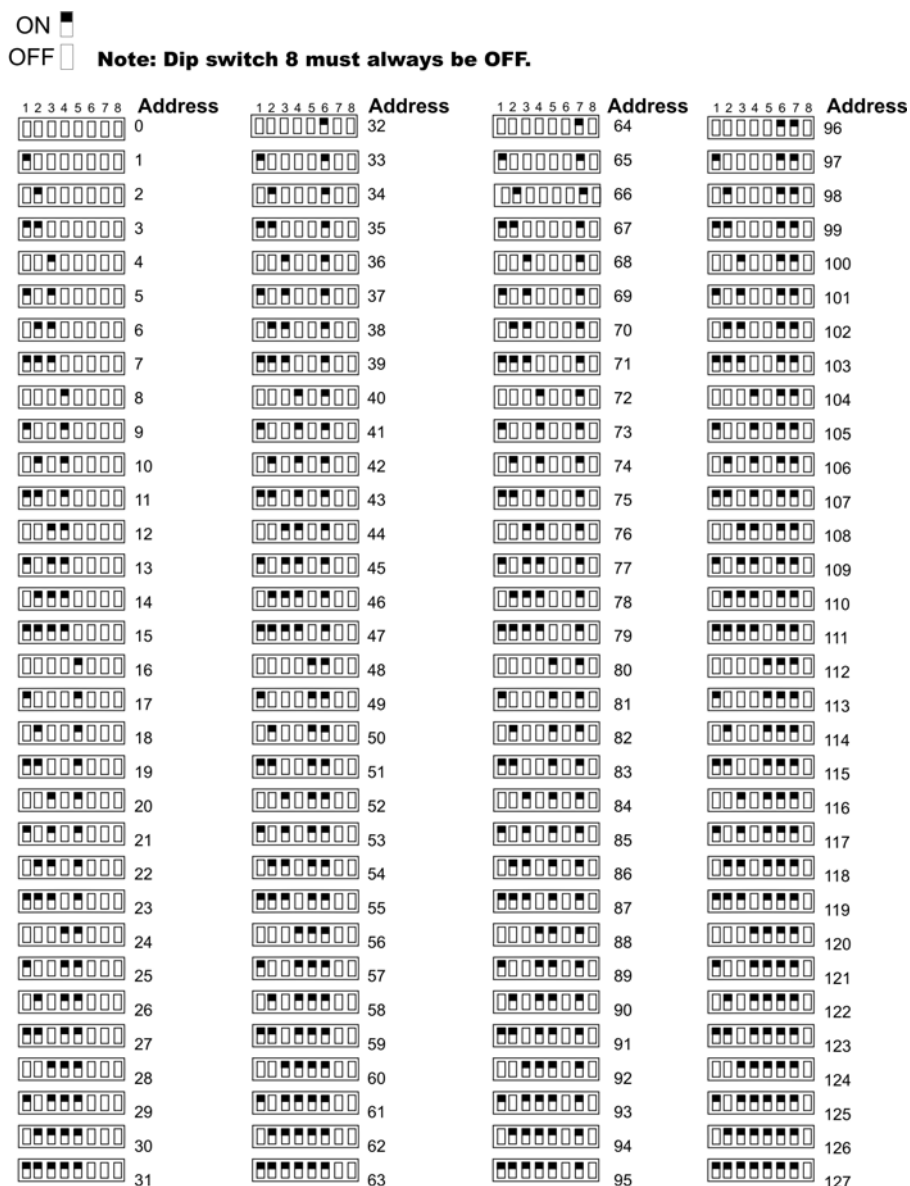


Figure 5-8 SLC Device Addressing Using DIP Switches

---

## Section 6

# Programming Overview

---

---

This section of the manual is intended to give you an overview of the programming process. Please read this section of the manual carefully, especially if you are programming the control panel for the first time.

The JumpStart feature automates many programming tasks and selects default options for the system. You will run JumpStart at least once when you are installing the system. See Section 6.1 for details. After you run JumpStart, you may need to do some additional programming depending on your installation. Section 7 of this manual covers manual programmable options in detail.

Programming the panel can be thought of as a three part process. You must program:

- System options. These are options that affect general operation of the panel (see Section 7.7 for details).
- Options for input points and zones. These are primarily options that control detection behavior of devices (see Section 7.6 for details).
- Options for output points and groups. This includes selecting characteristics for output groups and mapping output circuits to output groups (see Section 7.6 for details).

## 6.1 JumpStart Autoprogramming

---

The JumpStart feature allows for faster system setup. When you run JumpStart (immediately after addressing SLC devices), the system scans devices on all SLC loops and determines device type (for example, ionization smoke detector or heat sensor) and selects some system options based on the device type. This saves the installer from having to program options for each device. Depending on the application, the installer may need to make some changes after JumpStart completes.

See Section 6.1.3 for complete details about running JumpStart.

### IMPORTANT

JumpStart is intended to be run one time only, immediately after SLC devices have been addressed and connected. JumpStart will reset all manually programmed options to default settings. Do not run JumpStart after you have configured the system.

## 6.1.1 Input Points

JumpStart will determine the number and type of input points (detectors or contact monitor modules) on each SLC loop. JumpStart assigns the correct detector type (heat, ionization or photoelectric), so the installer does not need to edit device type for detectors. Any contact monitor modules on the system will be assigned type "Manual Pull." The installer will need to manually change the switch type if manual pull is not correct.

JumpStart creates one zone (Zone 1) and assigns all input points to Zone 1. Zone 1 is mapped to Output Group 1. After JumpStart completes, you can re-map to configure a multiple zone/output group system (see Section 7.4.1.3). For a general explanation of mapping, see Section 6.2.

## 6.1.2 Output Points

JumpStart creates three output groups and assigns output circuits as follows:

Circuits 1-4:

Configured as Notification and assigned to Group 1. JumpStart automatically programs Zone 1 to activate Group 1 using constant on output.

Circuit 5 (Relay 1):

Assigned to Group 124. JumpStart automatically programs Zone 1 to activate Group 124 using constant on output when a supervisory condition occurs.

Circuit 6 (Relay 2):

Assigned to Group 125. JumpStart automatically programs Zone 1 to activate Group 125 using constant on output when an alarm occurs.

Addressable output points (Relay modules, NAC Modules, Sounder Bases, Relay Bases):

All addressable relay devices will be configured as "Output Pt" (general purpose output point) and assigned to Group 1.



*Note: Relay output is constant even if the zone activating the relay is programmed with an output pattern.*




## 6.1.3 Running JumpStart


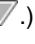

Run JumpStart immediately after you have addressed and connected all input devices (detectors, pull stations, and so on) and output devices (notification appliances, relays, and so on).

*Note: If you need to install a few devices after you have run JumpStart, you can install them manually. Follow instructions in Section 7 for configuration.*

To run JumpStart, follow these steps.

1. Press  to view the Main Menu.
2. From the Main Menu Select  for the Program Menu.

3. From the next menu, select **6** for JumpStart.
4. The message "WARNING Will DELETE all system options" displays on the LCD. Select Yes to continue. A series of messages displays for the next several seconds. JumpStart scans the SLC loops for devices. This can take several minutes, depending on the number of devices attached.
5. When the message, "SLC FAMILY" flashes. Press  to accept SK, or press  to change to SD and press  to accept.
6. When the message "Configuring System Done" displays, press any key to continue.
7. Select one of the following options from the menu that displays.

|                              |  |
|------------------------------|--|
| <b>1</b> - Review System     | Press <b>1</b> if you need to review the JumpStart configuration.  |
| <b>2</b> - Repeat JumpStart  | Press <b>2</b> if you need to rerun JumpStart for any reason.  |
| <b>3</b> - Accept Config.    | <ol style="list-style-type: none"> <li>1. If you are ready to make the JumpStart configuration permanent, select <b>3</b>.</li> <li>2. The system will ask you if the installation contains duct detectors. If there are none, select <b>2</b> for No and skip to Step 8. If the system contains duct detectors, select <b>1</b> for Yes and continue with Step 3.</li> <li>3. From the list that displays, select the SLC device that contains the duct detectors.</li> <li>4. The first photoelectric or ionization detector on the system will display. Select <b>1</b> for DUCT and <b>2</b> for NonDUCT.</li> <li>5. Press  to select the next detector. Select <b>1</b> for DUCT and <b>2</b> for NonDUCT. Continue until all duct detectors have been selected. (Note: You can move backwards through the list with .)</li> <li>6. When you reach the last detector on this device, press .</li> <li>7. The system will ask you if there are more duct detectors in the system. If there are, select <b>1</b> for Yes and repeat from Step 3. If there are no more duct detectors, select <b>2</b> for No and continue with Step 8.</li> <li>8. The system will restart in 10 seconds. You can press <b>1</b> to restart immediately. Do not select <b>2</b> for System Diagnostics. (This feature is for use in testing at the factory.)</li> <li>9. After the system resets, it will use the new JumpStart configuration.</li> </ol> |
| <b>4</b> - Enter Programming | To go directly to Program mode to configure any devices, press <b>4</b> . The Programming menu appears and you can begin programming   |


## 6.2 Mapping Overview

This section of the manual is an overview of mapping. Details about how to select mapping options appear in the appropriate subsections in Section 7.

Mapping is an important concept with the control panel. In general terms, mapping is assigning or linking events to outputs that should activate when events occur. You do this by assigning input points to input zones, output points to output groups and then linking or mapping zones and output groups.

Figure 6-1 is a brief overview of the concept of mapping. The next several pages of the manual show these subjects in detail.

In its simplest application, mapping is determining which outputs are activated by which inputs.

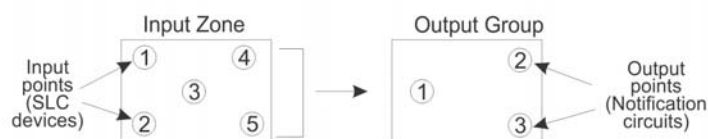

Because the Control Panel programming is so flexible, there are a number of uses for mapping, as shown in the diagram below.

Input zones are mapped by event type to output groups. Cadence patterns are assigned as part of the mapping information. Up to 8 groups/patterns can be selected for each event.

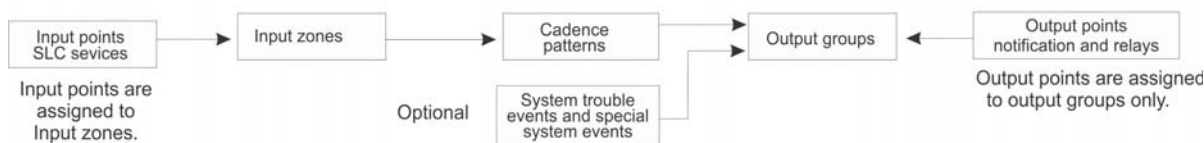


Figure 6-1 Mapping Overview

## 6.2.1 Input Point Mapping

Input points are assigned to input zones. Any input point can be assigned to any input zone. (Input points can be assigned to one zone only. An input point can be designated as "Unused," which means it has not been assigned to a zone.)

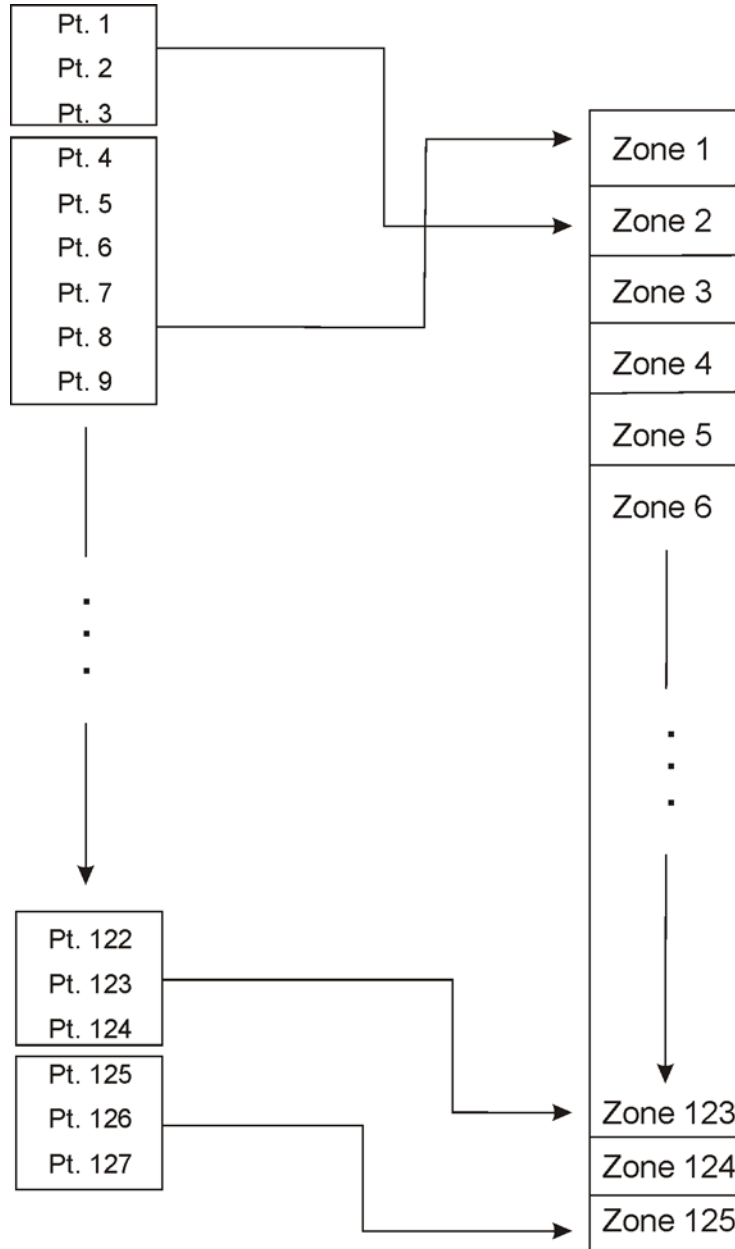


Figure 6-2 Input Point Assignment Example

## 6.2.2 Output Circuit Mapping

Figure 6-3 is a simple example showing how to assign notification and relay output circuits to groups. For an example of a simple floor above/floor below application, see Figure 6-5.

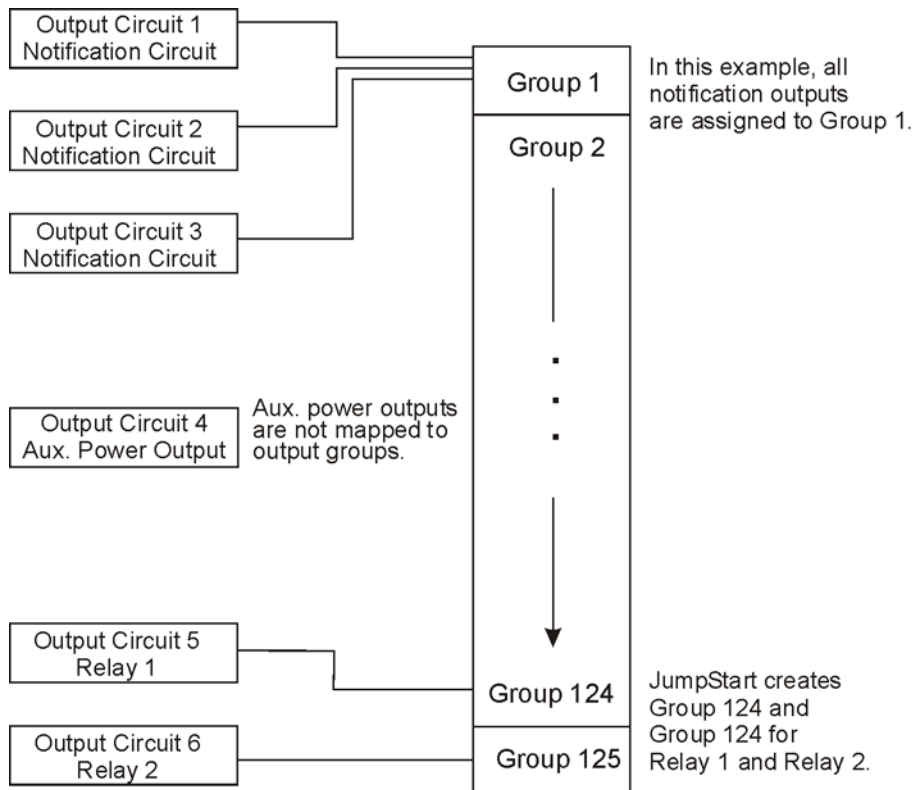


Figure 6-3 Assigning Output Circuits to Groups (Example)



### 6.2.3 Zone Event Mapping

There are 11 types of events that can occur in zones (see below). For each event type, you can activate up to 8 output groups and patterns. If it is necessary to map to more than 8 output groups, an output group template may be used (see Section 7.5.5 for information on output group templates). Event types are:

- Manual Pull Alarm
- Water Flow Alarm
- Detector Alarm (heat or smoke detectors)
- Aux 1 and Aux 2 Alarm (user-specified alarm types)
- Pre-alarm
- Supervisory
- Trouble
- Status Point
- CO Alarm
- CO Supervisory

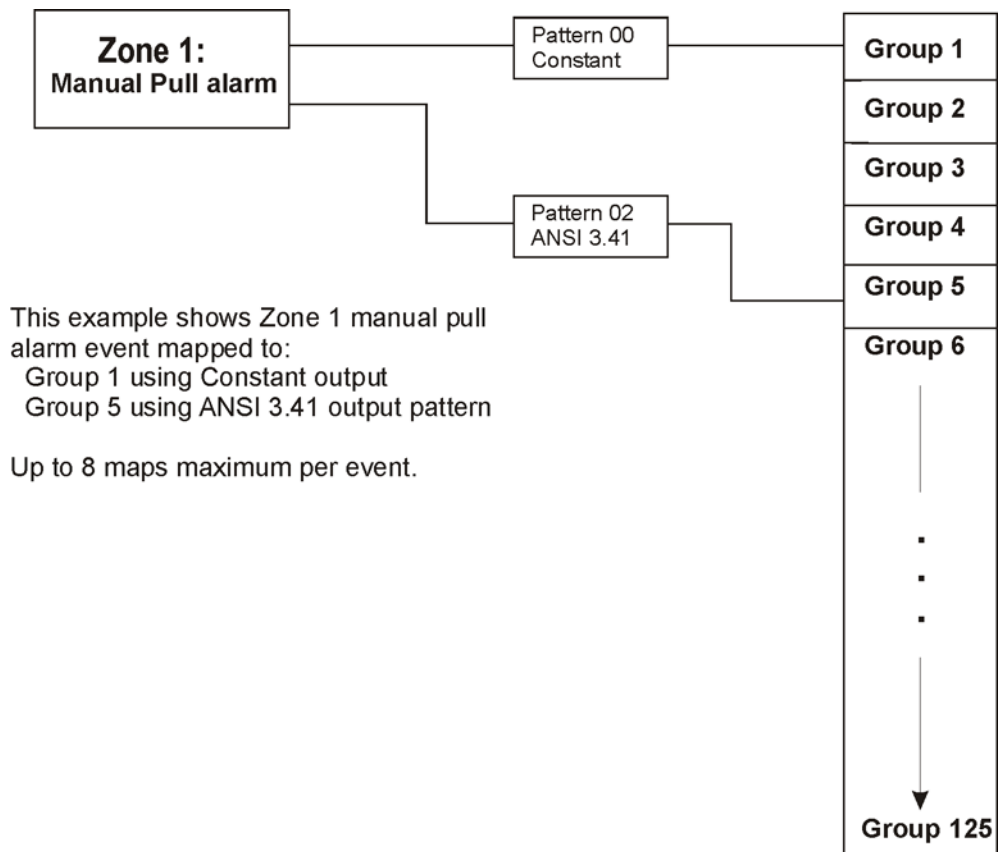


Figure 6-4 Example of Zone Events Mapped to Output Groups and Patterns


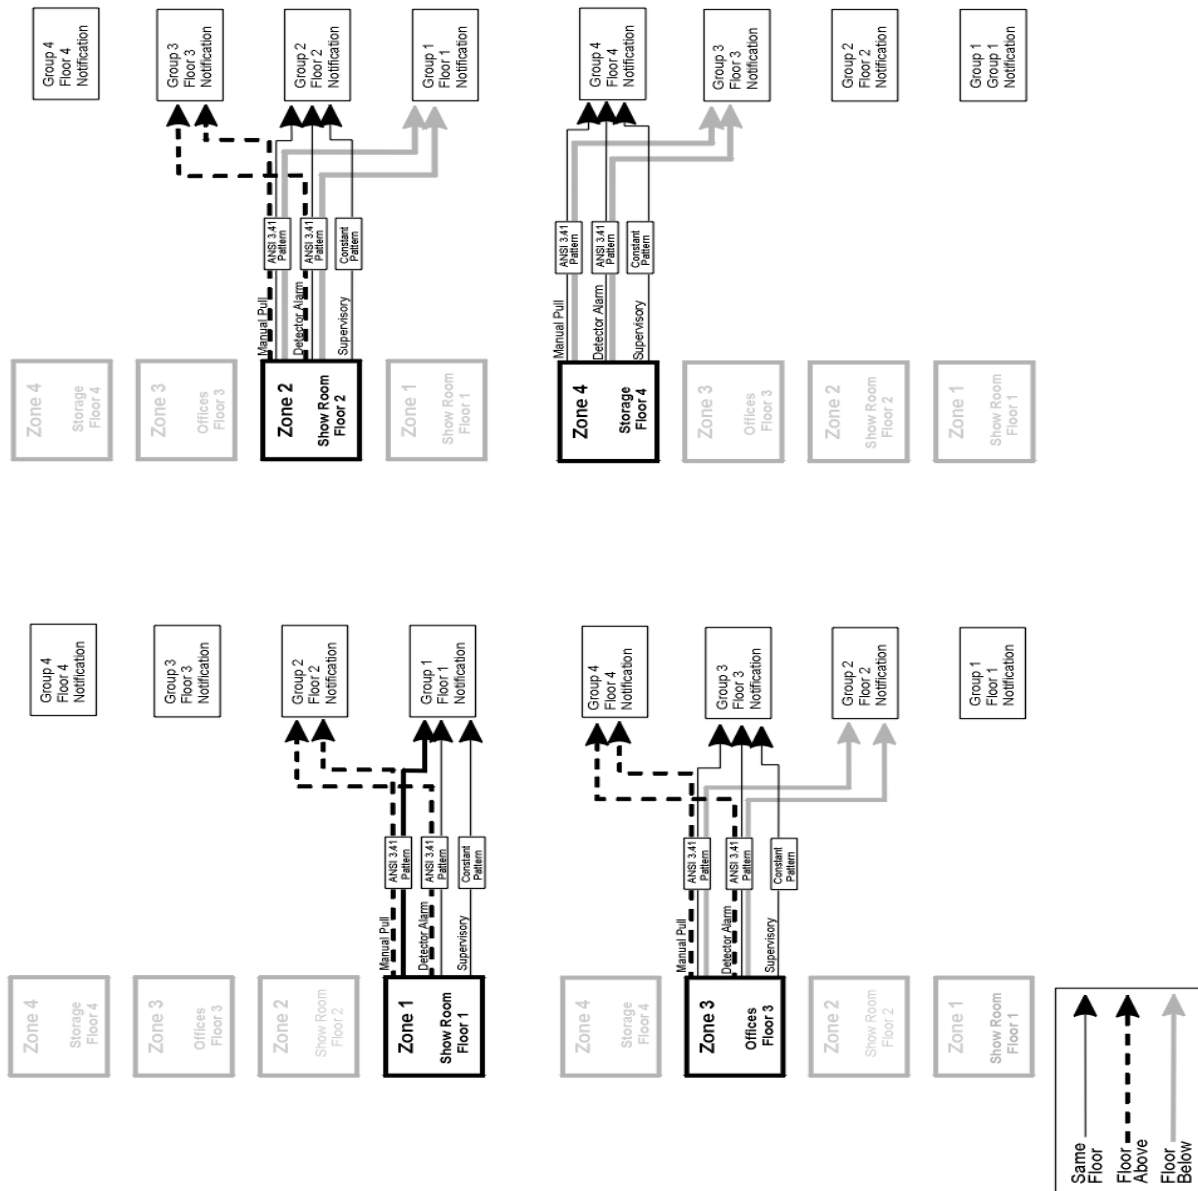


Figure 6-5 Example of Zone Events Mapped to Output Groups and Patterns

## 6.2.4 Mapping LED Points

Figure 6-6 is a simple example showing how LED points are mapped to zones and output groups. Typically you would create two output groups for each zone, one for alarms and one for troubles. (LED points are available when Models 5865-3/4 and/or 5880 are used with the system.)

### Mapping LEDs to Zones and Output Groups

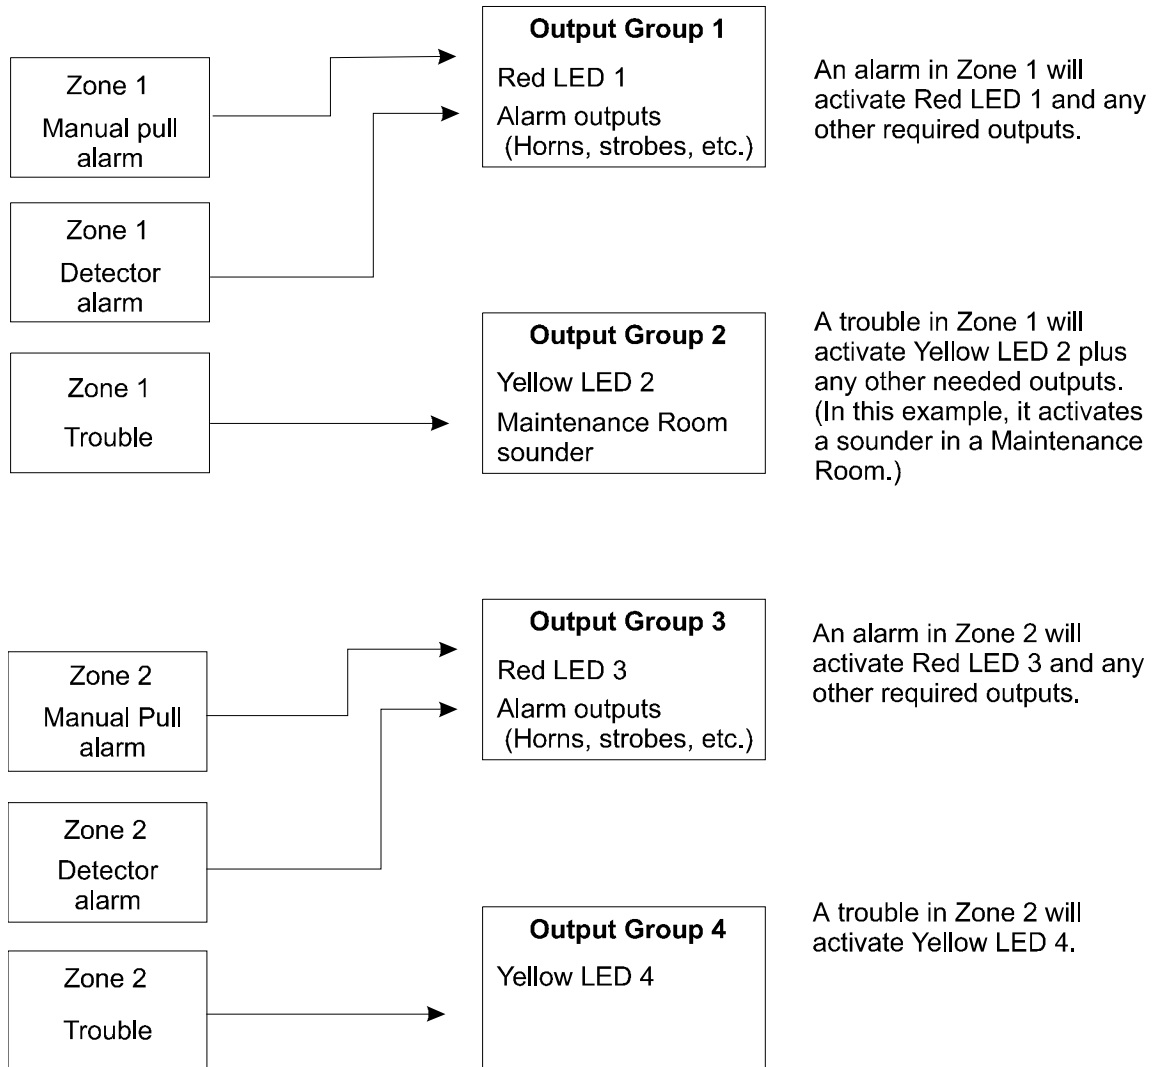

**Figure 6-6 Example of LED Points Mapped to Output Groups (applies to Models 5865-3/4 and 5880)**

## 6.3 Programming Using the 5660 Silent Knight Software Suite

---

You can use the 5660 Silent Knight Software Suite (SKSS) to program the control panel onsite or remotely. SKSS is an optional software package that lets you easily program the control panel using a Windows-based computer and a modem\* (not sold by Silent Knight). When using SKSS, you can set up the programming options for the panel, save the options in a file, then download the file to the panel. You connect to the control panel directly using the control panel's onboard USB or serial port or remotely using a modem. If you need to connect to an older control panel that does not have a USB port, and your laptop does not have a serial port, use a USB to serial converter. SKSS includes an Online help system and a manual. See the SKSS manual (PN 151240) for more information.

\* See Section 1.3 for a list of modems that have been tested for compatibility with the control panel and SKSS.

## 6.4 Programming Using an Annunciator



---

You can program the control panel from a system annunciator, using either the control panel's on-board annunciator or a Model 5860 Remote Annunciator.

The following subsections describe programming basics, including a description of editing keys available for programming and how to move through programming menus. Section 7 contains specific information about individual programming options.

### 6.4.1 Entering / Exiting the Programming Menu

**To enter the Programming Menu:**

1. Enter the Installer Code (factory programmed default code is 123456).
2. The display prompts you to press the  or  key to bring up the Main Menu (see Figure 6-7).

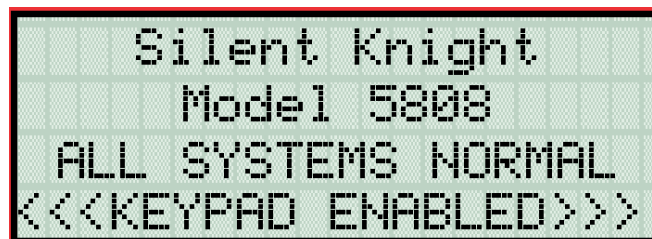


Figure 6-7 Keypad Enabled Screen


3. Press **7**. The menus described in Section 7 of this manual will display. Section 6.5 of this manual is a quick reference listing all programmable options and JumpStart defaults.

**To exit the programming menu:**

When you have completed working with the menus, press ◀ (left arrow) several times until you are exited from programming mode. Two prompts will display. The first prompt is to make sure you intended to leave the Program Menu (select Yes or No as appropriate). The second prompt is for accepting all changes. If you select No, any changes you have made since you entered the Program Menu will have no effect.

**6.4.2 Moving through the Menu**

Figure 6-8 shows how to move through Program Menu screens, using the System Options screen as an example.

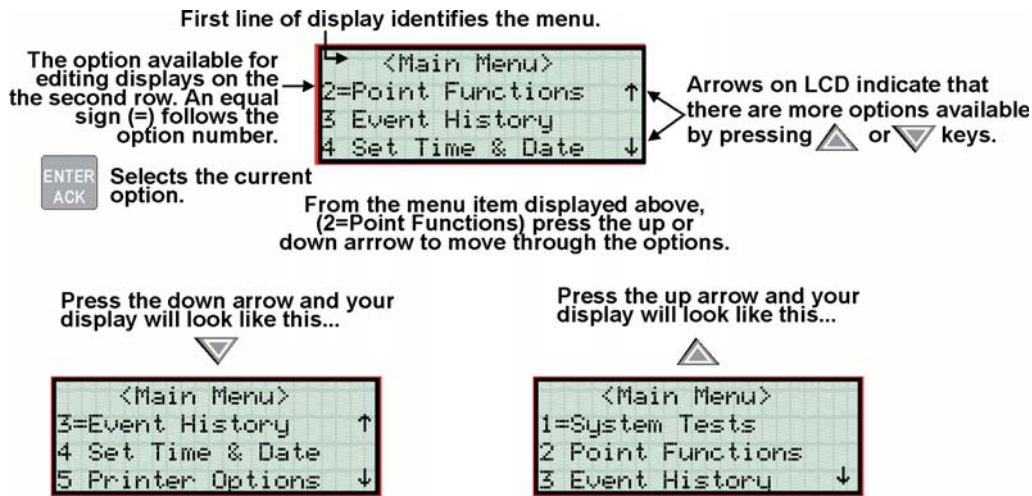

**Figure 6-8 Moving through Program Menu (System Options Sub-Menu Used as an Example)**

**6.4.3 Selecting Options and Entering Data**


There are several ways to make programming selections using the control panel depending on which screen you are currently using. The chart below is a generic explanation.

**Table 6-1**

| To                              | Press  |
|---------------------------------|--|
| Select from a menu.             | Enter the number of the option.  |
| Enter numeric data.             | Press the appropriate number on the annunciator.   |
| Enter text (alphanumeric data). | Enter each letter individually by pressing and holding any numeric key until the one you wish to select displays. Then press ▶ (right arrow) to select the letter. |
| Select from a scrolling list.   | Use ▲ (up arrow) and ▼ (down arrow) to move through a list of available options. When the option you want to select is displayed, press  .                         |

## 6.4.4 Editing Keys

The keys shown in Figure 6-9 are available for use when you are in the Program Menu.

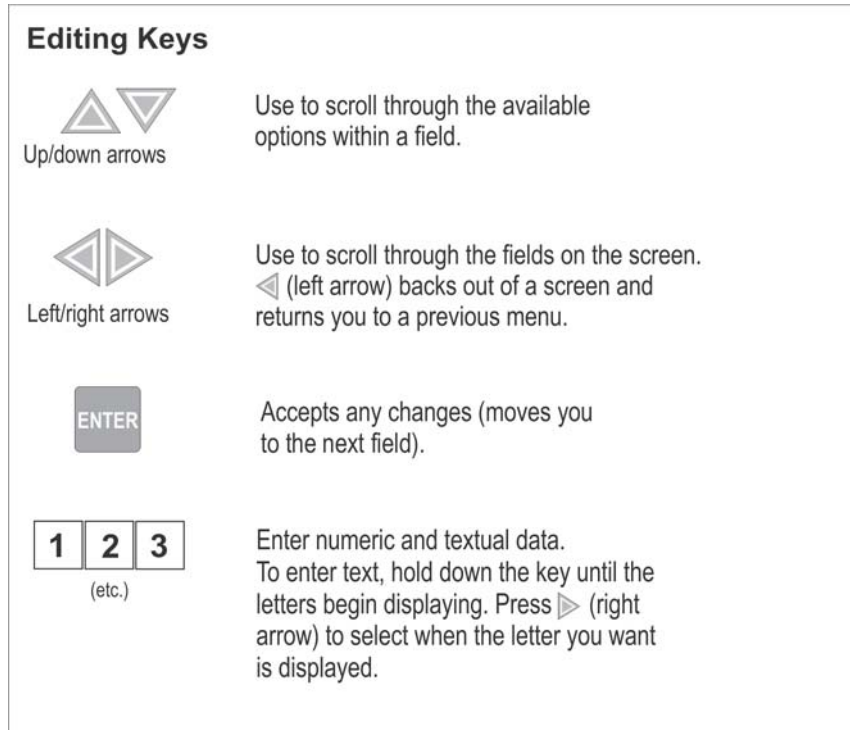

**Figure 6-9 Editing Keys Available from Program Menu**

## 6.5 Programming Menu Quick Reference

This section of the manual lists all Program Menu options in the order they appear on the sub-menus. Default settings are indicated in text or marked with an asterisk. The comments column provide quick information and a reference to a section (if applicable) which has more detailed information.

| Menu                | Options/Defaults        |                     |                   |                   | Comments                      |                 |
|---------------------|-------------------------|---------------------|-------------------|-------------------|-------------------------------|-----------------|
| SLC Family          | SD                      |                     |                   |                   | Section 7.2                   |                 |
|                     | SK                      |                     |                   |                   |                               |                 |
| Module              | Edit Module             | Select Module       | Enter Module Name | Select Class      | Section 7.3.1                 |                 |
|                     | Add Module              | 5860-Keystation     |                   |                   | Section 7.3.2                 |                 |
|                     |                         | 5824-Ser/Par/IO     |                   |                   |                               |                 |
|                     |                         | 5496 NAC Expand     |                   |                   |                               |                 |
|                     |                         | 5880-LED/IO Dev     |                   |                   |                               |                 |
|                     |                         | 5865-LED Annunc     |                   |                   |                               |                 |
| Delete Module       | List of Modules         |                     |                   | Section 7.3.3     |                               |                 |
| View Module List    | List of Modules         |                     |                   | Section 7.3       |                               |                 |
| Zone                | Edit Zone               | Select Zone to Edit | Edit Zone Name    | Enter Name1       | Section 7.4.1                 |                 |
|                     |                         |                     |                   | Enter Number1     |                               |                 |
|                     |                         |                     |                   | Enter Name2       |                               |                 |
|                     |                         |                     |                   | Enter Number2     |                               |                 |
|                     |                         |                     | Zone Properties   | Verification Type | *1 Count                      | Section 7.4.1.2 |
|                     |                         |                     |                   |                   | 2 Count                       |                 |
|                     |                         |                     |                   |                   | Alarm Ver.                    |                 |
|                     |                         |                     |                   |                   | PAS                           |                 |
|                     |                         |                     |                   |                   | SNGL ILOCK                    |                 |
|                     |                         |                     |                   |                   | DBL ILOCK                     |                 |
|                     |                         |                     | Heat Temp Set     | 135° to 150°F     | Section 7.4.1.2               |                 |
|                     |                         |                     | Zone Outputs      | Manual Pull (MP)  | (Groups 01 & 250, Pattern 00) | Section 7.4.1.3 |
|                     |                         |                     |                   | Water Flow (WF)   |                               |                 |
| Detector Alarm (DE) |                         |                     |                   |                   |                               |                 |
| Aux 1 (A1)          | no group                |                     |                   |                   |                               |                 |
| Aux 2 (A2)          |                         |                     |                   |                   |                               |                 |
| Pre-alarm (PR)      |                         |                     |                   |                   |                               |                 |
| Supervisory (SU)    | (Group 249, Pattern 00) |                     |                   |                   |                               |                 |
| Trouble (TR)        | no group                |                     |                   |                   |                               |                 |
| CO Alarm (CO)       | no group                |                     |                   |                   |                               |                 |

| Menu                | Options/Defaults                     |                                  |                   |                        |                                   | Comments                                   |                               |               |
|---------------------|--------------------------------------|----------------------------------|-------------------|------------------------|-----------------------------------|--|-------------------------------|---------------|
| Zone<br>(cont.)     | Edit Zone                            | Select Zone to Edit              | Zone Accessry Opt | Fire Cadence           | 00-23                             | Section 7.4.1.5                            |                               |               |
|                     |                                      |                                  |                   | CO Cadence             | 00-23                             |  |                               |               |
|                     |                                      |                                  |                   | Local Zone             | Yes or No                         |  |                               |               |
|                     | Add Zone                             | Adds next available zone number. |                   |                        |                                   | Section 7.4.2                              |                               |               |
|                     | Delete Zone                          | Select Zone to be Deleted        |                   |                        |                                   | Section 7.4.3                              |                               |               |
| View Zone Points    | List of all points in selected zone. |                                  |                   |                        | Section 7.4.4                     |  |                               |               |
| Group <sup>1</sup>  | Edit Group                           | Select Group                     | Group Name        | Enter Name1            |                                   | Section 7.5.1.1                            |                               |               |
|                     |                                      |                                  |                   | Enter Number1          |                                   |  |                               |               |
|                     |                                      |                                  |                   | Enter Name2            |                                   |  |                               |               |
|                     |                                      |                                  |                   | Enter Number2          |                                   |  |                               |               |
|                     |                                      |                                  | Group Properties  | Latching Options       | *Non-Latching                     | Section 7.5.1.2                            |                               |               |
|                     |                                      |                                  |                   |                        | Latching                          |  |                               |               |
|                     |                                      |                                  |                   | Silencing Options      | *SILENCE                          | Silenceable Section 7.5.1.2                |                               |               |
|                     |                                      |                                  |                   |                        | NON-SIL                           | Non-Silenceable Section 7.5.1.2            |                               |               |
|                     |                                      |                                  |                   |                        | Auto Unsilence                    | Auto Unsilenced Section 7.5.1.2            |                               |               |
|                     |                                      |                                  |                   |                        | SIL-INHIB                         | Silence after inhib delay. Section 7.5.1.2 |                               |               |
|                     |                                      |                                  |                   |                        | SHUT-DOWN                         | Automatic Shutdown Section 7.5.1.2         |                               |               |
|                     |                                      |                                  |                   | Group Active With:     | Group Activates for all Man. Pull | *No Section 7.5.1.2                        |                               |               |
|                     |                                      |                                  |                   |                        | Group Activates for Fire Drill    | *Yes Section 7.5.1.2                       |                               |               |
|                     |                                      |                                  |                   |                        | Group Activates for Aux 1         | *No Section 7.5.1.2                        |                               |               |
|                     |                                      |                                  |                   |                        | Group Activates for Aux 2         | *No Section 7.5.1.2                        |                               |               |
|                     |                                      |                                  |                   |                        | Ignore Global Cadence             | *No Section 7.5.1.2                        |                               |               |
|                     |                                      |                                  | Add Group         |                        |                                   |  |                               | Section 7.5.2 |
|                     |                                      |                                  | Delete Group      | Select Group to Delete |                                   |  |                               | Section 7.5.3 |
|                     |                                      |                                  | View Group Points | Select Group           |                                   |  |                               | Section 7.5.4 |
|                     |                                      |                                  | Edit OPG Template | Select Template Number | Select Group                      |  | 0 = Constant. Section 7.4.1.4 | Section 7.5.5 |
| Include in template | Yes                                  |                                  |                   |                        |                                   |  |                               |               |
|                     | No                                   |                                  |                   |                        |                                   |  |                               |               |
| Select Pattern      | 0-20                                 |                                  |                   |                        |                                   |  |                               |               |



| Menu          | Options/Defaults |          |                  | Comments             |                   |                   |
|---------------|------------------|----------|------------------|----------------------|-------------------|-------------------|
| Point         | SLC Loop         | Enter Pt | UNUSED           |                      |                   |                   |
|               |                  |          | SD DETECTOR      | PHOTO                | Select zone       | Section 7.6       |
|               |                  |          |                  | ION                  |                   |                   |
|               |                  |          |                  | HEAT                 |                   |                   |
|               |                  |          |                  | PHOT DUCT            |                   |                   |
|               |                  |          |                  | ION DUCT             |                   |                   |
|               |                  |          | SD SUP DETECTORS | SUP DUCT             | Latch             |                   |
|               |                  |          |                  | SUP ION              | Non latch         |                   |
| Point (cont.) | SLC Loop (cont.) | Enter Pt | SK DETECTORS     | PHOTO                |                   |                   |
|               |                  |          |                  | PHOTO DUCT           |                   |                   |
|               |                  |          |                  | PHOTO HEAT           |                   |                   |
|               |                  |          |                  | ION                  |                   |                   |
|               |                  |          |                  | ACCLIMATE            |                   |                   |
|               |                  |          |                  | BEAM                 |                   |                   |
|               |                  |          |                  | HEAT                 |                   |                   |
|               |                  |          |                  | HEAT (HI TEMP)       |                   |                   |
|               |                  |          | SK SUP DETECTORS | SUP PHOTO DUCT       | Latch / Non-Latch |                   |
|               |                  |          |                  | SUP SMOKE PHOTO      |                   |                   |
|               |                  |          |                  | SUP SMOKE ION        |                   |                   |
|               |                  |          |                  | SUP HEAT             |                   |                   |
|               |                  |          |                  | SUP ACCLIMATE        |                   |                   |
|               |                  |          |                  | SUP HEAT HI          |                   |                   |
|               |                  |          |                  | SUP SMOKE PHOTO/HEAT |                   |                   |
|               |                  |          |                  | SUP SMOKE BEAM       |                   |                   |
|               |                  |          |                  | CO FIRE DETECTORS    |                   | ALRM CO/ALRM FIRE |
|               |                  |          | SUP CO/ALRM FIRE |                      |                   |                   |
|               |                  |          | ALRM CO/SUP FIRE |                      |                   |                   |
|               |                  |          | SUP CO/SUP FIRE  |                      | Latch / Non-Latch |                   |

| Menu             | Options/Defaults                   |          |           |                      | Comments           |               |
|------------------|------------------------------------|----------|-----------|----------------------|--------------------|---------------|
| Point<br>(cont.) | Internal Pwr and<br>External Power | Enter Pt | SWITCH    | MAN_PULL             |                    | Section 7.6.1 |
|                  |                                    |          |           | WATERFLOW            | Latch<br>Non-Latch |               |
|                  |                                    |          |           | SUPERVSY             | Latch<br>Non-Latch |               |
|                  |                                    |          |           | FIREDRILL            |                    |               |
|                  |                                    |          |           | SILENCE              |                    |               |
|                  |                                    |          |           | RESET                |                    |               |
|                  |                                    |          |           | PAS_ACK              |                    |               |
|                  |                                    |          |           | ZN_AUX1              | Latch<br>Non-Latch |               |
|                  |                                    |          |           | ZN_AUX2              | Latch<br>Non-Latch |               |
|                  |                                    |          |           | SYS_AUX1             | Latch<br>Non-Latch |               |
|                  |                                    |          |           | SYS_AUX2             | Latch<br>Non-Latch |               |
|                  |                                    |          |           | DETECT SW            |                    |               |
|                  |                                    |          |           | TAMPER               |                    |               |
|                  |                                    |          |           | MAN REL              |                    |               |
|                  |                                    |          |           | ILOCK                |                    |               |
|                  |                                    |          |           | CO<br>DETECTOR<br>SW |                    |               |
|                  |                                    |          |           | RELAY                | OUTPUT PT          |               |
|                  |                                    |          | AUX CONST |                      |                    |               |
|                  |                                    |          | AUX RESET |                      |                    |               |
|                  |                                    |          | AUX DOOR  |                      |                    |               |

| Menu                        | Options/Defaults                 |            |  |               | Comments         |   |             |
|-----------------------------|----------------------------------|------------|--|---------------|------------------|---|-------------|
| Point<br>(cont.)            | Internal Pwr and<br>External Pwr |            | B SWITCH   | MAN PULL      | Select zone      | Latch and Non-latch feature only appear for waterflow, supervisory, tamper, zone aux1, zone aux2, system aux1, and system aux2. Section 7.6 |             |
|                             |                                  |            |  | WATERFLOW     | Select zone      |   |             |
|                             |                                  |            |  | SUPERVSY      | Select zone      |   |             |
|                             |                                  |            |  | TAMPER        | Select zone      |   |             |
|                             |                                  |            |  | DETECT SW     |                  |   |             |
|                             |                                  |            |  | FIREDRILL     |                  |   |             |
|                             |                                  |            |  | SILENCE       |                  |   |             |
|                             |                                  |            |  | RESET         |                  |   |             |
|                             |                                  |            |  | PAS_ACK       | Select zone      |   |             |
|                             |                                  |            |  | ZN_AUX1       | Select zone      |   |             |
|                             |                                  |            |  | ZN_AUX2       | Select zone      |   |             |
|                             |                                  |            |  | SYS_AUX1      |                  |   |             |
|                             |                                  |            |  | SYS_AUX2      |                  |   |             |
|                             |                                  |            |  | MAN REL       |                  |   | Section 7.6 |
|                             |                                  |            |  | ILOCK         |                  |   |             |
|                             |                                  |            |  | A SWITCH      | Same as B SWITCH |   |             |
|                             |                                  |            |  | B DETECTOR    | 2-WIRE SMK       |   | Section 7.6 |
|                             |                                  |            |  |               | 4-WIRE SMK       |   |             |
|                             | 4-WIRE CO SMK                    |            |  |               |                  |   |             |
|                             | A DETECTOR                       | 2-WIRE SMK |  |               |                  |   |             |
|                             |                                  | 4-WIRE SMK |  |               |                  |   |             |
|                             | Select Type                      | UNUSED     |  |               | Section 7.6.2    |   |             |
|                             |                                  | B NOTIF    | Select Group   |               |                  |   |             |
|                             |                                  | A NOTIF    |  |               |                  |   |             |
|                             |                                  | AUX PWR    | CONSTANT   |               |                  |   |             |
|                             |                                  |            | RESETABLE  |               |                  |   |             |
|                             |                                  |            | DOOR   |               |                  |   |             |
|                             |                                  |            | SOUNDER SYNC POWER   |               |                  |   |             |
| Select Group or Zone Number |                                  |            | Group or Zone selection will appear depending on the type is selected. Section 7.6.2 |               |                  |   |             |
| Edit Name                   | Enter Name                       |            |  | Section 7.6.2 |                  |   |             |
| 5880                        | Enter Point #                    | NOTIF      |  | Section 7.6.3 |                  |   |             |
|                             |                                  | UNUSED     |  |               |                  |   |             |
|                             | Select Group #                   |            |  |               |                  |   |             |
|                             | Edit Name                        | Enter Name |  |               |                  |   |             |
| 5865                        | Enter Point #                    | NOTIF      |  | Section 7.6.3 |                  |   |             |
|                             |                                  | UNUSED     |  |               |                  |   |             |
|                             | Select Group #                   |            |  |               |                  |   |             |
|                             | Edit Name                        | Enter Name |  |               |                  |   |             |

| Menu                  | Options/Defaults   |                   |  | Comments        |   |  |
|-----------------------|--------------------|-------------------|--|-----------------|---|--|
| System Options        | Reporting Accounts | Edit Acct.        | For each account (1-4), select:                |                 |   |  |
|                       |                    |                   | Edit Account #                                 |                 | *123456   | Account # (6-digit number, identifies account to central station)<br>Section 7.7.1.1 |
|                       |                    |                   | Edit Format                                    |                 | *Contact ID   | Reporting Format (SIA, S20, Contact ID)<br>Section 7.7.1.1                           |
|                       |                    |                   | Report Alarms                                  | Y (Yes)         | *Yes  | Section 7.7.1.1  |
|                       |                    |                   |  | N (No)          |   |  |
|                       |                    |                   |  | M (Must)        |   |  |
|                       |                    |                   | Rep. Alarm Restore                             | Y (Yes)         | *No   |  |
|                       |                    |                   |  | N (No)          |   |  |
|                       |                    |                   |  | M (Must)        |   |  |
|                       |                    |                   | Report Troubles, Supervisories, Enable/Disable | Y (Yes)         | *No   |  |
|                       |                    |                   |  | N (No)          |   |  |
|                       |                    |                   |  | M (Must)        |   |  |
|                       |                    |                   | Report Test                                    | Y (Yes)         | *No   |  |
|                       |                    |                   |  | N (No)          |   |  |
|                       |                    |                   |  | M (Must)        |   |  |
|                       |                    |                   | Report Resets                                  | Y (Yes)         | *No   |  |
|                       | N (No)             |                   |  |                 |   |  |
|                       | M (Must)           |                   |  |                 |   |  |
|                       | Switch attempts    | 1 - 5             | *5   | Section 7.7.1.1 |   |  |
|                       | Edit Phone #1      | up to 24 digits   | blank  | Section 7.7.1.1 |   |  |
|                       | Auto Test Time     | Set the Hour      |  | *02:00 AM       | Section 7.7.1.2   |  |
|                       |                    | Set the Minutes   |  |                 |   |  |
|                       |                    | Select AM/PM      |  |                 |   |  |
|                       |                    | Report Every      | 24hrs  | *24hrs          | Section 7.7.1.2   |  |
|                       |                    |                   | 12hrs  |                 |   |  |
|                       | 06hrs              |                   |  |                 |   |  |
|                       | 04hrs              |                   |  |                 |   |  |
|                       | Phone Lines        | Select Phone Line | For each phone line (1 & 2), select:           |                 |   |  |
| Dialing Prefix        |                    |                   | Up to 8 digits                                 | none            | Section 7.7.2.1   |  |
| # of Answer Rings     |                    |                   | Range: 00-15                                   | 06              | Number of rings before panel answers a call from a computer.<br>Section 7.7.2.2 |  |
| Select Dialing Option |                    |                   | TT   | TouchTone       | Touch Tone  |  |
|                       |                    |                   | TT/PL  |                 | TouchTone alternating with pulse.<br>Section 7.7.2.3                            |  |
|                       |                    |                   | PULSE  |                 | Pulse dialing   |  |
| Rotary Pulse Format   |                    |                   | U = 60/40                                      | *U              | Section 7.7.2.4   |  |
|                       | E = 66/34          |                   |  |                 |   |  |

| Menu                   | Options/Defaults     |                           |                          |                                      | Comments   |                 |                 |
|------------------------|----------------------|---------------------------|--------------------------|--------------------------------------|--|-----------------|-----------------|
| System Options (cont.) | Phone Lines (cont.)  | Select Phone Line (cont.) | Answering Machine Bypass | Yes = enabled<br>No = disabled       | *Y = Enabled   | Section 7.7.2.6 |                 |
|                        | System Event Outputs | Trouble Events            | System Trouble           | Select Group                         | None selected  | Section 7.7.3.1 |                 |
|                        |                      |                           |                          | Select Cadence                       |  |                 |                 |
|                        |                      |                           | Alarm Silence            | Select Group                         | None selected  |                 |                 |
|                        |                      |                           |                          | Select Cadence                       |  |                 |                 |
|                        |                      |                           | Trbl Silence             | Select Group                         | None selected  |                 |                 |
|                        |                      |                           |                          | Select Cadence                       |  |                 |                 |
|                        |                      |                           | User Selected            | Group Tr                             | Select Group   |                 |                 |
|                        |                      |                           |                          | SBUS Com                             |  |                 |                 |
|                        |                      |                           |                          | SBUS Pwr                             |  |                 |                 |
|                        |                      |                           |                          | SLC Loop                             |  |                 |                 |
|                        |                      |                           |                          | AC Loss                              |  |                 |                 |
|                        |                      |                           |                          | Battery                              |  |                 |                 |
|                        |                      |                           |                          | Gnd Fit                              |  |                 | Select Cadence  |
|                        |                      |                           |                          | Phone Ln                             |  |                 |                 |
|                        | Account              |                           |                          |                                      |  |                 |                 |
|                        | Printer              |                           |                          |                                      |  |                 |                 |
|                        | Aux Pwr              |                           |                          |                                      |  |                 |                 |
|                        | Sys Sw               |                           |                          |                                      |  |                 |                 |
|                        | Sys Alarm Cadence    | Fire Drill                | System Aux1              | System Aux2                          | Select Cadence   | Constant        | Section 7.7.3.2 |
|                        |                      |                           |                          |                                      |  |                 |                 |
|                        |                      |                           |                          |                                      |  |                 |                 |
|                        | Misc. Options 1      | Water Flow Delay          | 0 - 90 Seconds           | *30 sec                              | Water Flow delay is the number of sec. before water flow alarm is generated. Section 7.7.4.1                                   |                 |                 |
| Low AC Delay           |                      | 0 - 30 hours              | *3 hrs                   | Low AC Report Delay. Section 7.7.4.2 |  |                 |                 |
| DST                    |                      | Y (Enabled)               | N (Disabled)             | *Enabled                             | Automatic Daylight Saving Time enable or disable. Section 7.7.4.3 and 7.7.6.3. See also DST settings in Misc. Option 3, below. |                 |                 |
|                        |                      |                           |                          |                                      |  |                 |                 |
| CLK                    |                      | AM/PM                     | MIL                      | *AM/PM                               | System Clock Format (AM/PM or military). Section 7.7.4.4   |                 |                 |
|                        |                      |                           |                          |                                      |  |                 |                 |
| AC Freq:               | 50 Hz                | 60 Hz                     | Neither                  | Section 7.7.4.5                      |  |                 |                 |
| Misc. Options 2        | SYNC Strbs w/ Sil    | Y (Enabled)               | *Disabled                | Section 7.7.5.1                      |  |                 |                 |
|                        |                      | N (Disabled)              |                          |                                      |  |                 |                 |
|                        | Auto Display Oldest  | Y (Enabled)               | *Disabled                | Section 7.7.5.2                      |  |                 |                 |
| N (Disabled)           |                      |                           |                          |                                      |  |                 |                 |
| Report By              | Zone                 | Point                     | *Zone                    | Section 7.7.5.3                      |  |                 |                 |
|                        |                      |                           |                          |                                      |  |                 |                 |

| Menu                   | Options/Defaults     |   |                                  |             | Comments  |
|------------------------|----------------------|---|----------------------------------|-------------|---|
| System Options (cont.) | Misc. Options 3      | Alarm Verification time                 | Enter time from 1 to 250 seconds | *60 Seconds | Section 7.7.6.1   |
|                        |                      | Plex Door                               | Y (Enabled)                      | *Disabled   | Section 7.7.6.2   |
|                        |                      |   | N (Disabled)                     |             |   |
|                        |                      | Single Key ACK                          | Y (Enabled)                      | *Disabled   | Section 7.7.5.4   |
|                        |                      |   | N (Disabled)                     |             |   |
|                        | DST Start            | Select week: 1st, 2nd, 3rd, 4th or Last | Select month                     |             | Section 7.7.4.3 and 7.7.6.3. See also DST settings in Misc. Options 1, above. |
|                        | DST End              |   |                                  |             |   |
| Edit Banner            | Internal Message     |   |                                  |             | Section 7.7.7   |
|                        | Custom Message       | Edit Line 1                             |                                  |             |   |
|                        |                      | Edit Line 2                             |                                  |             |   |
| JumpStart              | No                   |   |                                  |             | Section 7.8   |
| AutoPrg                | Yes                  |   |                                  |             |   |
| Computer Account       | Computer Account #   | *123456                                 |                                  |             | Section 7.9   |
|                        | Computer Access Code | *0                                      |                                  |             |   |
|                        | Computer Phone #     | Up to 24 digits                         |                                  |             |   |

| Menu               | Options/Defaults         |                       |                          | Comments  |  |
|--------------------|--------------------------|-----------------------|--------------------------|---|--|
| Access Codes       | Select Profile (01 - 20) | Edit Name             |                          | <p>Profile 1 is the profile that dictates what functions the Fire Fighter Key has access to. Because this is the profile for a key the user name and the access code can not be edited for this profile.</p> <p>Profile 2 is the profile for the installer and is referred to as the "Installer Code". This profiles user name and panel functions can not be edited. Section 7.10.</p> |  |
|                    |                          | Edit Access Code      |                          |   |  |
|                    |                          | Edit Panel Functions  | System Reset             |   |  |
|                    |                          |                       | System Silence           |   |  |
|                    |                          |                       | System Event Ack.        |   |  |
|                    |                          |                       | Fire Drill Key           |   |  |
|                    |                          |                       | System Tests             |   |  |
|                    |                          |                       | Fire Drill Menu          |   |  |
|                    |                          |                       | Indicator Test           |   |  |
|                    |                          |                       | Walk Test no-Report      |   |  |
|                    |                          |                       | Walk Test w/ Report      |   |  |
|                    |                          |                       | Dialer Test              |   |  |
|                    |                          |                       | Clear History Buffer     |   |  |
|                    |                          |                       | Point Functions          |   |  |
|                    |                          |                       | Disable/Enable Point     |   |  |
|                    |                          |                       | Point Status             |   |  |
|                    |                          |                       | Set SLC Device Address   |   |  |
|                    |                          |                       | SLC Device Locator       |   |  |
|                    |                          |                       | SLC Multi-Device Locator |   |  |
|                    |                          |                       | I/O Point Control        |   |  |
|                    |                          |                       | Event History            |   |  |
|                    |                          |                       | Set Time & Date          |   |  |
|                    |                          |                       | Printer Options          |   |  |
|                    |                          |                       | Event Logging            |   |  |
|                    |                          |                       | Print Event History      |   |  |
|                    |                          | Print Detector Status |                          |   |  |
|                    |                          | Print System Config   |                          |   |  |
| Reset Dialer       |                          |                       |                          |   |  |
| Program Menu       |                          |                       |                          |   |  |
| System Information |                          |                       |                          |   |  |
| Upload/Download    |                          |                       |                          |   |  |

1. Use of multiple notification groups may not synchronize with each other.





---

## Section 7

# Programming

---

---

This section of the manual describes how to manually program the control panel from the built-in annunciator. Each subsection discusses these menu options in detail. All options described in this section can be performed using the Silent Knight Software Suite 5660.

### Important!

Before any customized programming is done, Jump-start should be run first. After Jump-start is run, thoroughly test the system. The reason the system should be tested after Jump-start is because Jump-start automatically programs the system, searching for and configuring all SLC and SBUS devices it finds. Jump-start allows you to confirm the integrity of the installation prior to performing any custom programming. After determining that the hardware is properly installed, custom programming can be performed. Refer to Section 6.

## 7.1 UL 864 Programming Requirements

---

**NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES:** This product incorporates field programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, certain programming features or options must be limited to specific values or not used at all as indicated below.

| Programming Option | Menu Item           | Permitted in UL 864 (Y/N) | Possible Settings | Settings Permitted in UL 864 |
|--------------------|---------------------|---------------------------|-------------------|------------------------------|
| Misc Options 1     | Low AC Report Delay | Yes                       | 0–30 hours        | 1–3                          |

## 7.2 SLC Family

---

The 5808 supports the use of either SD protocol SLC devices or SK SLC devices. You must configure the 5808 to accept the protocol you are installing. You cannot mix SLC devices of different protocols.

1. Press **7** for Program Menu.
2. Press **0** to enter module menu.
3. Press **▲** to select the desired SLC device type.
4. Press **ENTER** to accept the displayed SLC device type.

## 7.3 Modules

---

This section lists the options available under the module option in the program menu. The following modules are available for the control panel: 5860 remote fire alarm annunciator, 5824 serial/parallel printer interface module, 5496 intelligent power module, 5880 LED I/O module, and 5865 LED annunciator.

### 7.3.1 Edit Modules

The features that can be edited when this option is selected are, module name, and class of wiring (Class A or Class B).

To edit an existing module, follow these steps:

1. Press **7** for Program Menu.
2. Press **1** to enter module menu.
3. Press **1** to edit a module.
4. Use the **▲** or **▼** arrow to select the module you wish to edit.

#### 7.3.1.1 Naming Modules

You can assign an English name to a system hardware module to make it easier to recognize on a display.

5. If you wish to edit the modules name press the **▲** or **▼** arrow to select each character for the modules name (or press **▶** to bypass name edit).

Press the  $\blacktriangleright$  to move to the next character.

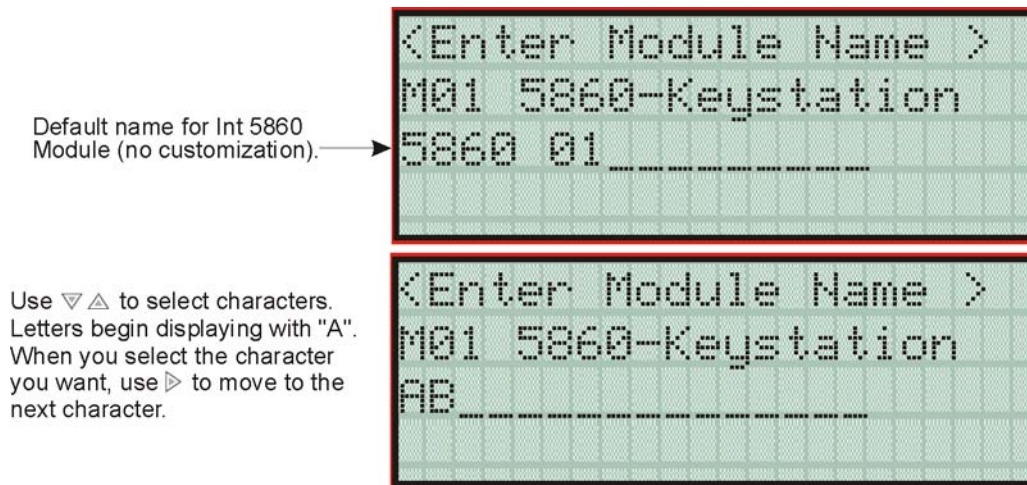


Figure 7-1 Edit module Name Programming Screen Example

### 7.3.1.2 Module, Wiring Class

This option applies only to the SLC loop. Each module has a unique set of option that specifically applies to the functionality of the module being edited.

6. Choose the class of wiring you wish to use for this module by pressing the  $\blacktriangle$  or  $\blacktriangledown$  arrow, then press .

### 7.3.2 Adding a Module

If you need to add a new hardware module to the system, follow these steps.

You must be in the Main Menu to perform this task. If necessary, enter the Installer Code.

1. Press  $\boxed{7}$  for Program Menu.
2. Press  $\boxed{1}$  to enter module menu.
3. Press  $\boxed{2}$  to add a module.
4. From the next screen, select the number that corresponds to the type of module you are adding from the <New Module Type> screen.

The screen will display “Adding module [#]...” for a few moments. You will be returned to the <New Module Type> screen where you can select another module if desired.

You must save changes when you exit the Program Menu or the new module will not be added.

*Note: If you Add a Module that has not been physically connected, the panel will go into trouble after it reinitializes (when you exit the Program Menu). When the new module is attached, the trouble will correct itself automatically the next time you power up the system.*

### 7.3.3 Deleting a Module

If you ever need to delete a module, follow these steps.

You must be in the Main Menu to perform this task. If necessary, enter the Installer Code.

1. Press **7** for Program Menu.
2. Press **1** to enter module menu.
3. Press **3** to delete a module.
4. A warning screen will display. If you want to proceed with deleting the module, select Yes. To cancel, select No.

## 7.4 Zone


---

Through the zone option in the program menu you can edit, add, delete, and view zone points. Selections made here affect all detectors and switches in the zone. Up to 125 zones can be used in the system.

### 7.4.1 Edit Zone

Features that can be edited through the edit zone option are, edit zone name, zone properties (which includes, zone type, and detector sensitivity), and zone output mapping.


To edit a zone, follow these steps:

1. Press **7** for Program Menu.
2. Press **2** to enter zone menu.
3. Press **1** to edit a zone.
4. Enter the zone number, then press .

#### 7.4.1.1 Edit Zone Name

5. Press **1** to edit the selected zone's name.

A screen similar to the one shown in Figure 7-2 displays.

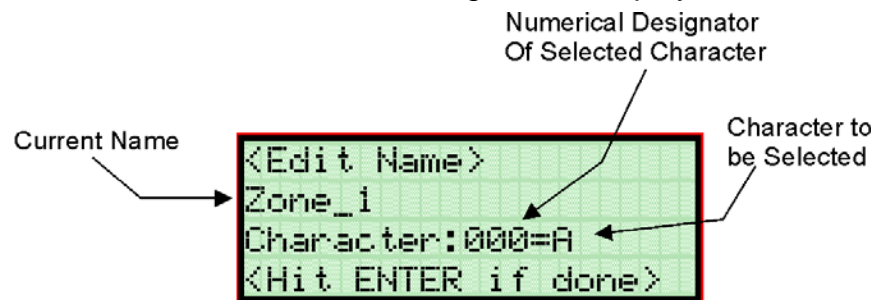


**Figure 7-2 Selecting Character for Zone Name**

6. Select the characters for the zone name by pressing the  $\blacktriangle$  or  $\blacktriangledown$  arrow until the desired character is shown then press  $\blacktriangleright$ .

OR


Enter the Numerical Designator for the character you want, then press  $\blacktriangleright$ . See Appendix B of this manual for a list of available characters and their numeric designators.


7. Repeat step 8 until the name is complete.

8. Press  when the name is complete.

### 7.4.1.2 Edit Zone Properties

Zone properties consist of, alarm delay characteristics, and heat detector sensitivity.

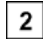1. Do steps 1 through 6 of Section 7.4.1.
2. Press  to edit the properties of the selected zone.

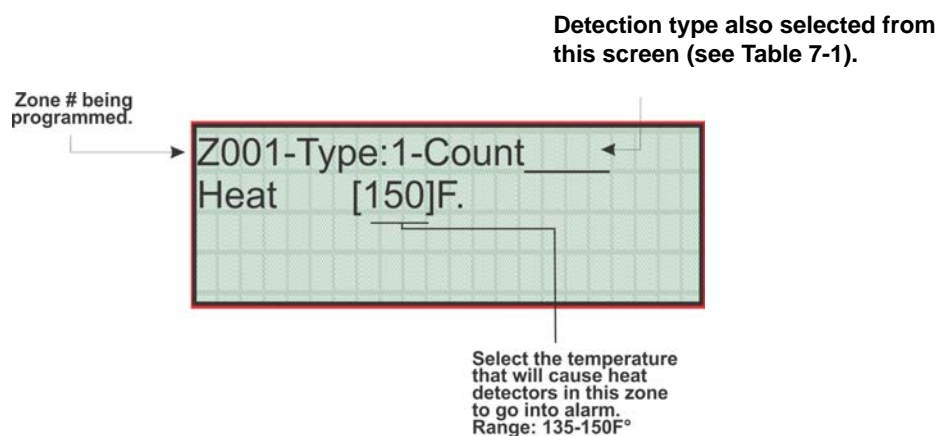

## Alarm Delay Characteristics

3. Select the alarm delay characteristics by pressing the  or  arrow.

Table 7-1 list the delay choices and a description of each.

**Table 7-1: Alarm Delay Characteristics**

| Type of Delay | Description   |
|---------------|---|
| 1-Count       | One Count (No Delay). When this option is enabled, an alarm occurs immediately when a single device of any of the following types goes into alarm: detector, manual pull, water flow, Aux1 or Aux2. This is considered the most typical operation and is the default for all zones.   |
| 2-Count       | When this type of alarm delay is used, two or more detectors within the zone must go into alarm in order for the zone to report an alarm. Switches of type manual pull, water flow, Aux1 and Aux2 are an exception; they will cause an alarm when only one switch is in alarm. When a single detector is in alarm in a 2-Count zone, the system enters a prealarm condition. In a prealarm condition, the touchpad PZT beeps and the annunciator display indicates that a prealarm has occurred. If the zone has been mapped to an output group for the prealarm event, the output group will activate. The prealarm will not be reported to the central station.<br><i>Note: SK-FIRE-CO detectors can be installed in a 1 or 2 count zone but will operate as a 1-count point in that zone.</i>  |
| Alarm Ver.    | Alarm verification is an optional false alarm prevention feature that verifies an alarm condition by resetting the smoke detector. If the alarm condition still exists by the time the reset cycle has completed, the detector will go into alarm. If the detector is no longer in alarm, no report will go to the central station. The alarm verification sequence is ignored if the zone is already in alarm.   |
| PAS           | This option is intended to be used with an acknowledge switch. An alarm is delayed for 15 seconds, giving on-site personnel a chance to investigate the alarm. If the acknowledge switch is not activated within 15 seconds, an alarm occurs automatically.<br>If this option is enabled for a zone, the zone will respond to an alarm condition as follows: <ul style="list-style-type: none"> <li>• The zone will not go into alarm for 15 seconds to allow an on-site operator to activate the acknowledge switch.</li> <li>• If the operator does not press the acknowledge switch within 15 seconds, the zone will go into alarm.</li> <li>• If the operator presses the acknowledge switch within 15 seconds, a 180-second time-frame will begin counting down. This time-frame allows the operator to investigate the cause of the alarm.</li> </ul> <p>If the operator performs a reset within 180 seconds, the alarm will not occur.</p> <p>If the operator does not perform a reset within 180 seconds, an alarm will occur automatically.</p> <ul style="list-style-type: none"> <li>• The P.A.S. feature will be overridden if another alarm occurs.</li> </ul> |
| SNGL ILOCK    | See Section 8.7.1 for single interlock releasing operation.   |
| DBL ILOCK     | See Section 8.7.2 for double interlock releasing operation.   |

4. Press  .


## Heat Temperature Setting

Use this feature to set the temperature at which heat detectors will respond. The range is 135° to 150° F. All detectors in the zone will respond in the same way.


The Model SD505-AHS Heat Detector is an absolute temperature device. This means that it responds to an alarm immediately if the temperature in the zone goes above the programmed temperature.

5. Enter the temperature at which the heat detector will respond.

Or

Use the ▼ or ▲ keys to scroll through the range or enter directly from the number keys on the annunciator, then press .

6. Use the ▼ or ▲ keys to scroll through the range or enter directly from the number keys on the annunciator.

7. Then press .

### 7.4.1.3 Zone Outputs

Output groups and cadence patterns are mapped to events. They can be programmed to output when an event occurs in a zone. Some system trouble events can be mapped for the entire system. Section 6.2 of this manual contains a general explanation of mapping. The following sections explain how to select mapping options.

*Note: Use of multiple notification groups may not synchronize with each other.*

#### Mapping to Zone Events

Eight types of events can occur in zones. For each event type, you can activate up to 8 output groups or output group template, specifying a pattern for each. The following is a list of all event types:

*Note: Abbreviations in parentheses are the characters that are displayed in programming.*

- Manual Pull Alarm (MP)
- Water Flow Alarm (WF)
- Detector Alarm (DE). This applies to heat or smoke detectors.
- Aux 1 and Aux 2 Alarm (A1 or A2). User-specified alarm types.
- Pre-alarm (PR)
- Supervisory (SU)
- Trouble (TR)
- Status Point (SP)
- CO Alarm (CO)
- CO Supervisory (SCO)

To map zone events to outputs, follow these steps:


1. From the Main Menu, select **7** for Program Menu.
2. From the Program Menu, select **2** for Zone.
3. From the next menu, select **1** for Edit Zone.
4. Enter the zone number you wish to edit.
5. From the next menu, select **3** for Zone Outputs.
6. From the next screen, a list of 8 event types will display. Select the event type you want to program. A screen similar to the one shown in Figure 7-3 will display.

Press **ENTER**.

7. Press the **▽** or **△** key to toggle the group letter to either G = Group or T = output group template depending on what you need for this zone. Press **ENTER**.
8. Select options for each event that could occur in this zone. Figure 7-3 is a complete example of how you might map a zone.

Indicates output group 1, cadence pattern 00 has been selected. 00 is a constant output cadence.

Indicates type of event (in this case, Manual Pull alarm). See Section 6.5 for choices.

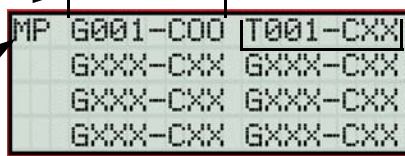

“T” Indicates output group template 1. See Section 7.5.5 for more information on output group templates.

Figure 7-3 Selecting Output Groups/Templates and Cadence Patterns for a Zone Event




### Zone Mapping Example

Suppose you want to program Zone 1 so that:

- Any alarm (detector, water flow or manual pull) would activate Output Group 1 using the ANSI cadence pattern.
- Manual pull alarm would activate Output Group 3 using constant output.
- Troubles would activate Output Group 2 using the zone-coded cadence pattern.

To accomplish this you need to access the screen for each event and then select your output groups. Figure 7-4 shows how you would program this application.

For this application:

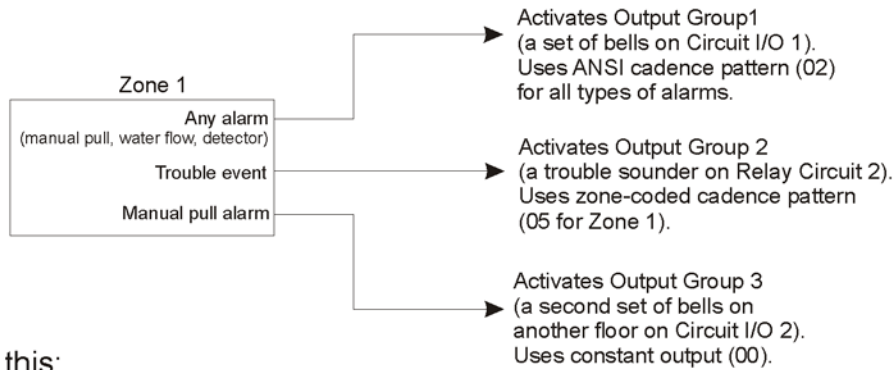

Program like this:

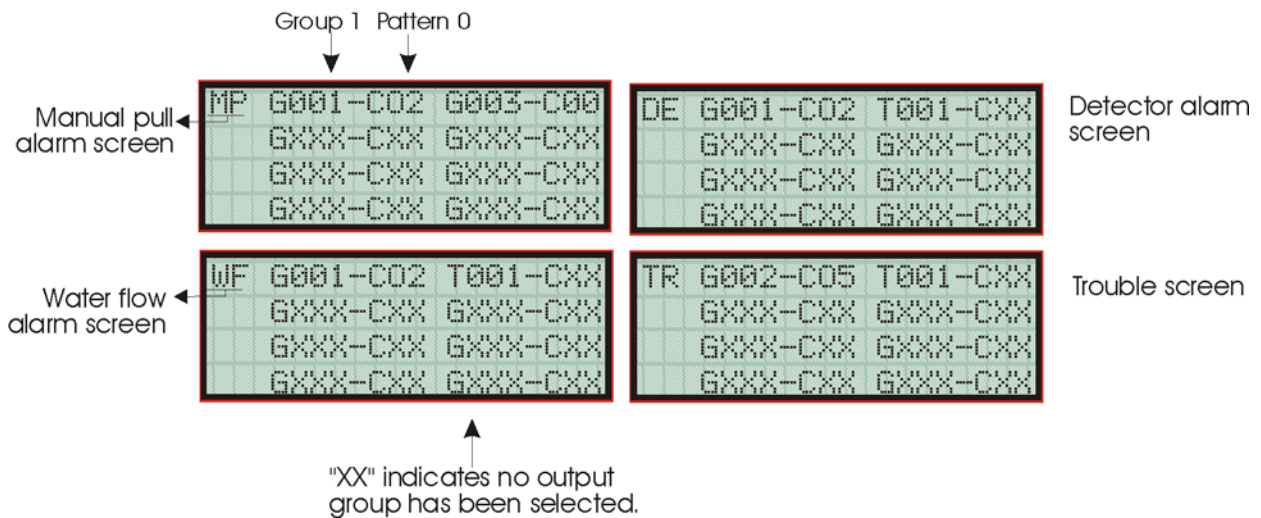


Figure 7-4 Zone Mapping Example

### 7.4.1.4 Cadence Patterns

The cadence patterns shown in Figure 7-5 are available for use with the control panel.

Cadence patterns can be selected by event type for each zone or for the entire system. Special cadence patterns can be selected for fire drills and any auxiliary system switches used with the system.





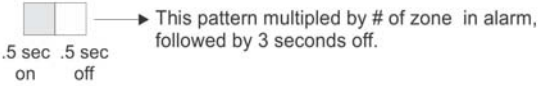
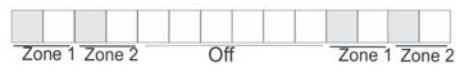

| #             | Name   | Pattern Description   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
|---------------|--|---|-----------|------|---------|--------|--------|--------|---------------|--------|----------|--------|--------|--|----|--------|----|--------|----|--------|----|----------|----|----------|----|----------|----|----------|
| 00            | Constant   | Continuous sound<br>Note: This is the only pattern that can be used for relay circuits. The system will override any other choice.  |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 01            | March Code   |  .5 sec on .5 sec off  |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 02            | ANSI 3.41  |    |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 03            | Single Stroke  |    |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 04            | California   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 05<br>⋮<br>16 | Zone Coded   | <table border="1" data-bbox="381 1134 600 1470"> <thead> <tr> <th>Pattern#</th> <th>Zone</th> </tr> </thead> <tbody> <tr><td>5</td><td>Zone 1</td></tr> <tr><td>6</td><td>Zone 2</td></tr> <tr><td>7</td><td>Zone 3</td></tr> <tr><td>8</td><td>Zone 4</td></tr> <tr><td>9</td><td>Zone 5</td></tr> <tr><td>10</td><td>Zone 6</td></tr> <tr><td>11</td><td>Zone 7</td></tr> <tr><td>12</td><td>Zone 8</td></tr> <tr><td>13</td><td>Custom 1</td></tr> <tr><td>14</td><td>Custom 2</td></tr> <tr><td>15</td><td>Custom 3</td></tr> <tr><td>16</td><td>Custom 4</td></tr> </tbody> </table><br><br><p><b>EXAMPLE: Pattern 06, Zone 2 coded</b></p>  | Pattern#  | Zone | 5       | Zone 1 | 6      | Zone 2 | 7             | Zone 3 | 8        | Zone 4 | 9      | Zone 5   | 10 | Zone 6 | 11 | Zone 7 | 12 | Zone 8 | 13 | Custom 1 | 14 | Custom 2 | 15 | Custom 3 | 16 | Custom 4 |
| Pattern#      | Zone   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 5             | Zone 1   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 6             | Zone 2   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 7             | Zone 3   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 8             | Zone 4   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 9             | Zone 5   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 10            | Zone 6   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 11            | Zone 7   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 12            | Zone 8   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 13            | Custom 1   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 14            | Custom 2   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 15            | Custom 3   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 16            | Custom 4   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 17<br>⋮<br>21 | <table border="1" data-bbox="381 1480 641 1606"> <thead> <tr> <th>Pattern #</th> <th>Sync Type</th> </tr> </thead> <tbody> <tr><td>17</td><td>Faraday</td></tr> <tr><td>18</td><td>Gentex</td></tr> <tr><td>19</td><td>System Sensor</td></tr> <tr><td>20</td><td>Wheelock</td></tr> <tr><td>21</td><td>AMSECO</td></tr> </tbody> </table> | Pattern #   | Sync Type | 17   | Faraday | 18     | Gentex | 19     | System Sensor | 20     | Wheelock | 21     | AMSECO | These outputs provide synchronization for AMSECO, Faraday, Gentex, System Sensor, or Wheelock synchronized appliances. |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| Pattern #     | Sync Type  |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 17            | Faraday  |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 18            | Gentex   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 19            | System Sensor  |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 20            | Wheelock   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 21            | AMSECO   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |
| 22<br>⋮<br>23 | Temporal 4   |   |           |      |         |        |        |        |               |        |          |        |        |  |    |        |    |        |    |        |    |          |    |          |    |          |    |          |

Figure 7-5 Cadence Patterns Available with the Control Panel

### 7.4.1.5 Zone Accessory Options

This option applies to detectors that are used with Sounder bases or Relay bases.

Single or Multi-station cadence pattern

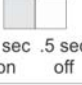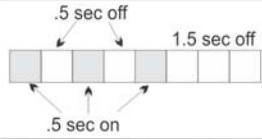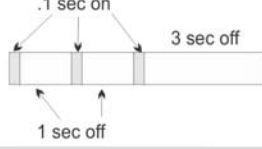




Fire Cadence\_ \_ / CO Cadence\_ \_ (choose from Patterns 00 to 23).

*Note: The B200S Sounder bases is intended to be used along with the CO cadence setting.*

Local Zone (choose Y or N, for Yes or No).

## 7.4.2 Add Zone

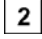


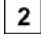
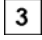
To add a zone, follow these steps:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Press  to enter zone menu.
5. Press  to add a zone.

A zone will be added. The system will assign the next available zone number.  
Options for this zone can now be programmed through the Zone Edit sub-menu.  
Up to 125 zones can be used.

## 7.4.3 Delete Zone







To delete a zone, follow these steps:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Press  to enter zone menu.
5. Press  to delete a zone.

A warning screen will display. If you want to proceed with deleting the zone, select Yes. To cancel, select No.

## 7.4.4 View Zone Points

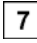To view the points in a zone, follow these steps:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Press  to enter zone menu.
5. Press  to view zone points.
6. Enter the number of the zone you wish to view, then press .

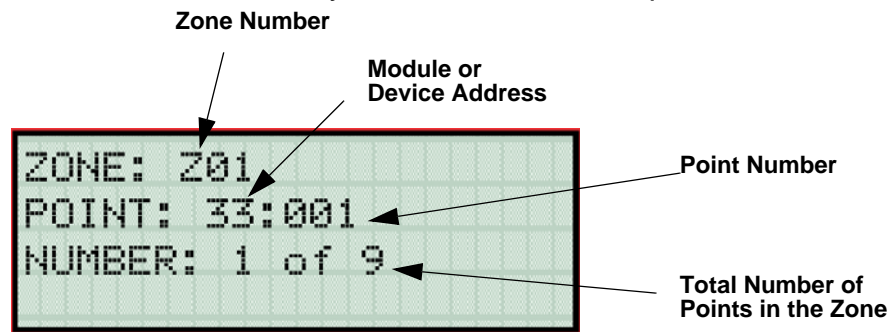


Figure 7-6 View Zone Points Screen



## 7.5 Group

An output group is made up of output points that have been programmed to respond in the same way. Output groups simplify programming because you have to program the output characteristics that are common to all of the group points once, instead of programming each individual point. Once you have defined the characteristics of output groups, you can assign each point to the appropriate group. All valid output points are assigned to only one output group. Unused points are not assigned to any output group. Up to 125 output groups can be defined.

### 7.5.1 Edit Group

In the edit group option you can program the name of an output group (Section 7.5.1.1) and change the properties (Section 7.5.1.2) of that group.

To edit a group, follow these steps:

1. Enter the installer code.
2. Press  or  to display the main menu.

3. Select **7** for Program Menu.
4. Press **3** to enter group menu.
5. Press **1** to edit group.
6. Enter the number of the group you wish to edit, then press **ENTER**.

### 7.5.1.1 Edit Group Name

7. To edit the group name, press **1**. A screen similar to the one shown in Figure 7-7 displays.

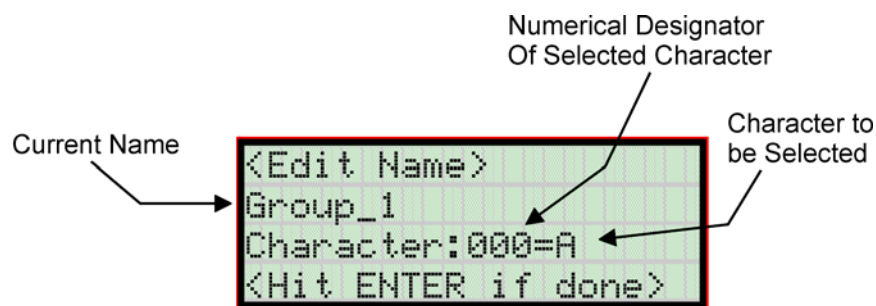


Figure 7-7 Selecting Character for Group Name

8. Select the characters for the zone name by pressing the  $\blacktriangle$  or  $\blacktriangledown$  arrow until the desired character is shown then press  $\blacktriangleright$ .
   
OR
   
Enter the Numerical Designator for the character you want, then press  $\blacktriangleright$ . See Appendix B of this manual for a list of available characters and their numeric designators.
9. Repeat step 8 until the name is complete.
10. Press **ENTER** when the name is complete.

### 7.5.1.2 Edit Group Properties

The Edit Group Menu allows you to select options for each group for the following items:

- Latching or non-latching outputs.
- Silencing operation.

- Operation with system switches.

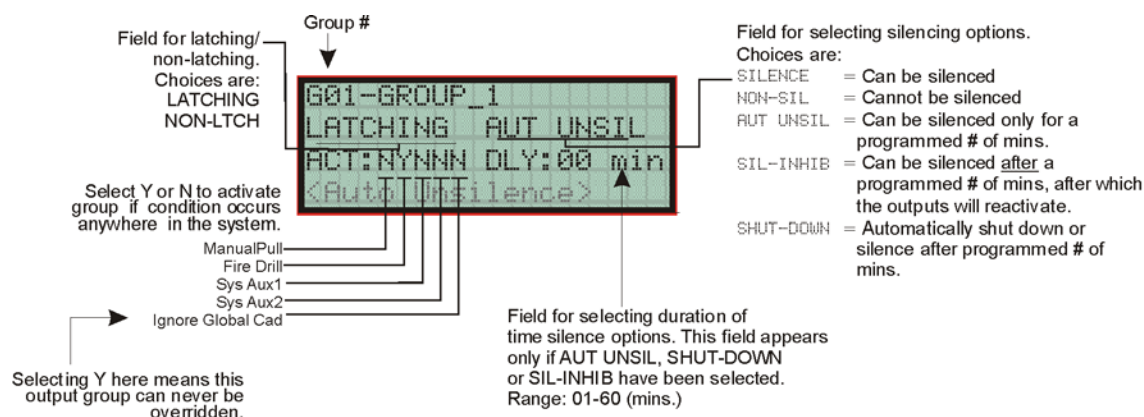


Figure 7-8 Group Properties Screen Programming Options

### Latching / Non-latching Outputs

Outputs that are programmed as Latching remain active until the system has been manually reset. Non-latching outputs stop activating automatically when the condition clears.

### Silencing Options

The following silencing options are available for each output group.

Table 7-2: Silencing Options

| Option    | Description   |
|-----------|---|
| SILENCE   | Silenceable. The output group can be silenced through the <b>SILENCE</b> key.   |
| NON-SIL   | Not silenceable. The output group cannot be silenced. Activation of the <b>SILENCE</b> key will be ignored for this output group.   |
| AUT UNSIL | Auto Unsilenced. If this option is selected, the output group can be silenced for a programmed time-frame. If the condition that caused the output to activate has not cleared during the time-frame, the output reactivates. If you select this option, select the time-frame in the DLY: field. Range is 01-60 minutes. (See Figure 7-8 for location of field.)   |
| SIL-INHIB | Timed Silence after Inhibit. If this option is selected, the output group must be audible for a programmed number of minutes before it can be silenced. If the condition that caused the output to activate has not cleared during the time-frame, the output can be silenced. If you select this option, select the timeframe in the DLY: field. Range is 01-60 minutes. (See Figure 7-8 for location of field.) |
| SHUT-DOWN | If this option is selected, the output group will automatically silence (shut down) after the programmed time period. If you select this option, select the timeframe in the DLY: field. Range is 01-60 minutes. (See Figure 7-8 for location of field.)  |

### Response with System-Wide Conditions

You can select whether an output group will respond to various system-wide

occurrences. (See Figure 7-8 for location of this field).

**Table 7-3: Output Group Response Choices**

| Option                | Description   |
|-----------------------|---|
| ManPull               | Manual Pull Activation. Select Yes if you want this group to activate for all manual pull alarms that occur in the system.<br><b>Note:</b> Even though manual pull switches are assigned to zones, activation selected here for manual pull will override zone-programmed activation.   |
| Fire Drill            | Fire Drill Activation. Select Yes if you want this group to activate for fire drills.   |
| Sys Aux1 and Sys Aux2 | Select Yes if you want this output group to activate for system-wide Aux1 and Aux2 alarms. (Aux 1 and Aux 2 alarm types are for auxiliary alarm conditions. For example, you might want to use Aux 1 to provide a unique alarm type.)   |
| Ignore Global Cad     | Ignore Global Cadence. If you want to create an output group that can never be overridden, you can select Yes for this option. Selecting No means that system-wide events that have been assigned an output pattern could override the pattern for the output group.<br>For example, suppose you had assigned a set of strobes to Output Group 3. You would never want these strobes to output in a pattern under any circumstances. To make sure this happens, select Yes for Ignore Global Cadence for Output Group 3.  |
| Reverse Polarity      | This option programs the output group for reverse polarity operation. Selecting Reverse Polarity -Troubles for polarity reversal connections will cause the output group to be de-energized for any system trouble. Selecting Reverse Polarity - No Troubles for city box (auxiliary) connections will cause system troubles to be ignored, but all troubles will still be annunciated locally. Activation is accomplished through standard mapping methods. Use with the 7644 assembly to implement reverse polarity. See Section 4.13.3.2 for more information on the 7644. |

11. To get to this menu item repeat steps 1 through 6 of section 7.5.1.

12. To edit group properties, press **2**.

13. Press the ▼ or ▲ arrows to select the desired latching option. Press **ENTER**.

14. Press the ▼ or ▲ arrows to select the desired silencing option. Refer to Table 7-2. Press **ENTER**.

15. Enable group activation for a condition (see Table 7-3) by pressing the ▼ or ▲ arrows to select Y (yes) or N (no). Press **ENTER**.

16. Repeat steps 14 and 15 for all the activation options.

## 7.5.2 Add Group

To add a group, follow these steps:

1. Enter the installer code.
2. Press **▶** or **ENTER** to display the main menu.
3. Select **7** for Program Menu.

4. Press **3** to enter group menu.
5. Press **2** to add a group.

The system will assign the next available group number. Properties for the new group can now be edited if desired (see Section 7.5.1.2). A total of 125 output groups can be defined.


### 7.5.3 Delete Group

1. Enter the installer code.
2. Press **▶** or **ENTER** to display the main menu.
3. Select **7** for Program Menu.
4. Press **3** to enter group menu.
5. Press **3** to delete a group.

A warning screen will display. If you want to proceed with deleting the group, select Yes. To cancel, select No.

### 7.5.4 View Group Points

1. Enter the installer code.
2. Press **▶** or **ENTER** to display the main menu.
3. Select **7** for Program Menu.
4. Press **3** to enter group menu.
5. Press **4** to view group points.
6. Enter the group number, then press **ENTER**.

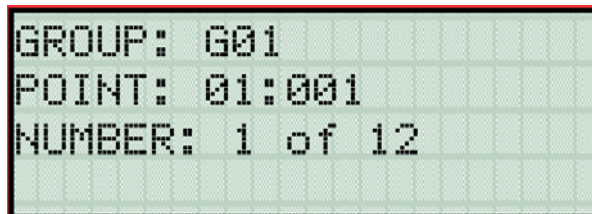

```
GROUP: G01
POINT: 01:001
NUMBER: 1 of 12
```

### 7.5.5 Edit Output Group Templates

Some installations may require that zones be mapped to more than 8 output groups.



With output group templates you can combine one or all output groups into one template, which can be used when the same combination of outputs are used for several zones.

For example, lets say an installation has five zones (See Table 7-4). The check mark indicates what output groups are mapped to each zone. You will notice that every zone is mapped to outputs 1 and 2. As an alternative you can create a template that combines output group 1 and 2 as one choice.


**Table 7-4 Zone Group Example**

| Zone                      | Group Number |   |   |   |   |   |   |   |
|---------------------------|--------------|---|---|---|---|---|---|---|
|                           | 1            | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 1st Floor Smoke Detectors | X            | X |   |   | X |   |   |   |
| 2nd Floor Smoke Detectors | X            | X |   |   | X |   |   |   |
| 3rd Floor smoke Detectors | X            | X |   |   | X |   |   |   |
| Manual Fire Pull Stations | X            | X |   |   |   |   | X |   |
| Water Flow Switches       | X            | X |   |   |   |   |   | X |

This can be done by creating a template which includes output groups 1 and 2. Then you can map all the zones to the template you created. This will free up output group assignments that are common to several zones. This is very useful when you need to map zones to more than eight output groups.

To create Output Group Templates:

1. From the Main Menu, select **7** for Program Menu.
2. From the Program Menu, select **3** for Group.
3. At the next screen, select **5** for Edit OPG Template.
4. Select the template number (01 - 08).
5. Select output group number. See Figure 7-9.

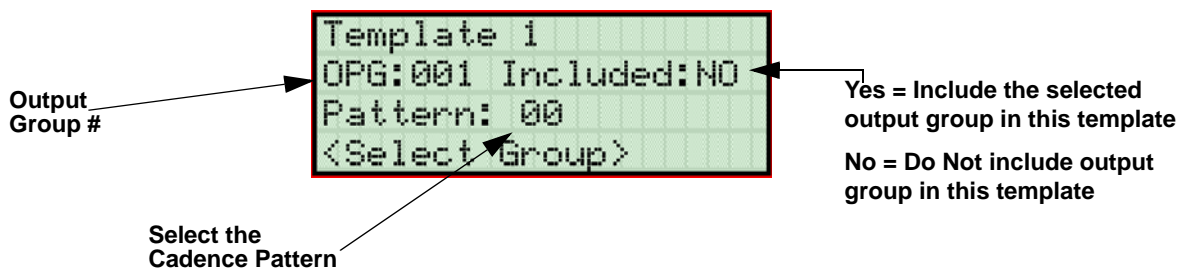

**Figure 7-9 Output Group Template Programming Screen**









## 7.6 Point

You may need to change characteristics of individual input points (detectors and switches) even after using JumpStart. This section explains how to change options

for: type of input point; latching/non-latching status (switches); and name and zone assignment of a point.

## 7.6.1 Point Programming for the SLC

To program for points, follow these steps:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Press  to enter point menu.
5. Press the  or  arrows to select the desired module, then press . Refer to Section 6.5 Quick Reference Table for available choices.
6. Enter the number of the point you wish to edit, then press .

7. Select the type of device by pressing the ▼ or ▲ arrows. Refer to Table 7-5 under column heading “Type Selection” for a list of choices.

Table 7-5 Point Programming

| Module Type | Type Selection | Function             | Latching Option | Comments  |
|-------------|----------------|----------------------|-----------------|---|
| SLC Loop    | UNUSED         |                      |                 |   |
|             | DETECTOR       | PHOTO                |                 |   |
|             |                | ION                  |                 |   |
|             |                | HEAT                 |                 |   |
|             |                | PHOT DUCT            |                 |   |
|             |                | ION DUCT             |                 |   |
|             |                | 2WIRE SMK            |                 |   |
|             |                | SUP DET              | SUP PHOTO       | Latching  |
|             | SUP ION        |                      | Non Latching    |   |
|             | DETECTOR       | PHOTO                |                 |   |
|             |                | ION                  |                 |   |
|             |                | HEAT                 |                 |   |
|             |                | PHOT DUCT            |                 |   |
|             |                | ION DUCT             |                 |   |
|             |                | 2WIRE SMK            |                 |   |
|             |                | Acclimate            |                 |   |
|             |                | Heat HT              |                 |   |
|             |                | Photo-Heat           |                 |   |
|             |                | Beam                 |                 |   |
|             | SUP DETECTOR   | SUP PHOTO DUCT       | Latching        | Supervisory switches can be latching or non-latching. |
|             |                | SUP SMOKE PHOTO      | Non Latching    |   |
|             |                | SUP SMOKE ION        |                 |   |
|             |                | SUP HEAT             |                 |   |
|             |                | SUP ACCLIMATE        |                 |   |
|             |                | SUP HEAT HT          |                 |   |
|             |                | SUP SMOKE PHOTO/HEAT |                 |   |
|             |                | SUP SMOKE BEAM       |                 |   |

Table 7-5 Point Programming



















| Module Type | Type Selection    | Function              | Latching Option          | Comments  |   |
|-------------|-------------------|-----------------------|--------------------------|---|---|
| SLC Loop    | CO SMOKE DETECTOR | ALRM CO/<br>ALRM FIRE |                          |   |   |
|             |                   | SUP CO/<br>ALRM FIRE  |                          |   |   |
|             |                   | ALRM CO/<br>SUP FIRE  |                          |   |   |
|             |                   | SUP CO/SUP<br>FIRE    | Latching<br>Non Latching | Supervisory switches can be latching or non-latching. |   |
|             | SWITCH            | MAN_PULL              |                          |   | Use this switch type for manual pull stations. This input is always latched. The switch can clear only when an alarm is reset. This switch type has the highest priority; it overrides any other type of alarm.   |
|             |                   | WATER-FLOW            |                          |   | Use this switch type for monitoring water flow in a sprinkler system. Switch closure will cause a sprinkler alarm. Water flow switches can be programmed as latching or non-latching. You can program a delay of up to 90 seconds to be used with a water flow switch. The delay allows for normal, brief changes in sprinkler system water pressure. The water flow alarm will not activate unless the switch is active for the programmed delay time.<br><b>Note:</b> Waterflow delay of the FACP and the waterflow device shall not exceed 90 seconds.<br>If a delay is used, the system begins counting down when the switch closes. If the switch opens (restores) before the timer expires, a water flow alarm is not generated. If the water flow switch remains closed after the timer expires, a water flow alarm will be generated. |
|             |                   | SUPERVISY             | Non Latching             |   | Use this switch type for tamper monitoring of sprinklers and other fire protection devices. If a contact closes, a sprinkler supervisory event will be generated. Supervisory switches can be latching or non-latching.   |
|             |                   | FIREDRILL             |                          |   | System-level, non latching switch. This switch is an alternative way of causing a fire drill. It has the same operation as the fire drill option available from the annunciator. When the switch is activated, a fire drill begins; when the switch is de-activated, a fire drill ends.   |
|             |                   | SILENCE               |                          |   | System-level switch provides an alternate way to silence the system; same effect as pressing the <b>Silence</b> key.  |
|             |                   | RESET                 |                          |   | System-level switch provides an alternate way to reset the system; same effect as pressing the <b>Reset</b> key.  |

Table 7-5 Point Programming

| Module Type    | Type Selection    | Function     | Latching Option  | Comments  |
|----------------|-------------------|--------------|--|---|
| SLC<br>(cont.) | SWITCH<br>(cont.) | PAS_ACK      |  | Positive acknowledge switch. This switch must be used in zones programmed as Positive Alarm Sequence (see Table 7-1).<br>If an acknowledge switch closes when an alarm or trouble condition is not already in progress, a trouble will occur. You must use a UL listed normally open, momentary switch type. The switch must be rated at 5V, 100 mA (minimum) and be used with an EOL resistor for supervision. |
|                |                   | ZN_AUX1      | Latching   | Use these switch types if you want to monitor special zone-level conditions (such as operation of a fan or damper).   |
|                |                   |              | Non Latching   |   |
|                |                   | ZN_AUX2      | Latching   |   |
|                |                   |              | Non Latching   |   |
|                |                   | SYS_AUX1     | Latching   | Use these switch types if you want to monitor special system-wide conditions (such as operation of a fan or damper).  |
|                |                   |              | Non Latching   |   |
|                |                   | SYS_AUX2     | Latching   |   |
|                |                   |              | Non Latching   |   |
|                |                   | DETECT SW    |  | Used to monitor conventional 4-wire detectors, a contact closure will generate a detector alarm event.  |
|                |                   | TAMPER       | Latching   | Performs identically to a supervisory switch, but will be indicated as a tamper switch on the LCD annunciator.  |
|                | Non Latching      |              |  |   |
|                | MAN REL           | Latching     | Manual release switch, typically a pull station.   |   |
|                |                   | Non Latching |  |   |
|                | ILOCK             | Latching     | Interlock release switch input.  |   |
|                |                   | Non Latching |  |   |
|                | CO DETECT SW      |              | CO Detector Switch   |   |
|                | NOTIF             | OUTPUT PT    | Select Group   |   |
|                |                   | AUX CONST    |  | Use for auxiliary power applications where the devices require constant power.  |
|                |                   | AUX RESET    |  | Use for auxiliary power, resettable applications. See Section 4.13.2.3 for a description of how this option operates.   |
|                |                   | AUX DOOR     |  | Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See Section 4.13.2.1 for a description of how this option operates.  |
|                | RELAY             | OUTPUT PT    | Select Group   | Output Point, a general use relay type. Use for applications requiring a relay, such as fan shutdown, elevator recall, and so on.   |
|                |                   | AUX RESET    | Select Group   | Use for auxiliary power, resettable applications. See Section 4.13.2.3 for a description of how this option operates.   |
| AUX DOOR       |                   | Select Group | Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See Section 4.13.2.1 for a description of how this option operates. |   |
| SLC LED        | Select LED No.    | UNUSED       |  |   |
|                |                   | NOTIF        | When NOTIF is selected you must then select the output group number.   |   |

## 7.6.2 Point Programming For Internal or External Power Module (5496)

To program for an internal or external power module points, follow these steps:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Press  to enter point menu.
5. Press the  or  arrows to select the desired module, then press . Refer to Section 6.5 for available choices.
6. Enter the number of the circuit or point you wish to edit, then press . Refer to 7. for available selections.
7. Select the type by pressing the  or  arrows, then press .
8. Select the function by pressing the  or  arrows, then press .
9. Select the group by pressing the  or  arrows, then press .
10. Edit point name, or press  to skip point name edit. See Section 7.6.3.1.

11. Repeat Steps 1 through 15 for all circuits.

| Choices                | Type Selections  | Function Selections for each Type                                   | Comments  |
|------------------------|------------------|---|---|
| Enter Point or Circuit |                  |   |   |
| Select Type            | UNUSED           |   |   |
|                        | B NOTIF          |   |   |
|                        | A NOTIF          |   |   |
|                        | AUX PWR          | CONSTANT  | Constant auxiliary power  |
|                        |                  | RESETTABLE  | Resettable auxiliary power  |
|                        |                  | DOOR  | Door holder auxiliary power   |
|                        |                  | SOUNDER SYNC  | Sounder Sync auxiliary power  |
|                        | B SWITCH         | MAN PULL  | Refer to comments column of Table 7-5 for description of these options<br><br>Latch or Non-latching feature only appears for waterflow, supervisory, tamper, zone aux1, zone aux2, system aux1, and system aux2 |
|                        |                  | WATERFLOW   |   |
|                        |                  | SUPERVSY  |   |
|                        |                  | TAMPER  |   |
|                        |                  | FIREDRILL   |   |
|                        |                  | SILENCE   |   |
|                        |                  | RESET   |   |
|                        |                  | PAS_ACK   |   |
|                        |                  | ZN_AUX1   |   |
|                        |                  | ZN_AUX2   |   |
|                        |                  | SYS_AUX1  |   |
|                        |                  | SYS_AUX2  |   |
|                        | MAN REL          |   |   |
| ILOCK                  |                  |   |   |
| A SWITCH               | Same as B SWITCH |   |   |
| B DETECTOR             | 2-WIRE SMK       | Used for Class B, 2-wire detectors                                  |   |
|                        | 4-WIRE SMK       | Used for Class B, 4-wire detectors                                  |   |
|                        | 4-WIRE CO SMK    | Used for Class B, 4-wire CO detectors                               |   |
| A DETECTOR             | 2-WIRE SMK       | Used for Class A, 2-wire detectors                                  |   |
|                        | 4-WIRE SMK       | Used for Class A, 4-wire detectors                                  |   |
| Select Group           |                  | Group or Zone selection will appear depending on the type selected. |   |
| Edit Name              |                  | See Section 7.3.1.1.  |   |

### 7.6.3 Point Programming For 5880 and 5865 Modules

To program 5880 or 5865 module points:

1. Enter the installer code.
2. Press **▶** or **ENTER** to display the main menu.
3. Select **7** for Program Menu.
4. Press **4** to enter point menu.
5. Press the **▼** or **▲** arrows to select the desired module. Refer to Section 6.5 for available choices. Press **ENTER**.

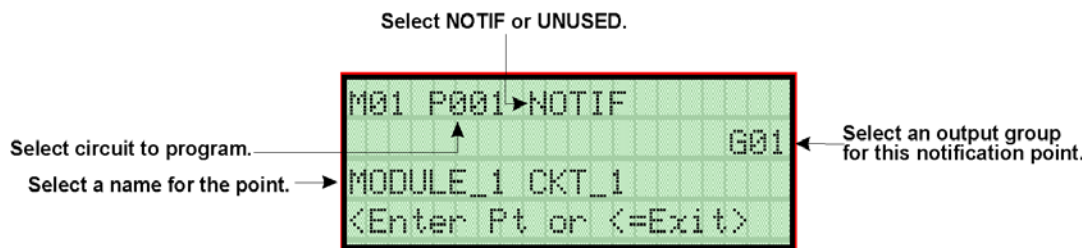


Figure 7-10 Programming Points Screen for 5880 and 5865 Modules

6. Enter the point number. Press **ENTER**.
7. Press the **▼** or **▲** arrows to select the type (Notification or unused). Press **ENTER**.
8. Press the **▼** or **▲** arrows to select the desired Group. Press **ENTER**.
9. Edit module name. See Section 7.6.3.1.  
Or  
Press **▶** to skip module name edit.
10. Repeat Steps 1 through 13 for all points.



### 7.6.3.1 Assigning a Name to a Point

You can assign a name to a point to make it easier to recognize on a display.

If you wish to edit the name of a point, follow these instructions:

1. Do steps 1 through 4 of Section 7.6.3.
2. Using the ▲ or ▼ arrow, select the module of the point you want to edit, press



3. Enter the point number.

4. Press ► until the module name is blinking. Press



A screen similar to the one shown in Figure 7-2 displays.

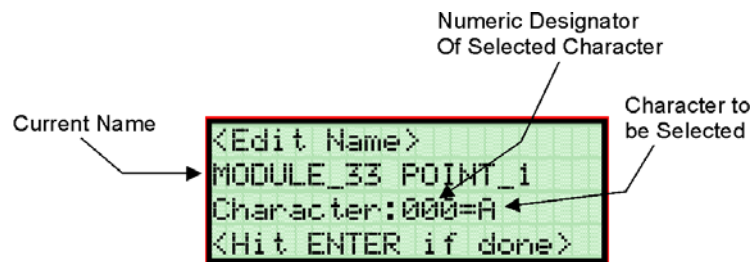


Figure 7-11 Selecting Character for Zone Name

5. Select the characters for the point name by pressing the ▲ or ▼ arrow until the desired character is shown then press ►.

OR

Enter the Numerical Designator for the character you want, then press ►. See Appendix B of this manual for a list of available characters and their numeric designators.

6. Repeat step 6 until the name is complete.

7. Press when the name is complete.

## 7.7 System Options

---

This section of the manual explains how to customize software options that affect general operation of the system. This includes such items as: AC loss hours, system clock options, holidays schedule, telephone and reporting account options. Refer to each individual subsection for complete instructions.

### 7.7.1 Reporting Account






Up to four reporting accounts can be used with the control panel. Events in accounts are reported by zone.

Each account is assigned an up-to-6-digit account number. Each account is also assigned a unique ID (1-4) which determines the priority for reporting (“1” has the highest priority; “4” has the lowest).

Disable any unused accounts by selecting “N” for all events (see Figure 7-12, next page). If the system is local only (does not connect to a central station), disable all events for all four reporting accounts.

Options for each account can be customized. These options appear on the Reporting Accounts screen. Some related options appear on the Phone Lines screen (see Section 7.7.2).

To access the Reporting Accounts screen:

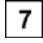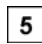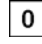1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. From the Program Menu, select  for System Options.
5. From the next menu, select  for Reporting Accounts.

### 7.7.1.1 Edit Accounts

6. From the next menu, select **1** for Edit Account.

A screen similar to one shown in Figure 7-12 will display. The following subsections describe the options on each field.

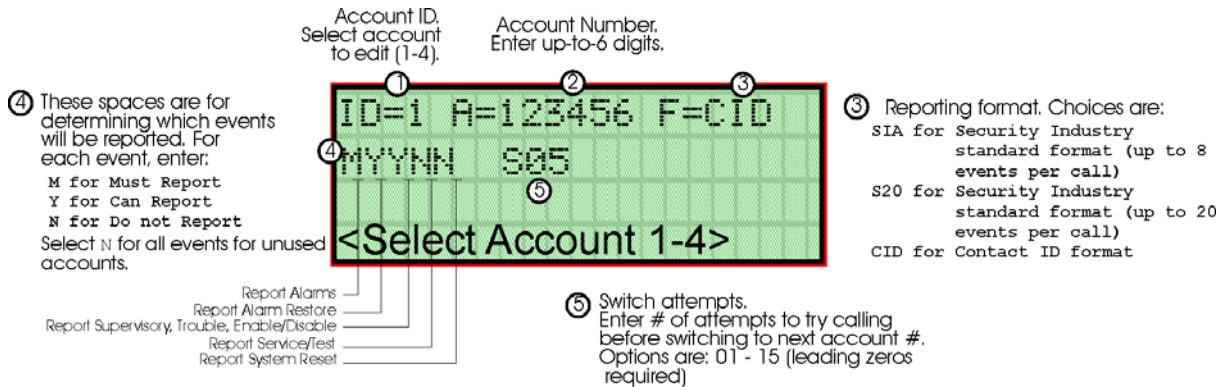


Figure 7-12 Reporting Account Editing Screen

#### Select Account (ID)

The control panel provides up to 4 reporting accounts. The priority of an account is based on its account ID. Account 1 is highest priority; Account 4 is lowest. Use Account 1 to report the highest priority events.

7. Press the **▲** or **▼** arrow to select account ID number, then press **ENTER**.

#### Edit Account Number

Enter an up-to-6-digit number for each account to identify the account to the central station. See Figure 7-12 for location of this option on the screen. The account number should be compatible with the reporting format used. For example, the Contact ID format transmits up to four digits only.

8. Enter the desired account number (up to 6-digits), then press **ENTER**.

#### Select Reporting Format

Select a reporting format for each account. Options are:


|     |   |
|-----|---|
| SIA | SIA format. 8 events per call.                                      |
| CID | Ademco's Contact ID format  |
| S20 | Same as SIA but limits events reported to 20 events per phone call. |

9. Press the **▲** or **▼** arrow to select the reporting format, then press **ENTER**.

## Events to Report

The next six options select which types of events (or event families) will be reported to this account. (See Figure 7-12 for location of these options on the screen.) Events are reported by zone.

| Event Family                               | Events Included in this Family  |
|--|---|
| Alarms                                     | All alarms (Water Flow, Manual Pull, Detectors, Auxiliary Switches)   |
| Alarm Restore                              | All alarm restores.   |
| Supervisory, Trouble, Enable/Disable Point | All trouble and supervisory conditions and trouble and supervisory restores. Enabling and disabling of input and output points. |
| Service/Test                               | Fire drill, walk test, dialer test, automatic test, all programming sessions.   |
| System Reset                               | All system resets.  |

10. Press the  or  arrow to select Must, Yes, or No (see Table below), then press





11. Repeat step 10 for all five event report options.

For each event family, select M, Y, or N.

|        |   |
|--------|---|
| M(ust) | Must Report. Selecting "M" makes this a primary reporting account for this family of events. The dialer MUST report events in this family to this account.<br>Selecting Must makes an account a primary reporting account. The dialer will try to report the event to the primary account until it exceeds the "Switch Attempts" value. When the dialer has exceeded the Switch Attempt retry limit, it will switch to a backup account (a "Can Report" or "Yes" account, see below). If the dialer cannot report the event to any of the backup accounts, it will return to the primary account and repeat the process until it exceeds the "Fail Attempts" value. If the Fail Attempts limit is exceeded, an Account Trouble condition is generated and a local trouble will sound. |
| Y(es)  | Can Report. Selecting Y makes this a backup account for this event family. The dialer will report to this account only if it was previously unable to report the event to a Must account.   |
| N(o)   | No events in this family will ever be reported to this account.   |

## Switch Attempts

Specify the number of times the dialer should attempt to report to this account before switching to the next account. Range is 3-5.

12. Enter the number of switch attempts (or press the  or  arrow), then press



## Telephone Number

Enter up to 24 characters for phone number for this account.

Enter up to 24 characters for the phone of the account.

Comma adds a 2 second pause.



The following special characters are available:















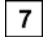

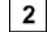

**Table 7-6: Special Dialing Characters**

|   |  |
|---|--|
| # | Pound (or number) key on the telephone |
| * | Star key on the telephone              |
| , | Comma (character for 2-second pause)   |

Use the number buttons on the annunciator or the up- and down-arrow keys to select special characters. Characters begin displaying after “9”. See Figure 7-12 for an example.




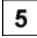
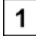



### 7.7.1.2 Auto Test Time

To access the automatic dialer test time screen:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. From the Program Menu, select  for System Options.
5. From the next menu, select  for Reporting Account.
6. From the next menu, select  for auto test time.
7. Enter the hour you desire the control panel to send an automatic test report (or press the  or  arrow), then press .
8. Enter the minutes (or press the  or  arrow), then press .
9. Select AM or PM by pressing the  or  arrow, then press .
10. Select Report Time Interval by pressing the  or  arrow, then press . Time Interval selections are 24hr, 12hr, 6hr and 4 hr.

## 7.7.2 Phone Lines

To access the phone lines screen:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. From the Program Menu, select  for System Options.
5. Select  for the phone lines menu.
6. Select the phone line to be edited (1 or 2) by pressing the  or  arrow, then press .

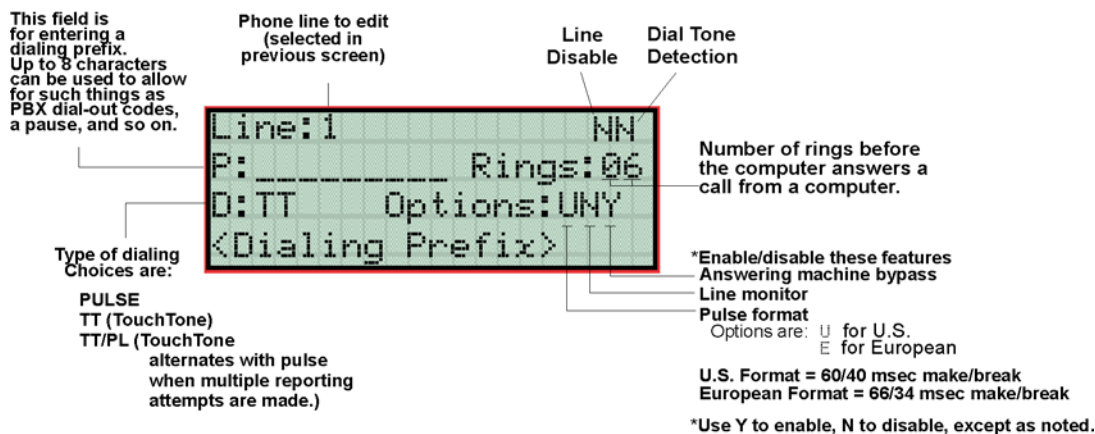




Figure 7-13 Phone Lines Editing Screen

### 7.7.2.1 Dialing Prefix

Enter up to 8 characters to be used for such things as PBX dial-out codes, a pause, and so on. The following special characters are available:

- # Pound (or number) key on the telephone
- \* Star key on the telephone
- , Comma (character for 2-second pause)


Use the number buttons on the annunciator or the up- and down-arrow keys to select special characters. Characters begin displaying after “9”. See Figure 7-13 for an example.

7. Enter a dialing prefix (if needed), then press . Or, press  to bypass the dialing prefix option.

### 7.7.2.2 Number of Answer Rings

This option is used in conjunction with the Silent Knight Software Suite 5660. Use the option to determine the number of rings before the panel answers a call from the computer. Range is 00-15 rings. This option is factory-programmed as 06 rings, which should be compatible for most installations where the answering machine bypass feature is used. You may need to adjust it depending on the installation's telephone system.

The selection made here must match the programming for this option in the Communication Configuration dialog box of the 5660 software. See the SKSS manual for more information (PN 151240).




8. Enter the desired number of answer rings, then press .

### 7.7.2.3 Dial Option (TouchTone or Pulse)

9. Press the  or  arrow to select the dial option, then press .

| Dial Option | Description  |
|-------------|--|
| PULSE       | If this option is selected, only pulse dialing will be used for this phone line.   |
| TT          | TouchTone dialing. If this option is selected, only TouchTone dialing will be used for this phone line.  |
| TT/PL       | TouchTone alternating with pulse. If this option is selected, the dialer will first attempt to use TouchTone. It will switch to pulse if TouchTone is not successful on the first attempt. It will continue to alternate between TT and pulse for additional attempts. |




### 7.7.2.4 Rotary Format

10. Press the  or  arrow to select the pulse ratio for rotary dialing option, then press . Options are:

- U            U.S. standard format. Uses the 60 msec / 40 msec make/break ratio.
- E            European format. Uses the 66 msec / 34 msec make/break ratio.

### 7.7.2.5 Line Monitor

Enable the line monitor for each phone line that will be used. See Figure 7-13 for location of this field on the phone lines screen. When the phone line monitor has been enabled for a phone line, a trouble condition will occur if the line is not connected. If a phone line will not be used, it must be disabled.




11. Select Y (monitor line) or N (don't monitor line) by pressing the  or  arrow, then press .

### 7.7.2.6 Answering Machine Bypass




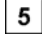

This option is used in conjunction with the Silent Knight Software Suite 5660. This feature ensures that an answering machine will not interfere with communication between the panel and the computer. If an answering machine is used at the panel site, enable this feature; if an answering machine is not used, disable the feature.

This option is factory-programmed as Yes (enabled).

The selection made here must match the programming for this option in the Communication Configuration dialog box of the 5660 software. See the manual for the software (p/n 151240) if you need more information.

12. Select Y (answering machine bypass enabled) or N (answering machine bypass disabled) by pressing the  or  arrow, then press .

### 7.7.3 Sys. Event Outputs

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. From the Program Menu, select  for System Options.
5. From the System Options Menu, select  for Sys. Event Outputs.



### 7.7.3.1 Trouble Events

You can map certain system trouble events to an output group. To access the screen for selecting output groups and cadence patterns for system trouble events.

- Press **1** for Trouble Events. A screen similar to the one in Figure 7-14 will display. Select a group and a cadence pattern for each event as needed for your application. The U: field is for a user-specified trouble condition. You can program an output group and cadence pattern for any of the following events:

|          |  |
|----------|--|
| Battery  | Low battery condition.                                     |
| Phone Ln | Phone Line 1 or 2 trouble.                                 |
| Account  | Account trouble; cannot report to account.                 |
| Printer  | Printer trouble. (Currently not supported; do not select.) |
| Aux Pwr  | Auxiliary power trouble.                                   |
| Sys Sw   | Trouble with a system switch.                              |
| Group Tr | Trouble with an output group.                              |
| SBUS Com | SBUS communication trouble.                                |
| SBUS Pwr | SBUS power trouble.  |
| SLC Loop | Trouble on the SLC loop.                                   |
| AC Loss  | AC power lost.   |

Selecting this option means that any system trouble will activate this group.

|            |      |     |
|------------|------|-----|
| Sys Trbl:  | G002 | C00 |
| Alarm Sil: | GXXX | CXX |
| Trbl Sil:  | GXXX | CXX |
| U=Battery  | GXXX | CXX |

For "C" column, select the # of the cadence pattern that will be activated for these events. (Available patterns described earlier in this section.)

Choose a system trouble event that will respond with the output group to the left.

For "G" column, select the output group that will be activated for these events. ("XXX" means no group has been selected.)




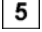
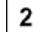
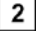
Figure 7-14 System Trouble Event Mapping Example

### 7.7.3.2 System Alarm Cadence

Fire drill and system auxiliary alarm events can have special cadence patterns to distinguish them from other types of alarms. See Section 7.4.1.4 for available cadence patterns.

A typical use of the System Aux1 and Aux2 patterns is to distinguish fire emergencies from other types of emergencies. The System Aux1 and Aux2 alarms would be triggered by a system-wide switch.

To access the screen for selecting output groups and cadence patterns for system trouble events:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. From the Program Menu, select  for System Options.
5. From the System Options Menu, select  for Sys. Event Outputs.
6. Press  for System Alarm Cadence.

A screen similar to the one in Figure 7-15 will display. Select a cadence pattern for these special events if required for your application.



Figure 7-15 Special Cadence Patterns for Fire Drill and Auxiliary Alarm Events







## 7.7.4 Miscellaneous Options 1

Through this programming option you can set the water flow delay time, low AC report delay, enable or disable automatic daylight savings time adjustment, clock format, and AC clock frequency.

### 7.7.4.1 Water Flow Delay

You can program a delay of 0-90 seconds (zero means no delay) to be used in conjunction with a water flow switch. The delay is system-wide. All water flow switches on the system will use the same delay period.

To access the screen for programming water flow delay, follow these steps:

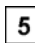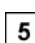1. Enter the installer code.
2. Press  or  to display the main menu.
3.  Select  for Program Menu.
4. Select  for System Options.
5. Select  for Miscellaneous Options 1.

A screen similar to the one shown in Figure 7-16 will display.

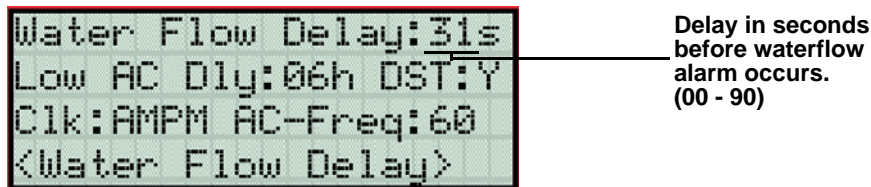



Figure 7-16 Water Flow Delay Programming Screen

6. Enter the number of seconds (0 to 90) to delay an a water flow switch alarm, then press .

### 7.7.4.2 Low AC Report Delay

Note: You must select 1-3 hours in UL central station installations and UL remote signaling installations.

You can adjust the number of hours before a Low AC report will be sent to the central station.

To program low AC report delay, follow these steps:

Note: Steps continued from step 6 of Section 7.7.4.1.

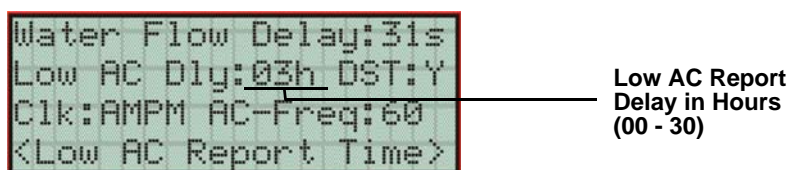


Figure 7-17 Low AC Report Delay Programming Screen

7. Enter the number of hours before a low AC report will be sent to the central station, then press . Refer to Figure 7-17.

### 7.7.4.3 Automatic Daylight Saving Time Adjustment

The control panel has an automatic DST (Daylight Saving Time) adjustment feature. Before January 2007, if this feature is enabled (set to Yes), the system clock will switch to DST on the first Sunday in April at 2:00 a.m. and revert to standard time on the last Sunday in October at 2:00 a.m. After January 2007, if this feature is enabled, the system clock will start and end DST according to the settings made in Misc. Options 3 (see Section 7.7.6.3). If this feature is not enabled (set to No) the Daylight Saving Time change is not made to the system clock.

To enable or disable DST adjustment continue programming from step 7 above:

8. Select Y (enabled) or N (disabled) by pressing the or arrow, then press .

### 7.7.4.4 Clock Display Format (AM/PM or Military)

To change the system clock display format, continue programming from step 8 above:

9. Select AMPM (for AM/Pm display format) or MIL (for military or 24 hr display format) by pressing the or arrow, then press .

### 7.7.4.5 Change AC Line Frequency

The panel's AC line frequency is selectable for 50, 60 Hz, or Neither. AC Frequency feature dictates how the control panel will calculate time based on the AC line frequency used in the installation site. The "Neither" option can be used in areas where the AC line frequency is not dependable and you want the panel to calculate

time from the internal crystal. The internal crystal is not as accurate as the AC power source and either 60 Hz or 50 Hz should normally be selected. The panel defaults to the 60 Hz. selection






To change the AC line frequency, continue programming from step 9 above:

10. Select 50, 60 or Neither, by pressing the  or  arrow, then press .

## 7.7.5 Miscellaneous Options 2

Through this programming option you can turn the strobe synchronization during silence feature On or Off, and select the control panel to report events by zone or by point.



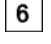

To edit Miscellaneous Options 2:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Select  for System Options.
5. Select  for Miscellaneous Options 2.

### 7.7.5.1 Synchronize Strobes Active During Silence

When “SYNC Strbs w/ Sil:” is Selected as Y (Yes) then strobes will continue to flash when the system is silenced and will stop flashing when the system is reset.





*Note: The “SYNC Strbs w/ Sil:” only functions with outputs that use a synchronized output pattern.*

6. Press the  or  arrow to toggle this selection between Y (Yes) or N (No).
7. Press  or  to make your selection and move to the next programming option.

*Note: See Section 7.4.1.4 for more information about Synchronization protocol choices.*

### 7.7.5.2 Auto Display Oldest Event

When this feature is programmed Y (Yes) then the oldest un-acknowledge event will automatically display on the control panel and remote annunciators after there has been no activity on any system touchpad for two minutes.

8. Press the  or  arrow to toggle this selection between Y (Yes) or N (No).
9. Press  or  to make your selection and move to the next programming option.





### 7.7.5.3 Report by Zone or by Point

When the “Report by” option is set to Zone, then the control panel will report events by zone. If Point is selected then the control panel will report events by point.

10. Press the  or  arrow to toggle this selection between Zone or Point.

11. Then press  or . See Section 9 for reporting codes.




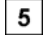

### 7.7.5.4 Single Key Acknowledge

When this feature is programmed Y (Yes) allows the user to press  and display the oldest un-acknowledged event in the system. Pressing  again will acknowledge the event, then display the next oldest un-acknowledge event without pressing the  or  arrow.

## 7.7.6 Miscellaneous Options 3

From Miscellaneous Options 3, you set the alarm verification time, turn the Plex Door option on/off, and set the start and end week and month of Daylight Saving Time.



To edit Miscellaneous Options 3:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Select  for System Options.
5. Select  for Miscellaneous Options 3.

### 7.7.6.1 Alarm Verification Time

You can set the alarm verification time from 1 to 250 seconds (default is 60 seconds).

To set the alarm verification:


6. Enter the desired number of seconds for the alarm verification time.
7. Press  or  to make your selection and move to the next programming option.

### 7.7.6.2 Plex Door Option

If installing the plex door hardware (PN Plex-2), you must turn the Plex Door option

On as described in this section.

To turn the Plex Door option on/off:





8. Press the ▲ or ▼ arrow to toggle this selection between Y (Yes) or N (No).
9. Press ► or  to make your selection and move to the next programming option.

### 7.7.6.3 Daylight Saving Time Start and End

This option lets you to adjust the week and month Daylight Saving Time (DST) starts and ends. For this feature to work, you must enable (set to Yes) the DST option under Misc. Options 1 (see Section 7.7.4.3). You can view and change the settings in this option anytime, however, settings will not take effect until 2007. The default values for the DST Start and End options reflect the August 8, 2005 DST law that goes into effect in 2007:

DST Start: The second Sunday in March  
DST End: The first Sunday in November

To set the start and end for Daylight Saving Time:




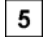
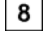
10. Press the ▲ or ▼ arrow to select the week (1st, 2nd, etc.) Daylight Saving Time starts, then press  to make your selection and move to the month setting.
11. Press the ▲ or ▼ arrow to select the month (January – December) Daylight Saving Time starts, then press  to make your selection and move to the DST End option.
12. Press the ▲ or ▼ arrow to select the week (1st, 2nd, etc.) Daylight Saving Time ends, then press  to make your selection and move to the month setting.
13. Press the ▲ or ▼ arrow to select the month (January – December) Daylight Saving Time ends, then press  two times to make your selection and exit Misc. Options 3.

## 7.7.7 Edit Banner Message

The banner is the message that displays on the panel LCD when the system is normal, that is, when no alarms or troubles exist and no one is currently using system menus. You can create a customized message, which can be up to 40 characters, two lines of 20 characters each.

If you do not create a customized message, the system will use the internal banner. You cannot change the internal banner.

To customizing the banner display message:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Select  for System Options.
5. Select  for Edit Banner.

A screen similar to the one shown in Figure 7-18 will display.

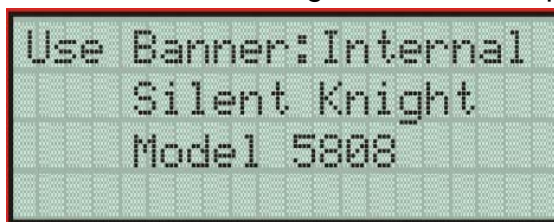





Figure 7-18 Internal Banner Message

6. Press the  or  arrow to select "Custom", then press .

A screen similar to the one shown in Figure 7-19 will display.

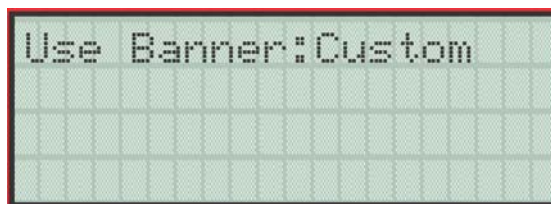






Figure 7-19 Custom Banner Edit Screen

7. Select each character of a word by pressing the  or  arrow, then press  to move to the next character.
8. When word or sentence is complete press  to move to line two of the custom banner. Repeat step 7 and 8.






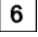



## 7.8 JumpStart Autoprogramming

---

### IMPORTANT!

JumpStart is intended to be used prior to performing any custom programming. Each time JumpStart is executed, all options will be reset to their default values. Do not run JumpStart after you have configured the system through programming.

To run JumpStart:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Select  for System Options.
5. Press the  or  arrow to select “Yes” from the warning screen.
6. Press .

## 7.9 Computer Account





---




An installer at the panel site can initiate communications between the panel and a computer running the 5660 SKSS (see also Section 8.5.19). In order for this communication to function properly both the computer (running the software) and the control panel must have matching computer account numbers and computer access codes.

Before you program in this location you should know how your control panel will communicate with the downloading computer, either through direct connect (RS232) or via the phone lines (Internal Modem).

If the panel initiates the call to a downloading computer, a phone number must be programmed in the computer accounts area. If the computer initiates the call then answering machine bypass (see Section 7.7.2.6) may need to be selected.

To program computer account information:

1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Select  for System Options.

5. Enter the computer account number, then press .
6. Enter the computer code (up to 7-digits), then press .
7. Enter the phone number the panel will dial to connect to a downloading computer (up to 24-digits), then press . See Table 7-6 for special dialing characters.

## 7.10 Access Codes

---

Access codes provide the user access to the control panel functions. Each access code can be customized for each user. This allows some users the ability to access programming and other higher level panel functions, while other users may only need access to lower level functions such as performing fire drills, or acknowledging trouble conditions.

Profile 1 is the profile that dictates what functions the Fire Fighter Key has access to. Because this is the profile for a key the user name and the access code can not be edited for this profile.








Profile 2 is the profile for the installer and is referred to as the “Installer Code”. This profile’s user name and panel functions can not be edited.

Table 7-7 lists the panel functions that can be selected for each user profile.

**Table 7-7: User Profile Selectable Panel Functions**
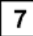
| Type of Function   | Selectable Functions       |
|--------------------|----------------------------|
| Panel Operations   | System Reset               |
|                    | System Silence             |
|                    | Event Acknowledge          |
| Panel Menus        | System Test                |
|                    | Fire Drill                 |
|                    | Indicator Test             |
|                    | Walk Test no Report        |
|                    | Walk Test with Report      |
|                    | Dialer Test                |
|                    | Clear History Buffer       |
|                    | Point Functions            |
|                    | Disable/Enable Point       |
|                    | Point Status               |
|                    | Set SLC Device Address     |
|                    | SLC Device Locator         |
|                    | SLC Multi-Device Locator   |
|                    | I/O Point Control          |
|                    | Event History              |
|                    | Set Time & Date            |
|                    | Printer Options            |
|                    | Event Logging              |
|                    | Print Event History        |
|                    | Print Detector Status      |
|                    | Print System Configuration |
|                    | Reset Dialer               |
|                    | Program Menu               |
| System Information |                            |
| Upload/Download    |                            |

To change an access code:


1. Enter the installer code.
2. Press  or  to display the main menu.
3. Select  for Program Menu.
4. Select  for System Options.  
Display reads:                    Select Profile 01  
  Fire Fighter's Key
5. Select the access code you wish to edit by pressing the  or  arrow. Then press .

## 7.10.1 Profile Edit Menu



From the Profile Edit Menu you can change the users name, access code, and the panel functions that the user will have access to with their code.

*Note: Profile 1 (Fire Fighter's Key) the user name and access code can not be edited. Profile 2 (Installer) the user name and panel functions can not be edited.*


### 7.10.1.1 Edit Name

6. Select each character of a word by pressing the ▲ or ▼ arrow, then press ► to move to the next character.
7. Repeat step 7 until user name is complete. Then press  to finish.

### 7.10.1.2 Edit Access Code

8. Enter new access code (minimum of 4 digits, maximum of 7 digit). Press .
9. Enter code again. Press .

### 7.10.1.3 Panel Functions

10. Press the ▲ or ▼ arrow to move through the list of available functions.
11. Then press ► to move to Y (yes) or N (no) selection column.
12. Press the ▲ or ▼ arrow to select Y or N. Press .
13. Repeat steps 14 through 17 until user profile is complete.

---


## Section 8

# System Operation

---

---

Operation of the control panel is simple. Menus guide you step-by-step through operations. This section of the manual is an overview of the operation menus. Please read this entire section carefully before operating the panel.

Press  to view Main Menu: Select the desired menu option. Enter your access code if prompted.

*Note: See Section 7.10 for information on how to modify user access code profiles.*

### 8.1 Default User and Installer Codes

---


User Code: Factory-programmed as 1111.

Installer Code: Factory-programmed as 123456.

### 8.2 Annunciator Description

---

Figure 8-1 shows the annunciator that is part of the control panel board assembly.

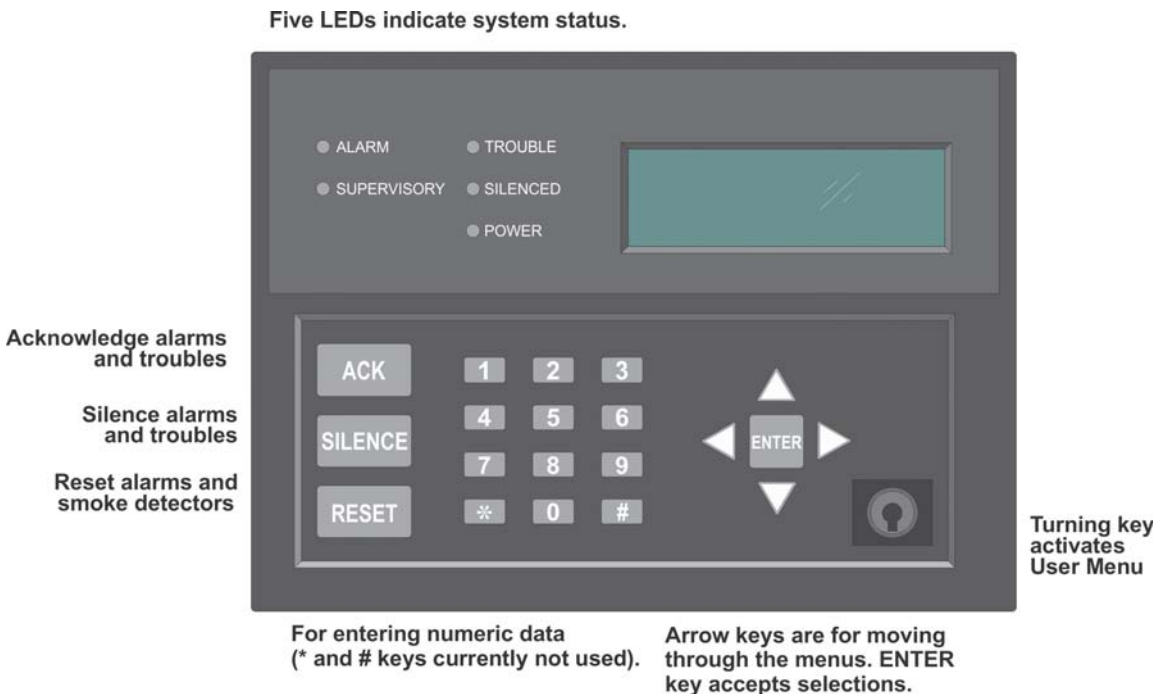

**Figure 8-1 Control Panel Annunciator**

## 8.2.1 LCD Displays

The control panel LCD displays system messages, annunciates alarms, supervisories and troubles; provides status information; and prompts for input. These messages can be up to 80 characters, displaying over four lines of 20 characters each. Annunciator keys beep when they are pressed.

## 8.2.2 Banner

The banner is the message that displays on the control panel when the system is in normal mode (no alarm or trouble condition exists and menus are not in use). You can create a customized message that will display instead of the internal (default) message. See Section 7.7.7 for information on customizing the banner.

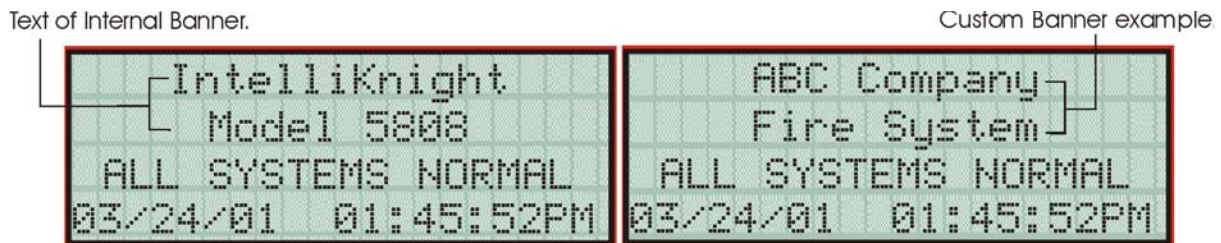


Figure 8-2 Banner Display Examples

## 8.3 Key Operation

The key on the control panel board assembly is for accessing the User Menu for basic system operation. The key is activated when it is turned once to the right (clockwise). If the key has been used to activate the menu, it must be turned counter-clockwise to exit the menu.

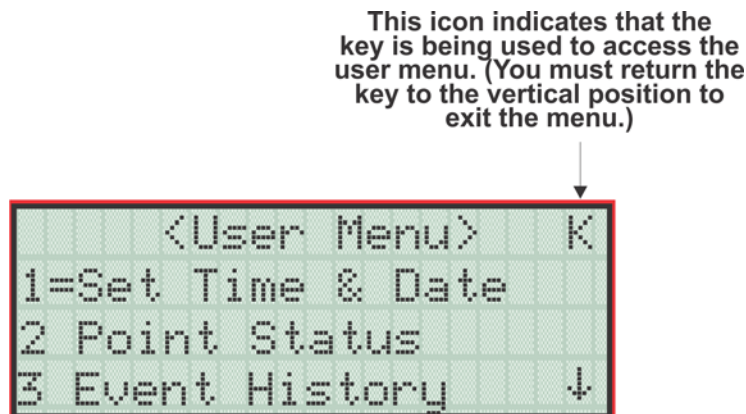




Figure 8-3 Using a Key to Access the User Menu

## 8.4 Menu System

The control panel is easy to operate from Main Menu. To view the Main Menu press

the  or  button on the control panel or remote annunciator, then turn the firefighters key clockwise or enter your access code. The Main Menu will appear as shown in Section 8.4.1. Select the desired option. If you have entered a code or firefighters key does not have access to the menu item you have selected the following display message will appear:

-Access denied.-  
Entered PIN does not  
allow access to this  
function.

You must enter an access code with the correct profile settings to gain access to that menu item.


The control panel supports up to 20 access codes. The profile for each access code (or user) can be modified through the programming menu option (see Section 7.10 for access code programming).

### 8.4.1 Main Menu Overview

The chart below is a brief overview of the Main Menu. These options are described in greater detail throughout this section of the manual.

| Main Menu Options          | Description  |
|----------------------------|--|
| <b>1</b> System Tests      | From here both menus can access Fire Drill and Indicator Test.   |
| <b>2</b> Point Functions   | From here both menus can enable / disable points.  |
| <b>3</b> Event History     | Display event history on the LCD. See Section 8.5.6 for more information.  |
| <b>4</b> Set Time and Date | Set time and date for the system.  |
| <b>5</b> Printer Options   | Options for controlling a printer if attached to the system. If a printer is used, the Model 5824 serial/parallel interface module must be used. |
| <b>6</b> Reset Options     | Cancel any attempt to call the central station. Any calls awaiting additional attempts will be aborted.  |
| <b>7</b> Program Menu      | Brings up a set of menus for programming the panel, including changing access codes. These options are described in detail in Section 7.         |
| <b>8</b> System Info       | View system information, including model and serial numbers and revision number and date.  |
| <b>9</b> Up/Download       | Initiate communication from the panel site between the panel and a computer running the Silent Knight Software Suite.                            |



## 8.4.2 Using the Menus

|                            |   |
|----------------------------|---|
| To move through the menus: | Use ▼ and ▲ to move through the options in a menu. Use to move to a previous menu.  |
| To select an option:       | Enter the number of the option.<br>–OR–<br>Press  (Enter key) if the option appears at the top of the menu (= symbol displays after the option number in this case). |


## 8.5 Basic Operation

---


### 8.5.1 Setting Time and Date

1. From the Main Menu, select **4** for Set Date and Time.
2. Make changes in the fields on the screen. Use  (right arrow) to move through the fields. Use the ▼ and ▲ to select options in the fields.
3. When the date and time are correct, press .

### 8.5.2 Disable / Enable NACs by Group




1. From the Main Menu, select **2** for point functions.
2. Select **1** for Disable/Enable Point.
3. Select **1** to Disable NACs by group or **2** to Enable NACs by group.
4. Use ▼ and ▲ to move through the list of groups. Press  to select the group highlighted.

### 8.5.3 Disable / Enable a Template


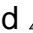


1. From the Main Menu, select **2** for Point Functions.
2. Select **1** for Disable/Enable Point.
3. Select **1** to Disable NACs by Template or **2** to Enable NACs by Template.
4. Use the ▼ or ▲ arrow key to select the Template and press .



### 8.5.4 Disable / Enable a Zone

1. From the Main Menu, select **2** for Point Functions.
2. Select **1** for Disable/Enable Point.
3. Select **5** to Disable Zone Points or **6** to Enable Zone Points.
4. Use the  or  arrow key to select the Zone and press .

### 8.5.5 Disable / Enable a Point

1. From the Main Menu, select **2** for Point Functions.
2. Select **1** for Disable/Enable Point.
3. Select **7** for Disable/Enable Pt.
4. Use  and  to move through the list. Press  to select the module where the point you want to disable/enable is located. A description of the point should display. The fourth line of the screen should show "NORMAL" (meaning that the point is currently enabled) or "DISABLED" (the point is currently disabled). Press  to toggle between NORMAL and DISABLE.

### 8.5.6 View Event History

Use the View Event History feature to display events on LCD. From the Main Menu, press **3** to select Event History. Events will begin displaying with most recent events first.

The panel can store up to 1000 events. When it reaches its 1000-event capacity, it begins deleting, starting with the oldest events.

If a printer is attached to the system (via a Module 5824 serial/parallel interface module), you can print event history (see Section 8.5.20).

The 5660 SKSS can be used to retain more than 1000 events and to create event history reports.

### 8.5.7 Clear Event History

From the Installer Menu select **1** for System Tests. From the test menu select **6** Clear History Buffer.

### 8.5.8 Conduct a Fire Drill

1. From the Main Menu, press **1** for System Tests.

2. Press **1** for Fire Drill. You will be prompted to press **ENTER**.
3. The drill will begin immediately after you press **ENTER**.
4. Press any key to end the drill. (If you do not press any key to end the fire drill manually, it will time out automatically after one hour).

If a fire drill switch has been installed, activating the switch will begin the drill; deactivating the switch will end the drill.

### 8.5.9 Conduct an Indicator Test

The indicator test checks the annunciator LEDs, PZT, and LCD display.

1. From the Main Menu, press **1** for System Tests.
2. Press **2** for Indicator Test. The system turns on each LED several times, beeping the PZT as it does so. At the same time it scrolls each available character across the LCD.

A problem is indicated if any of the following occurs:

- An LED does not turn on
- You do not hear a beep
- All four lines of the LCD are not full

This test takes approximately 15 seconds to complete. You can press any key to end manually while the test is still in progress. When the test ends, you will be returned to the <Test Menu>.

### 8.5.10 Conduct a Walk Test

1. From the Main Menu, press **1** for System Tests.

#### IMPORTANT!

If any alarm verification zones are being used, the user will be asked if they wish to disable alarm verification during walk test. This occurs for either walk test option.

2. Select **3** for Walk Test-No Rpt. Enter the time period you wish the NAC circuit to be active for each alarm (06 to 180 seconds). The LCD will display "WALK TEST STOPPED" on Line 1 and "ENTER = start test" on Line 2. By selecting this option, central station reporting is disabled while the test is in progress.

Or

Select **4** for Walk Test-with Rpt. Enter the time period you wish the NAC circuit to be active for each alarm (06 to 180 seconds). The LCD will display "WALK TEST

STOPPED” on Line 1 and “ENTER = start test” on Line 2. By selecting this option, central station reporting will occur as normal during the walk test.

The panel generates a TEST report to the central station when the walk test begins. During a walk test, the panel’s normal fire alarm function is completely disabled, placing the panel in a local trouble condition. All zones respond as 1-Count zones (respond when a single detector is in alarm) during a walk test. Each alarm initiated during the walk test will be reported and stored in the event history buffer.

3. Press **ENTER** to end the walk test. The system will reset. The panel will send a “TEST RESTORE” report to the central station.

If you do not end the walk test manually within four hours, it will end automatically. If an alarm or pre-alarm condition is occurring in the system, you will not be able to enter the walk test.

*Note: the panel does not do a full 30 second reset on resettable power outputs. As soon as the device is back to normal, the panel is ready to go to the next device.*

### 8.5.11 Conduct a Dialer Test

1. From the Main Menu, press **1** for System Tests.
2. Select **5** for Dialer Test. The screen will display “Manual dialer test started”. When the test is completed, you will be returned to the <Test Menu>.

### 8.5.12 Silence alarms or troubles

Press **SILENCE** and enter your code or rotate the key at the prompt. If an external silence switch has been installed, activating the switch will silence alarms or troubles. If you are already using system menus when you press **SILENCE**, you will not need to enter your code or rotate the key.

*Note: Alarm and trouble signals that have been silenced but the detector remains un-restored will un-silence every 24 hours until it is restored.*

### 8.5.13 Reset alarms

Press **RESET** and enter your code or rotate the key at the prompt. If an external reset switch has been installed, activating the switch will reset alarms. If you are already using system menus when you press **RESET**, you will not need to enter your code or rotate the key.

### 8.5.14 Check Detector Through Point Status

The control panel constantly monitors smoke detectors to ensure that sensitivity levels are in compliance with NFPA 72.

If sensitivity for a detector is not in compliance, the panel goes into trouble, generating a CAL TRBLE condition. A detector enters a CAL MAINT state to indicate that it is approaching an out of compliance condition (but is currently still in compliance).

When a CAL TRBLE condition occurs, the central station receives a detector trouble report ("373" + Zone # for Contact ID format; "FT" + Zone # in SIA format).

To check sensitivity for an individual detector, follow the steps below. Section 8.5.20 provides instructions for printing the status of all detectors in the system.

1. From the Main Menu, press **2** for Point Functions.
2. Press **2** for Point Status.
3. Select the module where the point you want to check is located.
4. Enter the number of the point you want to check and press **ENTER**.
5. A screen similar to those shown in Figure 8-4 will display.

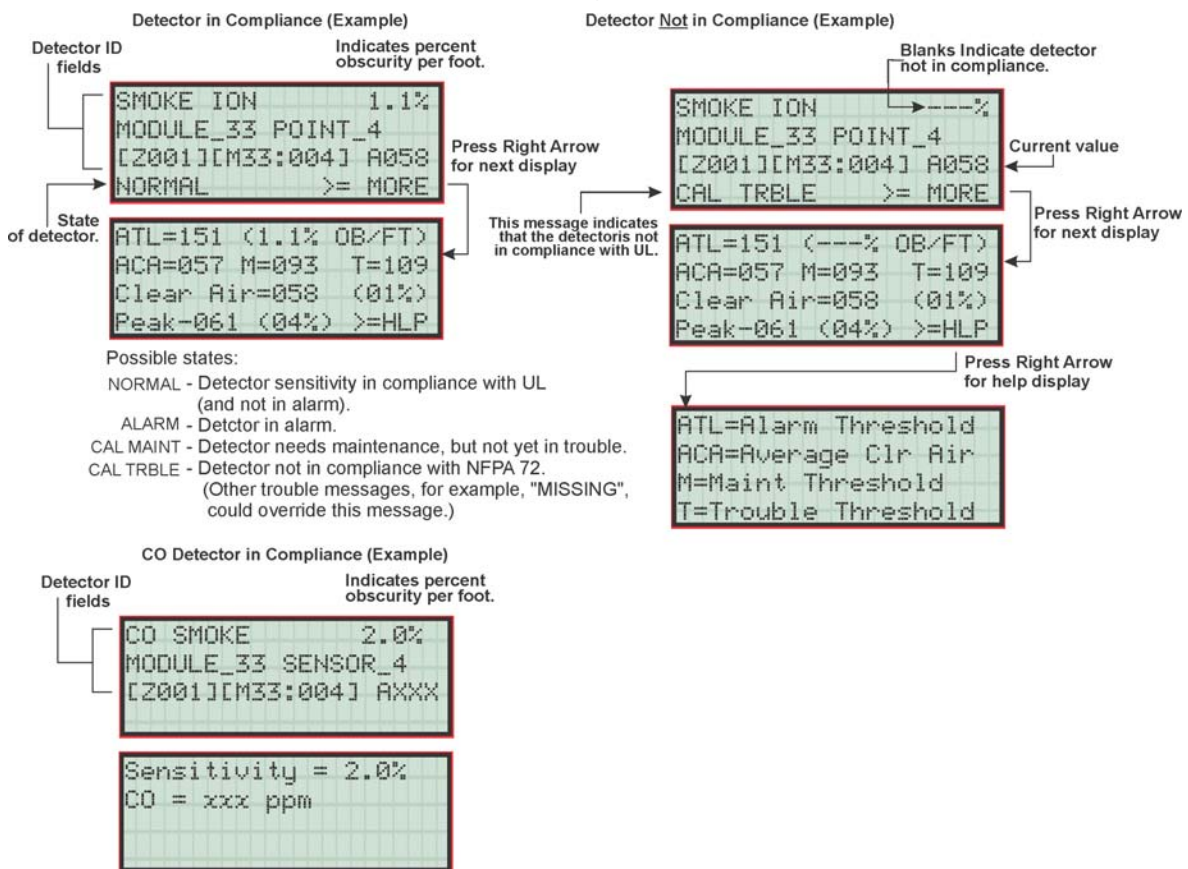


Figure 8-4 Checking Detector Sensitivity Compliance

If a printer is attached to the system (via a Module 5824 serial/parallel printer interface module), you can print detector status (see Section 8.5.20).

### 8.5.15 View Status of a Point

1. From the Main Menu, select **2** for Point Status.
2. From the list that displays, press **ENTER** to select the module where this point is located. The screen that displays will show you if the point has a trouble and will provide sensitivity compliance information. (See Section 8.5.14 for complete information about detector sensitivity compliance.)

### 8.5.16 View Alarms or Troubles

When the system is in alarm or trouble, you can press **▽** to view the location of an alarm or trouble. See Section 8.5.16 for more information.

### 8.5.17 View System Information

Press **8** from the Main Menu to view the panel model and serial number and system version number and date. The information displays for several seconds then returns to the main menu.

### 8.5.18 Reset dialer

From the Main Menu, select **6**. The LCD will display “Dialer reset in progress...” You will be returned to the Main Menu when the reset is completed.

### 8.5.19 Communicating with a Remote Computer

An installer at the panel site can initiate communications between the panel and a computer running the Silent Knight Software Suite 5660. You can use this feature to upload a panel configuration. For example, if you have made programming changes to an installation on site using an annunciator, you can send your changes to the computer, so that the central station will have the latest data about the installation. See the software manual for more information (PN 151240).

To initiate communication, follow the steps below.

1. From the Main Menu, select **9** for Up/Download.
2. From the next screen that displays, select the communication device. Options are:


**1** = Internal Modem


If you select this option, you will use the panel's built-in modem to call the panel.

**2** = RS232 connection

If you select this option, the panel and a computer are both on-site connected via a 9-pin **straight-through** serial cable.


3. If you are using the panel's internal modem to communicate, you will be prompted to enter a phone number. If you are communicating via the RS232 connection, a phone number is not needed and this step will be skipped.


If the phone number you will be calling is already displayed, press . Continue with Step 4. If the phone number you will be calling is not already displayed, enter the

number and press . A phone number can be up to 24 digits long and can contain the following special characters.

|   |  |
|---|--|
| # | Pound (or number) key on the telephone |
| * | Star key on the telephone              |
| , | Comma (character for 2-second pause)   |

Use the number buttons on the annunciator or the up- and down-arrow keys to select special characters. Characters begin displaying after "9".

4. You will be prompted to enter an account number. If the account number you want to use is already displayed, just press  to begin communication.

If the account number displayed is not the correct one, enter the account number and press  to begin communication.

5. The panel will attempt to communicate with the computer. If communication was established, the upload task you created will be placed on the Downloading Software job queue, awaiting processing. When processing is completed, an "Unsolicited Upload" task will appear in the queue.

## 8.5.20 Working with a Printer

If you are using the Model 5824 serial/parallel printer interface module, several printing options are available. See Section 4.6 for information about installing the 5824.

1. From the Main Menu, select **5** Printer Options.
2. From the next screen, select the 5824 module where the printer is connected.
3. If the printer is not currently busy printing another report, a screen with the following options will be available. If the printer is busy, a message will display. You can press **1** to cancel the current print job. These options will then display.

**1** = Event Logging

Enables event logging, which causes the printer to continuously print events as they occur. The date/time will print in 24-hour military format. Once event logging is enabled, it will remain enabled until canceled by the installer. If you need to disable event

logging, return to this option and press **1** to disable.

### Sample Event Log

```

EVENT LOG:                                     STARTED: 02/17/97 02:23
02/17/97 11:23 Event: System Silenced
02/17/97 11:24 Event: System Reset
02/17/97 14:30 Event: Local Programming Begin
02/17/97 15:01 Event: Local Programming Ended Successfully

EVENT LOG:                                     STOPPED: 02/17/97 15:02
    
```

**2** = Print Event History

Prints the up-to-1000 events currently stored in the panel's event history buffer. Events print starting with the newest. The date and time printed will be when the event actually occurred and will print in 24-hour military format.

### Sample Event History Print-Out

```

EVENT HISTORY:                                 PRINTED: 02/28/97 13:35
02/20/97 09:02 Event 3 of 10: System Silenced
02/20/97 09:05 Event 2 of 10: System Reset
02/22/97 08:47 Event 4 of 10: Printer Off Line 4
02/22/97 08:52 Event 4 of 10: Printer On Line 4
02/25/97 15:54 Event 5 of 10: Local Programming Begin
02/25/97 16:10 Event 5 of 10: Local Programming Ended Successfully
02/28/97 12:50 Event 6 of 10: Walk Test Begin
02/28/97 13:31 Event 2 of 10: Walk Test End
:
:
:
    
```

**3** = Print Detector Status

Prints the current status of all detectors in the system. This is a method for finding out if any detectors are out of NFPA compliance or any detectors need maintenance (are approaching an out of compliance condition).

### Sample Detector Status Print-Out

```


DETECTOR STATUS:                             PRINTED: 06/09/98 13:45
NFPA72 Compliant
Peak Percent Alarm
Peak Clear Air
Current Percent Alarm
Clear Air Value
Trouble Threshold
Maintenance Threshold
Average Clear Air
Alarm Threshold Level
Sensitivity sb/ft or deg F
Zone Number
ID NAME      TYPE  ZN  SENS  ATL  ACA  MT  TT  CAV  SA  PCA  SA  STATUS
-----
Module 33
003 MODULE_33 POINT_3  PHOTO  1  ---  240 141  93  94 140  0 141  0 CAL TRBL N
065 MODULE_33 POINT_65  HEAT   1  150  150  0  N/A N/A  73 48  73 48 NORMAL Y
066 MODULE_33 POINT_66  HEAT   1  150  150  0  N/A N/A  73 48  73 48 NORMAL Y
067 MODULE_33 POINT_67  HEAT   1  150  150  0  N/A N/A  73 48  73 48 NORMAL Y
068 MODULE_33 POINT_68  HEAT   1  150  150  0  N/A N/A  73 48  73 48 NORMAL Y
    
```

Note: Detector status can also be viewed and printed using the 5660 or 5670 (facility monitoring only) SKSS.

## 8.6 Operation Mode Behavior

The control panel can be in one of seven conditions at any given moment: Normal, Alarm, Prealarm, Supervisory, Trouble, Silenced, and Reset. Table 10-1 describes the behavior of the panel in each of these modes.

**Table 8-1: Operation Mode Behavior**
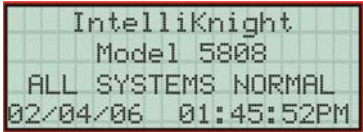
| Operation Mode | Occurs When  | System Behavior   | In This Mode You Can   |
|----------------|--|---|--|
| Normal         | No alarm or trouble condition exists and menus are not in use. | <p>SYSTEM POWER LED is on.</p> <p>The All Systems Normal display indicates that the system is in normal mode.</p>  <p>The current date and time display on the last line of the LCD.</p> | Enter the appropriate code, or rotate the key to activate the Main Menu. |



**Table 8-1: Operation Mode Behavior**




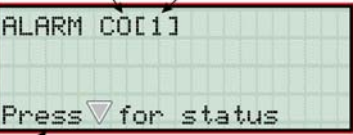
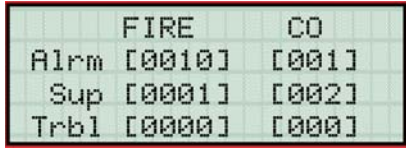
| Operation Mode | Occurs When   | System Behavior  | In This Mode You Can   |
|----------------|---|--|--|
| Alarm          | A smoke detector goes into alarm or a pull station is activated.                | <p>The dialer seizes control of the phone line and calls the central station.</p> <p>The on-board annunciator sounds a loud, steady beep (any notification devices attached to the system will also sound).</p> <p>GENERAL ALARM LED flashes.</p> <p>The LCD displays a screen similar to this one.</p>  <p>Press the down arrow to view the type and location of alarm. (Message alternates with the date/time display.)</p> | <p>Press the down arrow to view the alarm. A screen similar to this one displays.</p>  <p>Press <b>SILENCE</b> and enter an access code (or activate the key) to silence the annunciator (and any notification devices attached to the system).</p> <p>When the alarm condition clears, press <b>RESET</b> and enter a code (or activate the key) to restore the panel to normal.</p> <p>After sitting idle, events will display in a screen similar to this:</p>  |
|                | CO detector goes into alarm.  | <p>CO = CO Detector</p> <p>Count of CO Detectors in alarm on the system In this example there is 1</p>  <p>Press the down arrow to view the type and location of alarm. (Message alternates with the date/time display.)</p>  | <p>Note: Alarm and Prealarm are combined into a single alarm count.</p>  |
|                | If more than 3 categories are active at a single time this screen will display. |   |  |

Table 8-1: Operation Mode Behavior



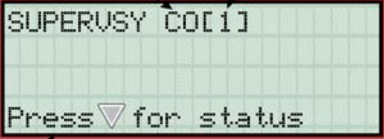
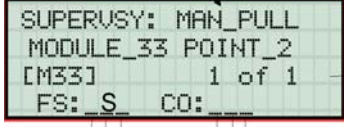
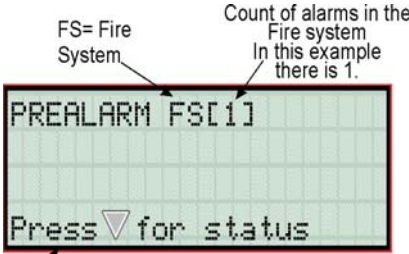

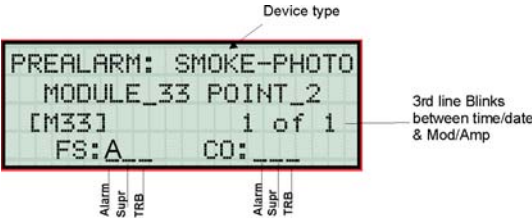
| Operation Mode | Occurs When  | System Behavior   | In This Mode You Can   |
|----------------|--|---|--|
| Supervisory    | The system detects a supervisory condition.                    | <p>The dialer seizes control of the phone line and calls the central station.</p> <p>The on-board annunciator sounds a loud, pulsing beep in the sequence one second on, one second off.</p> <p>SUPERVISORY LED flashes.</p> <p>The LCD displays a screen similar to this one.</p>  <p>FS= Fire System</p> <p>Count of supervisories in the Fire system In this example there is 1.</p> <p>Press the down arrow to view the type and location of alarm. (Message alternates with the date/time display.)</p> | <p>Press ▾ (down arrow) to view the supervisory condition. A screen similar to this one displays.</p>  <p>Module and Point name</p> <p>Device type</p> <p>Zone #</p> <p>Module and Point name</p> <p>Shows which event is currently being displayed. In this example there are 8 trouble, 5 is being displayed</p> <p>Press <b>SILENCE</b> and enter an access code (or activate the key) to silence the annunciator.</p> <p>Once the supervisory condition has been corrected, the system will restore itself automatically.</p> <p>After sitting idle, events will display in a screen similar to this:</p> |
|                | The system detects a supervisory condition with a CO detector. | <p>CO = CO Detector</p> <p>Count of supervisories for the CO detectors in the Fire system In this example there is 1.</p>  <p>Press the down arrow to view the type and location of alarm. (Message alternates with the date/time display.)</p>  |  <p>Device type</p> <p>3rd line Blinks between time/date &amp; Mod/Amp</p> <p>Alarm Supr TRB</p> <p>Alarm Supr TRB</p>  |



Table 8-1: Operation Mode Behavior

| Operation Mode  | Occurs When   | System Behavior   | In This Mode You Can   |
|-----------------|---|---|--|
| <p>Prealarm</p> | <p>A single detector trips in a 2-Count zone. (2-Count means two detectors must trip before an alarm is reported.)</p>  | <p>Touchpad PZT beeps.<br/>The LCD displays a screen similar to this one.</p>  <p>Press the down arrow to view the type and location of prealarm. (Message alternates with the date/time display.)</p> | <p>Press ▾ (down arrow) to view the prealarm. A screen similar to this one displays.</p>  <p>All system operations are available in this mode. After sitting idle, events will display on a screen similar to this:</p>  <p><i>Note: Alarm and Prealarm are combined into a single alarm count.</i></p> |
| <p>Reset</p>    | <p>The <b>RESET</b> button is pressed followed by a valid code or rotation of the key.</p>  | <p>All LEDs are on briefly then the LCD displays "ALARM RESET IN PROGRESS". If the reset process completes normally, the date and time normal mode screen displays.</p>   | <p>Menus are not available during the reset process.</p>   |
| <p>Silenced</p> | <p>An alarm or trouble condition has been silenced but still exists. To silence alarms and troubles, press <b>SILENCE</b> followed by the Installer or User Code or rotate the key.</p> | <p>SYSTEM SILENCE LED is on. SYSTEM TROUBLE, SUPERVISORY or GENERAL ALARM LED (depending on condition) is on. The annunciator (and any notification devices attached to the system) will be silenced.</p>   | <p>Press ▾ (down arrow) to view the location of the alarm or trouble. When the condition no longer exists, the SYSTEM SILENCED and SYSTEM TROUBLE LED, SUPERVISORY or GENERAL ALARM LEDs turn off.</p>   |

## 8.7 Releasing Operations

This control panel supports two types of releasing: Double Interlock Zone and Single Interlock Zone. The Double Interlock Zone operation requires an interlock switch input in the system, and the Single Interlock does not. An interlock switch is typically a dry-contact pressure switch.

When a Single or Double Interlock Zone releasing is selected the system will automatically default the following system parameters:


*Note: The defaults created can be modified through programming if desired.*

- Output Group 2 is created. Output Group 2 will be defaulted as an “Alarm” output group for all releasing zones. NAC [34:001] is assigned to Output Group 2.
- Output Group 3 is created. Output Group 3 will be defaulted as an “Pre-Alert” output group for all releasing zones. NAC [34:002] is assigned to Output Group 3.
- Output Group 4 is created. Output Group 4 will be defaulted as a “Release” output group for all releasing zones. NAC circuit [34:003] is assigned to Output Group 4.

*Note: The installer must define which input points will be used for detectors, manual release switches, or interlock/pressure switches.*

**Table 8-2: Approved Releasing Solenoids**

| Manufacturer | Part Number | Rating     |
|--------------|-------------|------------|
| Asco         | T8210A107   | 24 VDC, 3A |
|              | 8210G207    | 24 VDC, 3A |

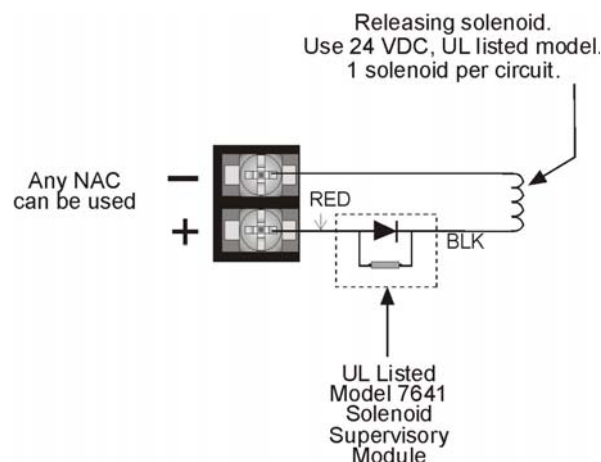

**Figure 8-5 Wiring Configuration for Solenoid**

### Important!

Detectors must be installed at 0.7 times the linear spacing as described in NFPA 72, Chapter 2.

## 8.7.1 Single Interlock Zone Releasing

A single interlock zone utilizes a minimum of two addressable detectors, and a designated manual release switch.

| Important!   |
|--|
| Only addressable detectors can be used. No conventional detectors can be used. |
| Each Single Interlock Zone input requires at least one manual release switch.  |

### Conditions Required for an Pre-Alert Output Activation

If any single addressable detector is activated, the “Pre-Alert” output will activate. This alerts the user that the initial stages required for a release condition are present. (Also refer to Table 8-3.)

### Conditions required for an General Alarm and Release Output Activation

If two or more addressable detectors, or a manual release switch activate, the “Alarm” and the “Release” outputs will activate. (Also refer to Table 8-3.)

Table 8-3: Single Interlock Zone Operation

| Inputs                          | Output Results |                  |                  |                                  |                                  |                                  |                                  |                                  |
|---------------------------------|----------------|------------------|------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| <b>1st Addressable Detector</b> |                | X                |                  | X                                |                                  | X                                |                                  | X                                |
| <b>2nd Addressable Detector</b> |                |                  | X                | X                                |                                  |                                  | X                                | X                                |
| <b>Manual Release Station</b>   |                |                  |                  |                                  | X                                | X                                | X                                | X                                |
|                                 | <b>Normal</b>  | <b>Pre-Alert</b> | <b>Pre-Alert</b> | <b>Release and General Alarm</b> | <b>Release and General Alarm</b> | <b>Release and General Alarm</b> | <b>Release and General Alarm</b> | <b>Release and General Alarm</b> |

Reduce detector spacing to 0.7 times the linear spacing in accordance with NFPA 72.

*Note: Refer to Table 8-2 for approved releasing solenoids and ratings.*

## 8.7.2 Double Interlock Zone Releasing

A Double Interlock Zone uses a minimum of two Addressable detectors, a designated manual release switch, and an interlock switch input. An interlock switch is typically a dry-contact pressure switch and will be referred to as an interlock/pressure switch in this document.

| Important!   |
|--|
| Only addressable detectors can be used. No conventional detectors can be used.   |
| Each Single Interlock Zone input requires at least one manual release switch.    |
| Each Double Interlock Zone input requires at least one Interlock/pressure switch |

### Conditions Required for a Pre-Alert Output Activation

If any single addressable detector is activated, the “Pre-Alert” output will activate. This alerts the user that the initial stages required for a release condition are present. (Also refer to Table 8-3.)

### Conditions Required for a General Alarm Output Activation

If two addressable detectors, a manual release switch is activated, or an interlock switch is active, the “Pre-Alert”, and “General Alarm” outputs will activate.

### Conditions Required for a Release Output Activation

Any release requires the activation of an interlock switch, and either a manual release switch or 2 activated addressable detectors. When these conditions are met, the “Release” and “General Alarm” outputs will activate, and the “Alert” outputs will deactivate.

**Table 8-4: Double Interlock Zone Operation**

| Inputs                   | Output Results |   |   |  |   |   |   |  |   |   |   |  |   |   |   |
|--------------------------|----------------|---|---|--|---|---|---|--|---|---|---|--|---|---|---|
| 1st Addressable Detector | X              |   | X |  | X |   | X |  | X |   | X |  | X |   | X |
| 2nd Addressable Detector |                | X | X |  |   | X | X |  |   | X | X |  |   | X | X |

Table 8-4: Double Interlock Zone Operation

| Inputs                    | Output Results |           |           |                             |                             |                             |                             |                             |                             |                             |                             |                             |                             |                           |                           |                           |                           |
|---------------------------|----------------|-----------|-----------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|---------------------------|---------------------------|---------------------------|---------------------------|
| Manual Release Station    |                |           |           |                             | X                           | X                           | X                           | X                           |                             |                             |                             |                             |                             | X                         | X                         | X                         | X                         |
| Interlock/Pressure Switch |                |           |           |                             |                             |                             |                             |                             | X                           | X                           | X                           | X                           | X                           | X                         | X                         | X                         | X                         |
|                           | Normal         | Pre-Alert | Pre-Alert | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Pre-Alert and General Alarm | Release and General Alarm | Release and General Alarm | Release and General Alarm | Release and General Alarm |

Reduce detector spacing to 0.7 times the linear spacing in accordance with NFPA 72.

Note: Refer to Table 8-2 for approved releasing solenoids and ratings.

## 8.8 Smoke Alarm Verification

Figure 8-6 illustrates how the Smoke Alarm Verification cycle operates.

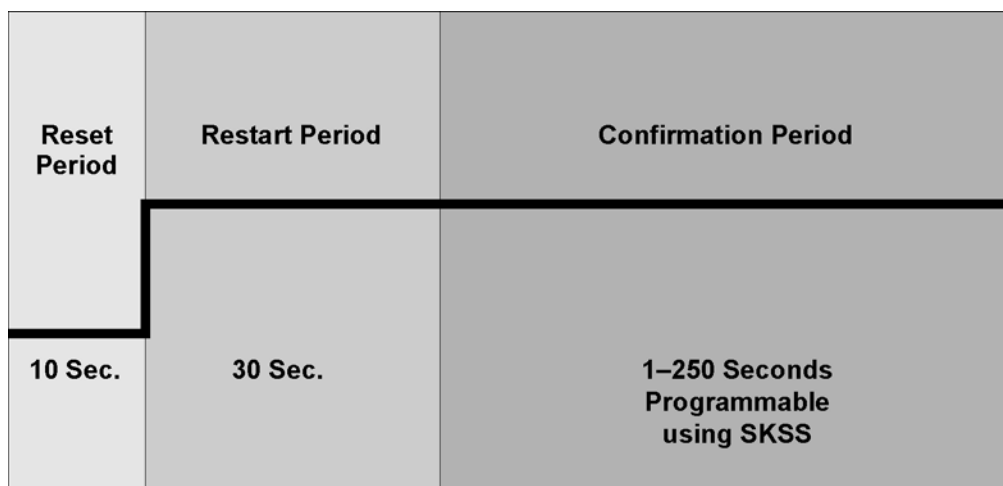


Figure 8-6 Smoke Verification Cycle

During the Confirmation Period if there is no alarm indication then the system will return to normal operation.



# Section 9

## Reporting

This section lists receivers that are compatible with this control panel, and the reporting codes sent by the control panel for SIA and Contact ID formats.

### 9.1 Receivers Compatible with the Control Panel

Table 9-1 shows receivers compatible with the control panel.

**Table 9-1: Receivers Compatible with the Control Panel**

| Manufacturer    | Model                          | Format             |
|-----------------|--------------------------------|--------------------|
| Silent Knight   | Model 9800                     | SIA and Contact ID |
|                 | Model 9000 (SIA formats)       | SIA                |
| Ademco          | Model 685 (Contact ID )        | Contact ID         |
| Sur-Gard        | SG-MLR2-DG (V. 1.64 or higher) | SIA and Contact ID |
| Osborne Hoffman | Quickalert                     | SIA and Contact ID |

### 9.2 Reporting Formats Dialer Outputs

| Event Description                                 | Event Family  | Event Class (System, Zone, or Point) | SIA Reporting Format |                |                    | Contact ID Reporting Format |            |         |           |
|---|---|--------------------------------------|----------------------|----------------|--------------------|-----------------------------|------------|---------|-----------|
|   |   |                                      | Module ID # (if any) | SIA Event Code | Parameter (if any) | Qualifier                   | Event Code | Group # | Contact # |
| <b>System Events</b>                              | Note: System events are reported when either "Report by Point" or "Report by Zone" is selected. |                                      |                      |                |                    |                             |            |         |           |
| AC power restore                                  | Trouble   | System Event                         |                      | AR             |                    | 3                           | 301        | 00      | 000       |
| AC power lost                                     | Trouble   | System Event                         |                      | AT             |                    | 1                           | 301        | 00      | 000       |
| SBUS expander trouble restore                     | Trouble   | System Event                         |                      | ER             | Exp. ID            | 3                           | 333        | 00      | Exp. ID   |
| SBUS Class A supervision restore                  | Trouble   | System Event                         |                      | ER             | Exp. ID            | 3                           | 333        | 00      | Exp. ID   |
| Short circuit removed from SLC communication loop | Trouble   | System Event                         |                      | ER             | Exp. ID            | 3                           | 332        | 00      | Exp. ID   |
| SLC Class A supervision restored                  | Trouble   | System Event                         |                      | ER             | Exp. ID            | 3                           | 331        | 00      | Exp. ID   |
| SBUS expander trouble                             | Trouble   | System Event                         |                      | ET             | Exp. ID            | 1                           | 333        | 00      | Exp. ID   |
| SBUS Class A supervision lost                     | Trouble   | System Event                         |                      | ET             | Exp. ID            | 1                           | 333        | 00      | Exp. ID   |
| Short circuit detected on SLC communication loop  | Trouble   | System Event                         |                      | ET             | Exp. ID            | 1                           | 332        | 00      | Exp. ID   |
| SLC Class A supervision lost                      | Trouble   | System Event                         |                      | ET             | Exp. ID            | 1                           | 331        | 00      | Exp. ID   |
| Fire drill has begun                              | Test  | System Event                         |                      | FI             |                    | 1                           | 604        | 00      | 000       |
| Fire drill ended                                  | Test  | System Event                         |                      | FK             |                    | 3                           | 604        | 00      | 000       |
| Panel date has been changed                       | Trouble   | System Event                         |                      | JD             |                    | 1                           | 625        | 00      | 000       |
| Panel time has been changed                       | Trouble   | System Event                         |                      | JT             |                    | 1                           | 625        | 00      | 000       |

| Event Description   | Event Family   | Event Class (System, Zone, or Point) | SIA Reporting Format |                |                    | Contact ID Reporting Format |            |         |           |
|---|--|--------------------------------------|----------------------|----------------|--------------------|-----------------------------|------------|---------|-----------|
|   |  |                                      | Module ID # (if any) | SIA Event Code | Parameter (if any) | Qualifier                   | Event Code | Group # | Contact # |
| Local programming begin                                     | Trouble  | System Event                         |                      | LB             |                    | 1                           | 627        | 00      | 000       |
| Phone line 1 trouble restore                                | Trouble  | System Event                         |                      | LR             | 1                  | 3                           | 351        | 00      | 001       |
| Phone line 2 trouble restore                                | Trouble  | System Event                         |                      | LR             | 2                  | 3                           | 352        | 00      | 002       |
| Local programming ended normally                            | Trouble  | System Event                         |                      | LS             |                    | 1                           | 628        | 00      | 000       |
| Phone line 1 trouble detected                               | Trouble  | System Event                         |                      | LT             | 1                  | 1                           | 351        | 00      | 001       |
| Phone line 2 trouble detected                               | Trouble  | System Event                         |                      | LT             | 2                  | 1                           | 352        | 00      | 002       |
| Local programming aborted or ended with errors              | Trouble  | System Event                         |                      | LU             |                    | 1                           | 628        | 00      | 000       |
| Periodic test event – normal                                | Test   | System Event                         |                      | RP             |                    | 1                           | 602        | 00      | 000       |
| Periodic test event – off normal                            | Test   | System Event                         |                      | RY             |                    | 1                           | 608        | 00      | 000       |
| Initial power up  | Trouble  | System Event                         |                      | RR             |                    | 1                           | 305        | 00      | 000       |
| Remote programming ended normally                           | Trouble  | System Event                         |                      | RS             |                    | 1                           | 412        | 00      | 000       |
| Unable to report to an account                              | Trouble  | System Event                         |                      | RT             | Acct #             | 1                           | 354        | Acct #  | Acct #    |
| Remote programming aborted or ended with errors             | Trouble  | System Event                         |                      | RU             |                    | 1                           | 413        | 00      | 000       |
| User has initiated dialer test                              | Test   | System Event                         |                      | RX             |                    | 1                           | 601        | 00      |           |
| Water release circuit has been disabled                     | Trouble  | System Event                         | pi Exp. ID           | SS             | Pnt #              | 1                           | 200        | Exp. ID | Pnt #     |
| Water release circuit has been re-enabled                   | Trouble  | System Event                         | pi Exp. ID           | SR             | Pnt #              | 3                           | 200        | Exp. ID | Pnt #     |
| Walk test end   | Test   | System Event                         |                      | TE             |                    | 3                           | 607        | 00      | 000       |
| SLC address programming ended; system has been re-enabled.  | Test   | System Event                         |                      | TE             |                    | 3                           | 607        | 00      | 000       |
| Walk test begin   | Test   | System Event                         |                      | TS             |                    | 1                           | 607        | 00      | 000       |
| SLC address programming started; system has been shut down. | Test   | System Event                         |                      | TS             |                    | 1                           | 607        | 00      | 000       |
| Printer paper restore                                       | Trouble  | System Event                         |                      | VI             | Exp ID             | 3                           | 335        | 00      | Exp. ID   |
| Printer is out of paper                                     | Trouble  | System Event                         |                      | VO             | Exp ID             | 1                           | 335        | 00      | Exp. ID   |
| Printer back online   | Trouble  | System Event                         |                      | VY             | Exp ID             | 3                           | 336        | 00      | Exp. ID   |
| Printer offline   | Trouble  | System Event                         |                      | VZ             | Exp ID             | 1                           | 336        | 00      | Exp. ID   |
| Auto dialer test communication trouble                      | Trouble  | System Event                         |                      | YC             | Line #             | 1                           | 350        | 00      | Line #    |
| Report to an account successful                             | Trouble  | System Event                         |                      | YK             | Acct #             | 3                           | 354        | Acct #  | Acct #    |
| Auto dialer test communication trouble restore              | Trouble  | System Event                         |                      | YK             | Line #             | 3                           | 350        | 00      | Line #    |
| Ground fault condition detected                             | Trouble  | System Event                         |                      | YP             | Exp. ID            | 1                           | 310        | 00      | Exp. ID   |
| Ground fault condition restore                              | Trouble  | System Event                         |                      | YQ             | Exp. ID            | 3                           | 310        | 00      | Exp. ID   |
| Battery voltage restore                                     | Trouble  | System Event                         |                      | YR             | Exp. ID            | 3                           | 302        | 00      | Exp. ID   |
| Battery voltage low   | Trouble  | System Event                         |                      | YT             | Exp. ID            | 1                           | 302        | 00      | Exp. ID   |
| <b>Zone Events</b>  | Note: Zone events are reported only when "Report by Zone" is selected. |                                      |                      |                |                    |                             |            |         |           |
| SLC LED Module trouble restore                              | Trouble  | Zone Event                           |                      | ER             | 0000               | 3                           | 333        | 00      | 000       |

| Event Description  | Event Family | Event Class (System, Zone, or Point) | SIA Reporting Format |                |                    | Contact ID Reporting Format |            |         |           |
|--|--------------|--------------------------------------|----------------------|----------------|--------------------|-----------------------------|------------|---------|-----------|
|  |              |                                      | Module ID # (if any) | SIA Event Code | Parameter (if any) | Qualifier                   | Event Code | Group # | Contact # |
| SLC LED Module trouble                                     | Trouble      | Zone Event                           |                      | ET             | 0000               | 1                           | 333        | 00      | 000       |
| Manual pull switch alarm                                   | Alarm        | Zone Event                           |                      | FA             | Zone               | 1                           | 115        | 00      | Zone      |
| Detector alarm   | Alarm        | Zone Event                           |                      | FA             | Zone               | 1                           | 110        | 00      | Zone      |
| Manual pull switch alarm restore                           | Restore      | Zone Event                           |                      | FH             | Zone               | 3                           | 115        | 00      | Zone      |
| Detector alarm restore                                     | Restore      | Zone Event                           |                      | FH             | Zone               | 3                           | 110        | 00      | Zone      |
| Manual pull switch trouble restore                         | Trouble      | Zone Event                           |                      | FJ             | Zone               | 3                           | 373        | 00      | Zone      |
| Detector trouble restore                                   | Trouble      | Zone Event                           |                      | FJ             | Zone               | 3                           | 373        | 00      | Zone      |
| Positive Alarm Sequence acknowledge switch trouble restore | Trouble      | Zone Event                           |                      | FJ             | Zone               | 3                           | 373        | 00      | Zone      |
| Auxiliary power trouble restore                            | Trouble      | Zone Event                           |                      | FJ             | 0000               | 3                           | 320        | 00      | 000       |
| Notification output trouble restore                        | Trouble      | Zone Event                           |                      | FJ             | 1000+Group #       | 3                           | 320        | 00      | Group #   |
| Manual pull switch trouble                                 | Trouble      | Zone Event                           |                      | FT             | Zone               | 1                           | 373        | 00      | Zone      |
| Detector trouble   | Trouble      | Zone Event                           |                      | FT             | Zone               | 1                           | 373        | 00      | Zone      |
| Positive Alarm Sequence acknowledge switch trouble         | Trouble      | Zone Event                           |                      | FT             | Zone               | 1                           | 373        | 00      | Zone      |
| Auxiliary power trouble                                    | Trouble      | Zone Event                           |                      | FT             | 0000               | 1                           | 320        | 00      | 000       |
| Notification trouble                                       | Trouble      | Zone Event                           |                      | FT             | 1000+Group #       | 1                           | 320        | 00      | Group #   |
| User initiated a system reset                              | Reset        | Zone Event                           |                      | OR             |                    | 1                           | 401        | 00      | 000       |
| Water flow switch alarm                                    | Alarm        | Zone Event                           |                      | SA             | Zone               | 1                           | 113        | 00      | Zone      |
| Water flow switch alarm restore                            | Restore      | Zone Event                           |                      | SH             | Zone               | 3                           | 113        | 00      | Zone      |
| Water flow switch trouble restore                          | Trouble      | Zone Event                           |                      | SJ             | Zone               | 3                           | 373        | 00      | Zone      |
| Supervisory/Tamper switch trouble restore                  | Trouble      | Zone Event                           |                      | SJ             | Zone               | 3                           | 373        | 00      | Zone      |
| Supervisory condition restore                              | Trouble      | Zone Event                           |                      | SR             | Zone               | 3                           | 200        | 00      | Zone      |
| Supervisory condition                                      | Trouble      | Zone Event                           |                      | SS             | Zone               | 1                           | 200        | 00      | Zone      |
| Water flow switch trouble                                  | Trouble      | Zone Event                           |                      | ST             | Zone               | 1                           | 373        | 00      | Zone      |
| Supervisory/Tamper switch trouble                          | Trouble      | Zone Event                           |                      | ST             | Zone               | 1                           | 373        | 00      | Zone      |
| Zone-based AUX1 switch alarm                               | Alarm        | Zone Event                           |                      | UA             | 1000+Zone          | 1                           | 140        | 01      | Zone      |
| Zone-based AUX2 switch alarm                               | Alarm        | Zone Event                           |                      | UA             | 2000+Zone          | 1                           | 140        | 02      | Zone      |
| System-based AUX1 switch alarm                             | Alarm        | Zone Event                           |                      | UA             | 1000               | 1                           | 140        | 01      | 000       |
| System-based AUX2 switch alarm                             | Alarm        | Zone Event                           |                      | UA             | 2000               | 1                           | 140        | 02      | 000       |
| Zone-based AUX1 switch alarm restore                       | Restore      | Zone Event                           |                      | UH             | 1000+Zone          | 3                           | 140        | 01      | Zone      |
| Zone-based AUX2 switch alarm restore                       | Restore      | Zone Event                           |                      | UH             | 2000+Zone          | 3                           | 140        | 02      | Zone      |
| System-based AUX1 switch alarm restore                     | Restore      | Zone Event                           |                      | UH             | 1000               | 3                           | 140        | 01      | 000       |

| Event Description  | Event Family   | Event Class (System, Zone, or Point) | SIA Reporting Format |                |                    | Contact ID Reporting Format |            |         |           |
|--|--|--------------------------------------|----------------------|----------------|--------------------|-----------------------------|------------|---------|-----------|
|  |  |                                      | Module ID # (if any) | SIA Event Code | Parameter (if any) | Qualifier                   | Event Code | Group # | Contact # |
| System-based AUX2 switch alarm restore                   | Restore  | Zone Event                           |                      | UH             | 2000               | 3                           | 140        | 02      | 000       |
| Zone-based AUX1 switch trouble restore                   | Trouble  | Zone Event                           |                      | UJ             | 1000+Zone          | 3                           | 373        | 01      | Zone      |
| Zone-based AUX2 switch trouble restore                   | Trouble  | Zone Event                           |                      | UJ             | 2000+Zone          | 3                           | 373        | 02      | Zone      |
| System-based AUX1 switch trouble restore                 | Trouble  | Zone Event                           |                      | UJ             | 1000               | 3                           | 373        | 01      | 000       |
| System-based AUX2 switch trouble restore                 | Trouble  | Zone Event                           |                      | UJ             | 2000               | 3                           | 373        | 02      | 000       |
| External Reset/Silence/Fire Drill switch trouble restore | Trouble  | Zone Event                           |                      | UJ             | 0000               | 3                           | 373        | 00      | 000       |
| Zone-based AUX1 switch trouble                           | Trouble  | Zone Event                           |                      | UT             | 1000+Zone          | 1                           | 373        | 01      | Zone      |
| Zone-based AUX2 switch trouble                           | Trouble  | Zone Event                           |                      | UT             | 2000+Zone          | 1                           | 373        | 02      | Zone      |
| System-based AUX1 switch trouble                         | Trouble  | Zone Event                           |                      | UT             | 1000               | 1                           | 373        | 01      | 000       |
| System-based AUX2 switch trouble                         | Trouble  | Zone Event                           |                      | UT             | 2000               | 1                           | 373        | 02      | 000       |
| External Reset/Silence/Fire Drill switch trouble         | Trouble  | Zone Event                           |                      | UT             | 0000               | 1                           | 373        | 00      | 000       |
| CO Detector Alarm  | Alarm  | Zone Event                           |                      | GA             | Zone               | 1                           | 162        | 00      | Zone      |
| CO Detector Alarm Restore                                | Restore  | Zone Event                           |                      | GH             | Zone               | 3                           | 162        | 00      | Zone      |
| CO Detector Trouble                                      | Trouble  | Zone Event                           |                      | GT             | Zone               | 1                           | 373        | 00      | Zone      |
| CO Detector Restore                                      | Trouble  | Zone Event                           |                      | GJ             | Zone               | 3                           | 373        | 00      | Zone      |
| CO Supervisory Condition                                 | Trouble  | Zone Event                           |                      | GS             | Zone               | 1                           | 200        | 00      | Zone      |
| CO Supervisory Condition Restore                         | Trouble  | Zone Event                           |                      | GR             | Zone               | 3                           | 200        | 00      | Zone      |
| <b>Point Events</b>                                      | Point events are reported only when "Report by Point" is selected. When SK protocol devices are used, sensors 1–99 are reported as Pnt #s 1–99, and modules 1–99 are reported as Pnt #s 201–299. |                                      |                      |                |                    |                             |            |         |           |
| Manual pull switch alarm                                 | Alarm  | Point Event                          | pi Exp. ID           | FA             | Pnt #              | 1                           | 115        | Exp. ID | Pnt #     |
| Manual release switch alarm (Water Release Zone)         | Alarm  | Point Event                          | pi Exp. ID           | FA             | Pnt #              | 1                           | 110        | Exp. ID | Pnt #     |
| Interlock switch alarm (Water Release Zone)              | Alarm  | Point Event                          | pi Exp. ID           | FA             | Pnt #              | 1                           | 110        | Exp. ID | Pnt #     |
| Detector alarm   | Alarm  | Point Event                          | pi Exp. ID           | FA             | Pnt #              | 1                           | 110        | Exp. ID | Pnt #     |
| Point disabled   | Disable  | Point Event                          | pi Exp. ID           | FB             | Pnt #              | 1                           | 571        | Exp. ID | Pnt #     |
| Manual pull switch alarm restore                         | Restore  | Point Event                          | pi Exp. ID           | FH             | Pnt #              | 3                           | 115        | Exp. ID | Pnt #     |
| Manual release switch alarm restore (Water Release Zone) | Restore  | Point Event                          | pi Exp. ID           | FH             | Pnt #              | 3                           | 110        | Exp. ID | Pnt #     |
| Interlock switch alarm restore (Water Release Zone)      | Restore  | Point Event                          | pi Exp. ID           | FH             | Pnt #              | 3                           | 110        | Exp. ID | Pnt #     |

| Event Description   | Event Family | Event Class (System, Zone, or Point) | SIA Reporting Format |                |                    | Contact ID Reporting Format |            |         |           |
|---|--------------|--------------------------------------|----------------------|----------------|--------------------|-----------------------------|------------|---------|-----------|
|   |              |                                      | Module ID # (if any) | SIA Event Code | Parameter (if any) | Qualifier                   | Event Code | Group # | Contact # |
| Detector alarm restore  | Restore      | Point Event                          | pi Exp. ID           | FH             | Pnt #              | 3                           | 110        | Exp. ID | Pnt #     |
| Notification output trouble restore                                     | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 320        | Exp. ID | Pnt #     |
| Manual pull switch trouble restore                                      | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Manual release switch trouble restore (Water Release Zone)              | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Interlock switch trouble restore (Water Release Zone)                   | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Detector trouble restore  | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Positive Alarm Sequence acknowledge switch trouble restore              | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Aux power trouble restore   | Trouble      | Point Event                          | pi Exp. ID           | FJ             | Pnt #              | 3                           | 320        | Exp. ID | Pnt #     |
| Notification output trouble   | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 320        | Exp. ID | Pnt #     |
| Manual pull switch trouble  | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Manual release switch trouble (Water Release Zone)                      | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Interlock switch trouble (Water Release Zone)                           | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Detector trouble  | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Positive Alarm Sequence acknowledge switch trouble                      | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Auxiliary Power Trouble   | Trouble      | Point Event                          | pi Exp. ID           | FT             | Pnt #              | 1                           | 320        | Exp. ID | Pnt #     |
| Point Enabled   | Disable      | Point Event                          | pi Exp. ID           | FU             | Pnt #              | 3                           | 571        | Exp. ID | Pnt #     |
| Water flow switch alarm   | Alarm        | Point Event                          | pi Exp. ID           | SA             | Pnt #              | 1                           | 113        | Exp. ID | Pnt #     |
| Water flow switch disabled  | Disable      | Point Event                          | pi Exp. ID           | SB             | Pnt #              | 1                           | 571        | Exp. ID | Pnt #     |
| Supervisory/Tamper switch or supervisory duct dectector disabled        | Disable      | Point Event                          | pi Exp. ID           | SB             | Pnt #              | 1                           | 571        | Exp. ID | Pnt #     |
| Water flow switch alarm restore   | Restore      | Point Event                          | pi Exp. ID           | SH             | Pnt #              | 3                           | 113        | Exp. ID | Pnt #     |
| Water flow switch trouble restore                                       | Trouble      | Point Event                          | pi Exp. ID           | SJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Supervisory/Tamper switch or supervisory duct dectector trouble restore | Trouble      | Point Event                          | pi Exp. ID           | SJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Supervisory condition restore   | Trouble      | Point Event                          | pi Exp. ID           | SR             | Pnt #              | 3                           | 200        | Exp. ID | Pnt #     |

| Event Description   | Event Family | Event Class (System, Zone, or Point) | SIA Reporting Format |                |                    | Contact ID Reporting Format |            |         |           |
|---|--------------|--------------------------------------|----------------------|----------------|--------------------|-----------------------------|------------|---------|-----------|
|   |              |                                      | Module ID # (if any) | SIA Event Code | Parameter (if any) | Qualifier                   | Event Code | Group # | Contact # |
| Supervisory condition   | Trouble      | Point Event                          | pi Exp. ID           | SS             | Pnt #              | 1                           | 200        | Exp. ID | Pnt #     |
| Water flow switch trouble   | Trouble      | Point Event                          | pi Exp. ID           | ST             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Supervisory/Tamper switch or supervisory duct detector trouble    | Trouble      | Point Event                          | pi Exp. ID           | ST             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Water flow switch re-enabled                                      | Disable      | Point Event                          | pi Exp. ID           | SU             | Pnt #              | 3                           | 571        | Exp. ID | Pnt #     |
| Supervisory/Tamper switch or supervisory duct detector re-enabled | Disable      | Point Event                          | pi Exp. ID           | SU             | Pnt #              | 3                           | 571        | Exp. ID | Pnt #     |
| Zone-based AUX1 switch alarm                                      | Alarm        | Point Event                          | pi Exp. ID           | UA             | Pnt #              | 1                           | 140        | Exp. ID | Pnt #     |
| Zone-based AUX2 switch alarm                                      | Alarm        | Point Event                          | pi Exp. ID           | UA             | Pnt #              | 1                           | 140        | Exp. ID | Pnt #     |
| System-based AUX1 switch alarm                                    | Alarm        | Point Event                          | pi Exp. ID           | UA             | Pnt #              | 1                           | 140        | Exp. ID | Pnt #     |
| System-based AUX2 switch alarm                                    | Alarm        | Point Event                          | pi Exp. ID           | UA             | Pnt #              | 1                           | 140        | Exp. ID | Pnt #     |
| Auxiliary switch input disabled                                   | Disable      | Point Event                          | pi Exp. ID           | UB             | Pnt #              | 1                           | 571        | Exp. ID | Pnt #     |
| Zone-based AUX1 switch alarm restore                              | Restore      | Point Event                          | pi Exp. ID           | UH             | Pnt #              | 3                           | 140        | Exp. ID | Pnt #     |
| Zone-based AUX2 switch alarm restore                              | Restore      | Point Event                          | pi Exp. ID           | UH             | Pnt #              | 3                           | 140        | Exp. ID | Pnt #     |
| System-based AUX1 switch alarm restore                            | Restore      | Point Event                          | pi Exp. ID           | UH             | Pnt #              | 3                           | 140        | Exp. ID | Pnt #     |
| System-based AUX2 switch alarm restore                            | Restore      | Point Event                          | pi Exp. ID           | UH             | Pnt #              | 3                           | 140        | Exp. ID | Pnt #     |
| Zone-based AUX1 switch trouble restore                            | Trouble      | Point Event                          | pi Exp. ID           | UJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Zone-based AUX2 switch trouble restore                            | Trouble      | Point Event                          | pi Exp. ID           | UJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| External Reset/Silence/Fire Drill switch trouble restore          | Trouble      | Point Event                          | pi Exp. ID           | UJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| System-based AUX1 switch trouble restore                          | Trouble      | Point Event                          | pi Exp. ID           | UJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| System-based AUX2 switch trouble restore                          | Trouble      | Point Event                          | pi Exp. ID           | UJ             | Pnt #              | 3                           | 373        | Exp. ID | Pnt #     |
| Zone-based AUX1 switch trouble                                    | Trouble      | Point Event                          | pi Exp. ID           | UT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| Zone-based AUX2 switch trouble                                    | Trouble      | Point Event                          | pi Exp. ID           | UT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| External Reset/Silence/Fire Drill switch trouble                  | Trouble      | Point Event                          | pi Exp. ID           | UT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| System-based AUX1 switch trouble                                  | Trouble      | Point Event                          | pi Exp. ID           | UT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |
| System-based AUX2 switch trouble                                  | Trouble      | Point Event                          | pi Exp. ID           | UT             | Pnt #              | 1                           | 373        | Exp. ID | Pnt #     |

| Event Description                             | Event Family | Event Class<br>(System, Zone,<br>or Point) | SIA Reporting Format       |                      |                       | Contact ID Reporting Format |               |            |              |
|---|--------------|--|----------------------------|----------------------|-----------------------|-----------------------------|---------------|------------|--------------|
|   |              |  | Module<br>ID #<br>(if any) | SIA<br>Event<br>Code | Parameter<br>(if any) | Qualifier                   | Event<br>Code | Group<br># | Contact<br># |
| Auxiliary switch input re-enabled             | Disable      | Point Event                                | pi Exp.<br>ID              | UU                   | Pnt #                 | 3                           | 571           | Exp. ID    | Pnt #        |
| An unexpected SLC device has<br>been detected | Trouble      | Point Event                                | pi Exp.<br>ID              | XE                   | Pnt #                 | 1                           | 380           | Exp. ID    | Pnt #        |
| An unexpected SLC device has<br>been removed  | Trouble      | Point Event                                | pi Exp.<br>ID              | XI                   | Pnt #                 | 3                           | 380           | Exp. ID    | Pnt #        |
| CO Detector Alarm                             | Alarm        | Point Event                                | pi Exp.<br>ID              | GA                   | Pnt #                 | 1                           | 162           | Exp. ID    | Pnt #        |
| CO Detector Alarm Restore                     | Restore      | Point Event                                | pi Exp.<br>ID              | GH                   | Pnt #                 | 3                           | 162           | Exp. ID    | Pnt #        |
| CO Detector Trouble                           | Trouble      | Point Event                                | pi Exp.<br>ID              | GT                   | Pnt #                 | 1                           | 373           | Exp. ID    | Pnt #        |
| CO Detector Restore                           | Trouble      | Point Event                                | pi Exp.<br>ID              | GJ                   | Pnt #                 | 3                           | 373           | Exp. ID    | Pnt #        |
| CO Supervisory Condition                      | Trouble      | Point Event                                | pi Exp.<br>ID              | GS                   | Pnt #                 | 1                           | 200           | Exp. ID    | Pnt #        |
| CO Supervisory Condition<br>Restore           | Trouble      | Point Event                                | pi Exp.<br>ID              | GR                   | Pnt #                 | 3                           | 200           | Exp. ID    | Pnt #        |





---

# Section 10

## Testing and Troubleshooting

---

---

### 10.1 Troubleshooting

---

This section of the manual offers suggestions for troubleshooting hardware problems. Please read this section if you encounter a problem when installing the control panel. If these suggestions do not solve your problem or if you encounter a problem that is not listed here, contact Silent Knight Technical Support at 800-446-6444 for assistance.

### 10.2 Common Problems

---

| Problem  | Possible Cause / Suggested Actions  |
|--|---|
| Trouble message "DBL ADDR" (Double Address) displays on LCD.               | An address has been assigned to more than one detector. Correct the address following the procedure described in Section 5.8.   |
| Auxiliary power or notification circuits have incorrect polarity.          | Correct polarity. For notification and auxiliary power circuits: When in alarm or powered, terminals labeled "X" are positive, terminals labeled "O" are negative.  |
| SLC devices are not being recognized (trouble message "Missing" displays). | Check hardware connections.<br>If devices are physically connected, make sure wiring is correct (see Section 5.4). For the main panel, the positive side of device must be connected to terminal 34; the negative side must be connected to Terminal 33. For SLC devices, make sure the device connects to the SLC loop via the SLC OUT terminals.    |
|  | Make sure SLC devices have been addressed properly following the procedure described in Section 5.8.<br>For contact monitor modules, which are addressed using DIP switches, the DIP switch must be set to the correct address before power is applied to the SLC loop. If this procedure is not followed, the device will have an incorrect address. |
|  | Make sure correct polarity has been observed for SLC device wiring. See Section 5.8.  |

| Problem   | Possible Cause / Suggested Actions   |
|---|--|
| SLC devices are not being recognized (trouble message "Missing" displays on the annunciator).   | <p>Check that SLC loop impedance is within the required range. To measure impedance, use the following procedure.</p> <ol style="list-style-type: none"> <li>1. Disconnect both wires from the terminal block at the panel (SLC devices can remain connected).</li> <li>2. Measure the impedance from positive to negative and from negative to positive. Both measurements should be greater than 500 K ohms. If the installation uses T-taps, test each T-tap individually.</li> <li>3. Temporarily connect the positive wire to the negative wire of the SLC loop at the point farthest from the panel (SLC devices can remain connected).</li> <li>4. Measure the impedance from positive to negative and from negative to positive. Both measurements must be less than 50 ohms.</li> </ol>   |
| The panel indicates a ground fault trouble condition (trouble message "GROUND FAULT" displays). | <p>An earth ground fault occurs when the panel senses an unexpected flow of current from one or more of its terminals to the earth connection (Terminal 2).</p> <p>Isolate the wiring that is causing the fault by removing wiring connections one at a time until the earth fault is no longer present. Pause at least five seconds after removing a wire before removing the next one.</p> <p>The panel will also go into ground fault if a computer is connected to the panel via a serial cable attached to the panel's 9-pin connector. This is a correct method for on-site communication between a panel and a computer. Ignore the ground fault message in this case. The trouble will clear automatically when you disconnect the computer from the cable</p>   |
| 5496 module that has been physically connected to the panel but is not being recognized.        | <p>Check the status of the 5496 green LED. If it flashes in the pattern .5 sec on / .5 sec. off, it is likely that the 5496 has not been added to the system through programming. JumpStart will add any 5496s connected to the panel. If you have already run JumpStart, 5496s can be added manually (see Section 7.3.2).</p> <p>Check that the correct ID for the 5496 module has been set through the DIP switches. Assign ID#1 to the first 5496 and ID#2 to the second 5496. See Section 4.9 for complete details.</p> <p>If the wiring between the 5496 and the panel is correct, measure the voltage from 5496 Terminal (+) to Terminal (-). Voltage should be in the range 27.2-27.4V when AC power is present.</p> <p>If the green LED is not flashing, the likely cause is incorrect wiring from between the 5496 and the panel. See Section 4.4 for wiring details.</p> |

## 10.2.1 Event History

The event history can be useful for tracking or recalling a trouble condition.

## 10.3 Built-in Troubleshooting and Testing Tools

---

The fire control panel has several built-in testing and troubleshooting tools that can be utilized to save time while testing and troubleshooting points and SLC devices.


### 10.3.1 SLC Device Locator

SLC device locator can be used to locate a device on a SLC loop.

Follow these steps to locate a particular SLC device:


1. Select 2 (Point Functions) from the Main Menu.
2. Select 4 (SLC Dev Locator).

A message similar to the one shown in Figure 10-1 will display.

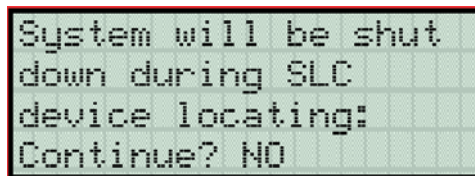

```
System will be shut
down during SLC
device locating!
Continue? NO
```

Figure 10-1 Shut Down Warning

3. Press the  $\triangle$  or  $\nabla$  arrow to toggle NO to YES then press .

If NO is chosen you will exit back to the Point Function menu.

If Yes is chosen the system will cease normal operation leaving the premise unprotected.

4. Select the SLC loop.
5. Enter the SLC address of the device you wish to locate.

The LED on the selected device will start flashing.

6. Press any key to exit SLC device locator function.

*Note: Once you exit the system will resume normal operation.*


## 10.3.2 SLC Multi Locator

This feature is the same as SLC Device Locator, except you can locate up to 8 devices on a single search.

Follow these instructions to locate multiple SLC devices:


1. Select 2 (Point Functions) from the Main Menu.
2. Select 5 (SLC Dev Locator).

A message similar to the one shown in Figure 10-1 will display.

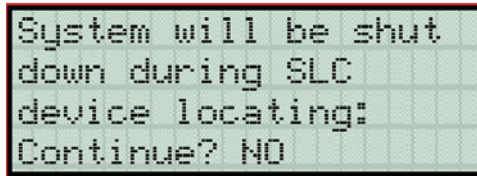

```
System will be shut  
down during SLC  
device locating:  
Continue? NO
```

Figure 10-2 Shut Down Warning

3. Press the  $\blacktriangle$  or  $\blacktriangledown$  arrow to toggle NO to YES then press .

If NO is chosen you will exit back to the Point Function menu.

If Yes is chosen the system will cease normal operation leaving the premise unprotected.

4. Select the SLC loop.
5. Enter up to eight SLC addresses for the devices you wish to locate.

The LEDs on the selected devices will start flashing.






6. Press any key  $\blacktriangleleft$  to exit SLC multi-locator function.

*Note: Once you exit the system will resume normal operation.*

### 10.3.3 I/O Point Control

This feature allows you to toggle any output on or off and trip any input device. This can be useful to test a point's output mapping.

Follow these steps to control a I/O point:

1. Select **2** (Point Functions) from the Main Menu.
2. Select **6** (I/O Point Control).
3. Select the Module the point is on.
4. Enter the zone number, or press the  or  arrow to select the point you wish to test, then press .
5. Press  to generate an alarm for an input point or activate an output point.
6. To exit press .

## 10.4 Impedances that Cause Earth Ground Faults

---

Table 10-1 show the minimum impedances that cause an earth ground fault on this system.

**Table 10-1: Earth Ground Faults in Ohms**

| TERMINAL<br>(values in kohms) | LOW BIASED |              | HIGH BIASED |             |
|-------------------------------|------------|--------------|-------------|-------------|
|                               | high trip  | high restore | low trip    | low restore |
| NAC 1 -                       | 0          | 0            |             |             |
| NAC 1 +                       |            |              | 0           | 0           |
| NAC 2 -                       | 0          | 0            |             |             |
| NAC 2 +                       |            |              | 0           | 0           |
| NAC 3 -                       | 0          | 0            |             |             |
| NAC 3 +                       |            |              | 0           | 0           |
| NAC 4 -                       | 0          | 0            |             |             |
| NAC 4 +                       |            |              | 0           | 0           |
| SBUS -                        |            |              | 0           | 0           |
| SBUS +                        | 0          | 0            |             |             |
| SBUS A                        |            |              | 0           | 0           |
| SBUS B                        |            |              | 0           | 0           |
| SLC IN -                      |            |              | 0           | 0           |
| SLC IN +                      | 0          | 0            |             |             |
| SLC OUT -                     |            |              | 0           | 0           |
| SLC OUT +                     | 0          | 0            |             |             |

# Section 11

## Installation Records

This section of the manual is for you to use if you wish to track of how points, zones, and groups have been programmed.

### 11.1 SLC Device Point Record

You can use Table 11-1 to keep track of SLC device points.  
Default addresses for ID:On-board: = 33

**Table 11-1: Installation Record**

| Module   | Addr | Zone / Group | Description | Module   | Addr | Zone/ Group | Description |
|----------|------|--------------|-------------|----------|------|-------------|-------------|
| On-board | 1    |              |             | On-board | 28   |             |             |
| On-board | 2    |              |             | On-board | 29   |             |             |
| On-board | 3    |              |             | On-board | 30   |             |             |
| On-board | 4    |              |             | On-board | 31   |             |             |
| On-board | 5    |              |             | On-board | 32   |             |             |
| On-board | 6    |              |             | On-board | 33   |             |             |
| On-board | 7    |              |             | On-board | 34   |             |             |
| On-board | 8    |              |             | On-board | 35   |             |             |
| On-board | 9    |              |             | On-board | 36   |             |             |
| On-board | 10   |              |             | On-board | 37   |             |             |
| On-board | 11   |              |             | On-board | 38   |             |             |
| On-board | 12   |              |             | On-board | 39   |             |             |
| On-board | 13   |              |             | On-board | 40   |             |             |
| On-board | 14   |              |             | On-board | 41   |             |             |
| On-board | 15   |              |             | On-board | 42   |             |             |
| On-board | 16   |              |             | On-board | 43   |             |             |
| On-board | 17   |              |             | On-board | 44   |             |             |
| On-board | 18   |              |             | On-board | 45   |             |             |
| On-board | 19   |              |             | On-board | 46   |             |             |
| On-board | 20   |              |             | On-board | 47   |             |             |
| On-board | 21   |              |             | On-board | 48   |             |             |
| On-board | 22   |              |             | On-board | 49   |             |             |
| On-board | 23   |              |             | On-board | 50   |             |             |
| On-board | 24   |              |             | On-board | 51   |             |             |
| On-board | 25   |              |             | On-board | 52   |             |             |
| On-board | 26   |              |             | On-board | 53   |             |             |
| On-board | 27   |              |             | On-board | 54   |             |             |

**Table 11-1: Installation Record**

| Module   | Addr | Zone / Group | Description | Module   | Addr | Zone/ Group | Description |
|----------|------|--------------|-------------|----------|------|-------------|-------------|
| On-board | 55   |              |             | On-board | 92   |             |             |
| On-board | 56   |              |             | On-board | 93   |             |             |
| On-board | 57   |              |             | On-board | 94   |             |             |
| On-board | 58   |              |             | On-board | 95   |             |             |
| On-board | 59   |              |             | On-board | 96   |             |             |
| On-board | 60   |              |             | On-board | 97   |             |             |
| On-board | 61   |              |             | On-board | 98   |             |             |
| On-board | 62   |              |             | On-board | 99   |             |             |
| On-board | 63   |              |             | On-board | 100  |             |             |
| On-board | 64   |              |             | On-board | 101  |             |             |
| On-board | 65   |              |             | On-board | 102  |             |             |
| On-board | 66   |              |             | On-board | 103  |             |             |
| On-board | 67   |              |             | On-board | 104  |             |             |
| On-board | 68   |              |             | On-board | 105  |             |             |
| On-board | 69   |              |             | On-board | 106  |             |             |
| On-board | 70   |              |             | On-board | 107  |             |             |
| On-board | 71   |              |             | On-board | 108  |             |             |
| On-board | 72   |              |             | On-board | 109  |             |             |
| On-board | 73   |              |             | On-board | 110  |             |             |
| On-board | 74   |              |             | On-board | 111  |             |             |
| On-board | 75   |              |             | On-board | 112  |             |             |
| On-board | 76   |              |             | On-board | 113  |             |             |
| On-board | 77   |              |             | On-board | 114  |             |             |
| On-board | 78   |              |             | On-board | 115  |             |             |
| On-board | 79   |              |             | On-board | 116  |             |             |
| On-board | 80   |              |             | On-board | 117  |             |             |
| On-board | 81   |              |             | On-board | 118  |             |             |
| On-board | 82   |              |             | On-board | 119  |             |             |
| On-board | 83   |              |             | On-board | 120  |             |             |
| On-board | 84   |              |             | On-board | 121  |             |             |
| On-board | 85   |              |             | On-board | 122  |             |             |
| On-board | 86   |              |             | On-board | 123  |             |             |
| On-board | 87   |              |             | On-board | 124  |             |             |
| On-board | 88   |              |             | On-board | 125  |             |             |
| On-board | 89   |              |             | On-board | 126  |             |             |
| On-board | 90   |              |             | On-board | 127  |             |             |
| On-board | 91   |              |             |          |      |             |             |
|          |      |              |             |          |      |             |             |
|          |      |              |             |          |      |             |             |







# Appendix A

## Compatible Devices

### A.1 Notification Appliances

For proper operation, you must use polarized devices with a Model 7628 4.7k ohm EOL resistor on each loop. All supervised notification appliances used with the control panel must be polarized.

**Note:** Not all devices can use the Sync feature, be sure to check Table A-1 to ensure the device you have chosen will work with this feature. This control is UL listed for panel wide Synchronization.

Table below lists notification appliances compatible with the fire alarm control panel. Appliances which can be synchronized indicate the type of SYNC available in the columns marked Audio and Visual.

**Table A-1: Compatible Notification Appliances**

| Manufacturer | Model          | Audio | Visual | Type          |
|--------------|----------------|-------|--------|---------------|
| AMSECO       | SH24W-153075   | X     | X      | Horn/Strobe   |
|              | SAD24-153075   |       | X      | Strobe        |
|              | SAD24-75110    |       | X      | Strobe        |
|              | SL24W-75110    |       | X      | Strobe        |
|              | SL24C-3075110  |       | X      | Strobe        |
|              | SLB24-75       |       | X      | Strobe        |
|              | RSD24-153075   |       | X      | Strobe        |
|              | RSD24-75110    |       | X      | Strobe        |
|              | SH24W-75110    | X     | X      | Horn/Strobe   |
|              | SH24W-3075110  | X     | X      | Horn/Strobe   |
|              | SHB24-75       | X     | X      | Horn/Strobe   |
|              | SCM24W-153075  | X     |        | Chimes/Strobe |
|              | SCM24W-75110   | X     |        | Chimes/Strobe |
|              | SCM24C-3075110 | X     |        | Chimes/Strobe |
|              | SCM24C-177     | X     |        | Chimes/Strobe |
|              | H24W           | X     |        | Horn          |
|              | H24R           | X     |        | Horn          |

Table A-1: Compatible Notification Appliances

| Manufacturer | Model                   | Audio | Visual | Type                                |
|--------------|-------------------------|-------|--------|-------------------------------------|
| Faraday      | 446                     |       |        | Vibrating Bell                      |
|              | 476                     |       |        | Vibrating Bell                      |
|              | 477                     |       |        | Single Stroke Bell                  |
|              | 2700 -M, -R, -T, -Y, -Z |       |        | Strobe                              |
|              | 2701 Series             |       |        | Strobe                              |
|              | 2705 Series             |       |        | Strobe                              |
|              | 2820                    | X     | X      | Sync Temporal Horn/Strobe           |
|              | 2821                    | X     | X      | Sync Temporal Horn/Strobe           |
|              | 2824                    | X     | X      | Horn Strobe                         |
|              | 5333                    |       |        | Multi-Tone Horn)                    |
|              | 5336                    |       |        | Multi-Tone Horn/Strobe              |
|              | 5337                    |       |        | Multi-Tone Horn/Strobe              |
|              | 5338                    |       |        | Multi-Tone Horn/Strobe              |
|              | 5343                    |       |        | Single Tone Horn/Strobe             |
|              | 5346                    |       |        | Electronic Horn with Strobe         |
|              | 5347                    |       |        | Electronic Horn with Strobe         |
|              | 5348                    |       |        | Single Tone Horn/Strobe             |
|              | 5373                    |       |        | 8-Tone Horn/Strobe                  |
|              | 6321                    |       |        | Sync Mini Horn/Strobe               |
|              | 6322                    |       |        | Mini Horn/Sync Strobe               |
|              | 6380                    |       |        | 8-Tone Electronic Signal/Strobe     |
|              | 5376                    |       |        | 8-Tone Horn/Strobe                  |
|              | 5377                    |       |        | 8-Tone Horn/Strobe                  |
|              | 5378                    |       |        | 8-Tone Horn/Strobe                  |
|              | 5383                    |       |        | 8-Tone Horn/Strobe with Sync Strobe |
|              | 5386                    |       |        | 8-Tone Horn/Strobe with Sync Strobe |
|              | 5387                    |       |        | 8-Tone Horn/Strobe with Sync Strobe |
|              | 5388                    |       |        | 8-Tone Horn/Strobe with Sync Strobe |
|              | 5508                    |       |        | Single Gang Sync Strobe             |
|              | 5509                    |       |        | Strobe                              |

**Table A-1: Compatible Notification Appliances**

| Manufacturer       | Model                          | Audio | Visual | Type                            |
|--------------------|--------------------------------|-------|--------|---------------------------------|
| Faraday<br>(cont.) | 5510                           |       |        | Strobe                          |
|                    | 5511                           |       |        | Strobe                          |
|                    | 5512                           |       |        | Strobe                          |
|                    | 5516                           |       |        | Strobe                          |
|                    | 5517                           |       |        | Strobe                          |
|                    | 5518                           |       |        | Strobe                          |
|                    | 5519                           |       |        | Strobe                          |
|                    | 5521                           |       |        | 4" Square Sync Strobe           |
|                    | 5522                           |       |        | 4" Square Sync Strobe           |
|                    | 6120                           |       |        | Horn                            |
|                    | 6140                           |       |        | Horn                            |
|                    | 6223                           |       |        | Horn                            |
|                    | 6226                           |       |        | Horn/Strobe                     |
|                    | 6227                           |       |        | Horn/Strobe                     |
|                    | 6228                           |       |        | Horn/Strobe                     |
|                    | 6243                           |       |        | Electron-Mechanical Horn        |
|                    | 6244                           |       |        | Electron-Mechanical Horn        |
|                    | 6245                           |       |        | Electron-Mechanical Horn        |
|                    | 6246                           |       |        | Electron-Mechanical Horn/Strobe |
|                    | 6247                           |       |        | Electron-Mechanical Horn/Strobe |
|                    | 6248                           |       |        | Electron-Mechanical Horn/Strobe |
|                    | 6300                           |       |        | Mini-Horn                       |
|                    | 6301                           |       |        | Mini-Horn                       |
|                    | 6302                           |       |        | Mini-Horn                       |
|                    | 6310                           |       |        | Mini-Horn/Strobe                |
|                    | 6311                           |       |        | Mini-Horn/Strobe                |
|                    | 6312                           |       |        | Mini-Horn/Strobe                |
|                    | 6314 Series -M, -R, -T, -Y, -Z |       |        | Strobe                          |
|                    | 6320                           |       |        | Sync Mini Horn/Strobe           |

**Table A-1: Compatible Notification Appliances**

| <b>Manufacturer</b> | <b>Model</b> | <b>Audio</b> | <b>Visual</b> | <b>Type</b>     |
|---------------------|--------------|--------------|---------------|-----------------|
| FCI                 | S2415-FC     |              |               | Strobe          |
|                     | S241575-FC   |              |               | Strobe          |
|                     | S2430-FC     |              |               | Strobe          |
|                     | 130-3117C    |              |               | Mini Horn       |
|                     | 130-3147C    |              |               | Mini Horn       |
|                     | BLV-6        |              |               | Vibrating Bell  |
|                     | BLV-10       |              |               | Vibrating Bell  |
|                     | BLVCH        |              |               | Vibrating Chime |
|                     | H12/24-FC    |              |               | Horn            |
|                     | H12/24W-FC   |              |               | Horn            |
|                     | H12/24K-FC   |              |               | Horn            |
|                     | HC12/24-FC   |              |               | Horn            |
|                     | HC12/24W-FC  |              |               | Horn            |
|                     | HC12/24K-FC  |              |               | Horn            |
|                     | P2415-FC     |              |               | Horn/Strobe     |
|                     | P2415W-FC    |              |               | Horn/Strobe     |
|                     | P2415K-FC    |              |               | Horn/Strobe     |
|                     | P241575-FC   |              |               | Horn/Strobe     |
|                     | P241575W-FC  |              |               | Horn/Strobe     |
|                     | P241575F-FC  |              |               | Horn/Strobe     |
|                     | P241575K-FC  |              |               | Horn/Strobe     |
| P2430-FC            |              |              | Horn/Strobe   |                 |

**Table A-1: Compatible Notification Appliances**

| <b>Manufacturer</b> | <b>Model</b>   | <b>Audio</b> | <b>Visual</b> | <b>Type</b> |
|---------------------|----------------|--------------|---------------|-------------|
| FCI                 | P2430W-FC      |              |               | Horn/Strobe |
|                     | P2430K-FC      |              |               | Horn/Strobe |
|                     | P2475-FC       |              |               | Horn/Strobe |
|                     | P2475W-FC      |              |               | Horn/Strobe |
|                     | P2475K-FC      |              |               | Horn/Strobe |
|                     | P24110-FC      |              |               | Horn/Strobe |
|                     | P24110W-FC     |              |               | Horn/Strobe |
|                     | P24110K-FC     |              |               | Horn/Strobe |
|                     | S2430W-FC      |              |               | Strobe      |
|                     | S2430K-FC      |              |               | Strobe      |
|                     | S2475-FC       |              |               | Strobe      |
|                     | S2475W-FC      |              |               | Strobe      |
|                     | S2475K-FC      |              |               | Strobe      |
|                     | S24110-FC      |              |               | Strobe      |
|                     | S24110W-FC     |              |               | Strobe      |
|                     | S24110K-FC     |              |               | Strobe      |
|                     | Federal Signal | 450          |               |             |
| VALS                |                |              |               | Horn/Strobe |

**Table A-1: Compatible Notification Appliances**

| Manufacturer | Model        | Audio | Visual | Type                                     |
|--------------|--------------|-------|--------|--|
| Gentex       | GEC-24-15    | X     | X      | Horn/Strobe                              |
|              | GEC-24-30    | X     | X      | Horn/Strobe                              |
|              | GEC-24-60    | X     | X      | Horn/Strobe                              |
|              | GEC-24-75    | X     | X      | Horn/Strobe                              |
|              | GEC-24-177   | X     | X      | Horn/Strobe                              |
|              | GEC-24-110   | X     | X      | Horn/Strobe                              |
|              | GEC-24-15/75 | X     | X      | Horn/Strobe                              |
|              | GX91         | X     |        | MiniHorn Steady Tone                     |
|              | GX93         | X     |        | MiniHorn Temporal Tone                   |
|              | HG124        |       |        | Horn                                     |
|              | HS24-15      | X     | X      | Horn/Strobe                              |
|              | HS24-30      | X     | X      | Horn/Strobe                              |
|              | HS24-60      | X     | X      | Horn/Strobe                              |
|              | HS24-75      | X     | X      | Horn/Strobe                              |
|              | HS24-110     | X     | X      | Horn/Strobe                              |
|              | HS24-1575    | X     | X      | Horn/Strobe                              |
|              | GCC24        | X     | X      | Multi Candella Horn/Strobe Ceiling Mount |
|              | GCCR24       | X     | X      | Multi Candella Horn/Strobe Ceiling Mount |
|              | GCS24        |       | X      | Multi Candella Strobe Ceiling Mount      |
|              | GCSR24       |       | X      | Multi Candella Strobe Ceiling Mount      |
|              | GEGR-24      | X     | X      | Multi Candella Horn/Strobe               |
|              | GES24-15     |       | X      | Strobe                                   |
|              | GES24-30     |       | X      | Strobe                                   |
|              | GES24-60     |       | X      | Strobe                                   |
|              | GES24-75     |       | X      | Strobe                                   |
|              | GES24-110    |       | X      | Strobe                                   |
| GES24-15/75  |              | X     | Strobe |  |



**Table A-1: Compatible Notification Appliances**

| <b>Manufacturer</b> | <b>Model</b> | <b>Audio</b> | <b>Visual</b> | <b>Type</b>              |
|---------------------|--------------|--------------|---------------|--------------------------|
| Gentex<br>(cont.)   | GES24-177    |              | X             | Strobe                   |
|                     | GES3-24      |              | X             | Multi Candella Strobe    |
|                     | GESR-24      |              | X             | Multi Candella Strobe    |
|                     | GEH-24       | X            |               | Horn                     |
|                     | ST24-30      |              | X             | Strobe                   |
|                     | ST24-60      |              | X             | Strobe                   |
|                     | ST24-75      |              | X             | Strobe                   |
|                     | ST24-110     |              | X             | Strobe                   |
|                     | ST24-1575    |              | X             | Strobe                   |
|                     | WGEC24-75W   | X            | X             | Weatherproof Horn/Strobe |
|                     | WGES24-75W   |              | X             | Weatherproof Strobe      |
|                     | WGMS-24-X    |              |               | Horn/Strobe              |

Table A-1: Compatible Notification Appliances

| Manufacturer     | Model   | Audio | Visual | Type                            |
|------------------|---------|-------|--------|---------------------------------|
| System<br>Sensor | CHR     | X     |        | Chime                           |
|                  | CHW     | X     |        | Chime                           |
|                  | CHSR    | X     | X      | 2-Wire Chime/Strobe             |
|                  | CHSW    | X     | X      | 2-Wire Chime/Strobe             |
|                  | HR      | X     | X      | Horn                            |
|                  | HW      |       | X      | Horn                            |
|                  | HRK     |       | X      | Horn                            |
|                  | P2R     | X     | X      | 2-Wire Horn/Strobe              |
|                  | P2R-P   | X     | X      | 2-Wire Horn/Strobe              |
|                  | PC2R    | X     | X      | 2-Wire Horn/Strobe              |
|                  | PC2R-P  | X     | X      | 2-Wire Horn/Strobe              |
|                  | P2RH    | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | P2RH-P  | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | PC2RH   | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | PC2RH-P | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | P2W     | X     | X      | 2-Wire Horn/Strobe              |
|                  | P2W-P   | X     | X      | 2-Wire Horn/Strobe              |
|                  | PC2W    | X     | X      | 2-Wire Horn/Strobe              |
|                  | PC2W-P  | X     | X      | 2-Wire Horn/Strobe              |
|                  | P2WH    | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | P2WH-P  | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | PC2WH   | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | PC2WH-P | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | P2RK    | X     | X      | 2-Wire Horn/Strobe              |
|                  | PC2RK   | X     | X      | 2-Wire Horn/Strobe              |
|                  | P2RHK   | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | PC2RHK  | X     | X      | 2-Wire Horn/Strobe High Candela |
|                  | P4R     | X     | X      | 4-Wire Horn/Strobe              |
|                  | PC4R    | X     | X      | 4-Wire Horn/Strobe              |
|                  | P4RH    | X     | X      | 4-Wire Horn/Strobe High Candela |
|                  | P4W     | X     | X      | 4-Wire Horn/Strobe              |

**Table A-1: Compatible Notification Appliances**

| Manufacturer                | Model  | Audio | Visual | Type                            |
|-----------------------------|--------|-------|--------|---------------------------------|
| System<br>Sensor<br>(cont.) | PC4W   | X     | X      | 4-Wire Horn/Strobe              |
|                             | P4WH   | X     | X      | 4-Wire Horn/Strobe High Candela |
|                             | PC4WH  | X     | X      | 4-Wire Horn/Strobe High Candela |
|                             | P4RK   | X     | X      | 4-Wire Horn/Strobe              |
|                             | PC4RK  | X     | X      | 4-Wire Horn/Strobe              |
|                             | P4RHK  | X     | X      | 4-Wire Horn/Strobe High Candela |
|                             | PC4RHK | X     | X      | 4-Wire Horn/Strobe High Candela |
|                             | PC4RH  | X     | X      | 4-Wire Horn/Strobe High Candela |
|                             | SR     |       | X      | Strobe                          |
|                             | SR-P   |       | X      | Strobe                          |
|                             | SCR    |       | X      | Strobe                          |
|                             | SCR-P  |       | X      | Strobe                          |
|                             | SRH    |       | X      | Strobe High Candela             |
|                             | SRH-P  |       | X      | Strobe High Candela             |
|                             | SCRH   |       | X      | Strobe High Candela             |
|                             | SCRH-P |       | X      | Strobe High Candela             |
|                             | SW     |       | X      | Strobe                          |
|                             | SW-P   |       | X      | Strobe                          |
|                             | SCW    |       | X      | Strobe                          |
|                             | SCW-P  |       | X      | Strobe                          |
|                             | SWH    |       | X      | Strobe High Candela             |
|                             | SWH-P  |       | X      | Strobe High Candela             |
|                             | SCWH   |       | X      | Strobe High Candela             |
|                             | SCWH-P |       | X      | Strobe High Candela             |
|                             | SRK    |       | X      | Strobe                          |
|                             | SCRK   |       | X      | Strobe                          |
|                             | SRHK   |       | X      | Strobe High Candela             |
|                             | SCRHK  |       | X      | Strobe High Candela             |

**Table A-1: Compatible Notification Appliances**

| Manufacturer | Model           | Audio | Visual | Type                     |              |
|--------------|-----------------|-------|--------|--------------------------|--------------|
| Wheelock     | AH-12           | X     |        | Horn                     |              |
|              | AH-24           | X     |        | Horn                     |              |
|              | AH-12WP         | X     |        | Horn Weatherproof        |              |
|              | AH-24WP         | X     |        | Horn Weatherproof        |              |
|              | AMT-241575W     | X     | X      | Multi-Tone Horn Strobe   |              |
|              | AMT-24MCW       |       | X      | Mutli-Tone Horn Strobe   |              |
|              | AMT-241575W-NYC | X     | X      | Multi-Tone Horn Strobe   |              |
|              | AMT-12/24       | X     |        | Multi-tone Horn          |              |
|              | AMT-12/24 NYC   | X     |        | Multi-tone Horn          |              |
|              | AS-121575W      |       | X      | Horn/Strobe              |              |
|              | NH-12/24        | X     | X      | Horn                     |              |
|              | AS-241575W      | X     | X      | Horn/Strobe              |              |
|              | AS-24MCC        | X     | X      | Horn/Strobe              |              |
|              | AS-24MCCH       | X     | X      | Horn/Strobe              |              |
|              | AS-24MCW        | X     | X      | Horn/Strobe              |              |
|              | AS-24MCWH       | X     | X      | Horn/Strobe              |              |
|              | ASWP-2475W      | X     | X      | Horn/Strobe Weatherproof |              |
|              | ASWP-2475C      | X     | X      | Horn/Strobe Weatherproof |              |
|              | ASWP-24MCWH     | X     | X      | Horn/Strobe              |              |
|              | ASWP-24MCCH     | X     | X      | Horn/Strobe              |              |
|              | CH-70           | X     |        | Chime                    |              |
|              | CH-90           | X     |        | Chime                    |              |
|              | CH70-241575W    |       |        | X                        | Chime/Strobe |
|              | CH70-24MCW      |       |        | X                        | Chime/Strobe |
|              | CH70-24MCWH     |       |        | X                        | Chime/Strobe |
|              | CH90-24MCC      |       |        | X                        | Chime/Strobe |

Table A-1: Compatible Notification Appliances

| Manufacturer        | Model        | Audio | Visual | Type                  |
|---------------------|--------------|-------|--------|-----------------------|
| Wheelock<br>(cont.) | CH90-24MCCH  |       | X      | Chime/Strobe          |
|                     | HS-24        | X     |        | Horn                  |
|                     | HS4-241575W  | X     | X      | Horn/Strobe           |
|                     | HS4-24MCW    | X     | X      | Horn/Strobe           |
|                     | HS4-24MCWH   | X     | X      | Horn/Strobe           |
|                     | HS4-24MCC    | X     | X      | Horn/Strobe           |
|                     | MIZ-24S      | X     | X      | Mini Horn Strobe      |
|                     | MT-121575W   |       | X      | MultitoneHorn Strobe  |
|                     | MT-241575W   | X     | X      | Multitone Horn Strobe |
|                     | MT-24MCW     |       | X      | Multitone Horn Strobe |
|                     | MTWP-2475W   |       | X      | Multitone Horn Strobe |
|                     | MTWP-2475C   |       | X      | Multitone Horn Strobe |
|                     | MTG-121575W  | X     | X      | Multitone Horn Strobe |
|                     | MTR-121575W  | X     | X      | Multitone Horn Strobe |
|                     | MTWPA-2475W  | X     | X      | Multitone Horn Strobe |
|                     | MTWPB-2475W  | X     | X      | Multitone Horn Strobe |
|                     | MTWPG-2475W  | X     | X      | Multitone Horn Strobe |
|                     | MTWPR-2475W  | X     | X      | Multitone Horn Strobe |
|                     | MTWPA-24MCCH | X     | X      | Multitone Horn Strobe |
|                     | ZNH          | X     |        | Horn                  |
|                     | NS-121575W   | X     | X      | Horn/Strobe           |
|                     | NS-241575W   | X     | X      | Horn/Strobe           |
|                     | NS-24MCW     | X     | X      | Horn/Strobe           |
|                     | NS-24MCC     | X     | X      | Horn/Strobe           |
|                     | NS-24MCCH    | X     | X      | Horn/Strobe           |
|                     | ZNS-MCW      | X     | X      | Horn/Strobe           |
|                     | ZNS-MCWH     | X     | X      | Horn/Strobe           |
|                     | ZNS-24MCC    | X     | X      | Horn/Strobe           |
|                     | ZNS-24MCCH   | X     | X      | Horn/Strobe           |

**Table A-1: Compatible Notification Appliances**

| Manufacturer        | Model         | Audio | Visual | Type                |
|---------------------|---------------|-------|--------|---------------------|
| Wheelock<br>(cont.) | RSS-121575W   |       | X      | Strobe              |
|                     | RSS-241575W   |       | X      | Strobe              |
|                     | RSS-24MCC     |       | X      | Strobe              |
|                     | RSS-24MCCR    |       | X      | Strobe              |
|                     | RSS-24MCCH    |       | X      | Strobe              |
|                     | RSS-24MCCHR   |       | X      | Strobe              |
|                     | RSS-24MCW     |       | X      | Strobe              |
|                     | RSS-24MCWH    |       | X      | Strobe              |
|                     | RSSP-121575W  |       | X      | Strobe              |
|                     | RSSP-241575W  |       | X      | Strobe              |
|                     | RSSR-2415W    |       | X      | Strobe              |
|                     | RSSR-2415C    |       | X      | Strobe              |
|                     | RSSR-2475W    |       | X      | Strobe              |
|                     | RSSR-2475C    |       | X      | Strobe              |
|                     | RSSR-24110C   |       | X      | Strobe              |
|                     | RSSA-24110W   |       | X      | Strobe              |
|                     | RSSB-24110W   |       | X      | Strobe              |
|                     | RSSG-24110W   |       | X      | Strobe              |
|                     | RSSR-24110W   |       | X      | Strobe              |
|                     | RSSA-24MCC    |       | X      | Multi-Cd Strobe     |
|                     | RSSB-24MCC    |       | X      | Multi-Cd Strobe     |
|                     | RSSG-24MCC    |       | X      | Multi-Cd Strobe     |
|                     | RSSR-24MCC    |       | X      | Multi-Cd Strobe     |
|                     | RSSWPA-2475W  |       | X      | Strobe Weatherproof |
|                     | RSSWPA-24MCCH |       | X      | Strobe Weatherproof |
|                     | RSSWPG-24MCCH |       | X      | Strobe Weatherproof |
|                     | RSSWPR-24MCCH |       | X      | Strobe Weatherproof |
|                     | RSSWP-2475W   |       | X      | Strobe Weatherproof |
|                     | RSSWP-2475C   |       | X      | Strobe Weatherproof |

Table A-1: Compatible Notification Appliances

| Manufacturer        | Model        | Audio | Visual | Type                  |
|---------------------|--------------|-------|--------|-----------------------|
| Wheelock<br>(cont.) | RSSWP-24MCWH |       | X      | Strobe Weatherproof   |
|                     | ZRS-MCWH     |       | X      | Strobe                |
|                     | ZRS-24MCC    |       | X      | Strobe                |
|                     | ZRS-24MCCH   |       | X      | Strobe                |
|                     | MB-G6-24     |       |        | Motor Bell            |
|                     | MB-G10-24    |       |        | Motor Bell            |
|                     | MB-G6-12     |       |        | Motor Bell            |
|                     | MB-G10-12    |       |        | Motor Bell            |
|                     | MIZ-24-R     |       |        | Mini-Horn             |
|                     | MT-12/24-R   | X     | X      | Multitone Horn        |
|                     | MT4-12/2z    | X     | X      | Multitone Horn        |
|                     | ZRS-MCW      |       | X      | Strobe                |
|                     | MTWPR-24MCCH | X     | X      | Multitone Horn Strobe |
|                     | NH-12/24R    | X     |        | Horn                  |
|                     | HSR          |       | X      | Horn/Strobe           |
|                     | HSW          |       | X      | Horn/Strobe           |
|                     | STR          |       | X      | Strobe                |
|                     | STW          |       | X      | Strobe                |
|                     | HNR          |       | X      | Horn                  |

## A.2 Two-Wire Smoke Detectors

Table A-2 lists two-wire smoke detectors that are compatible with the fire control panel. The table is organized by manufacturer. The columns show the number of detectors per loop that can be used.

|                                |               |
|--------------------------------|---------------|
|                                | <b>5808</b>   |
| <b>Identifier</b>              | 24H           |
| <b>Operating Voltage Range</b> | 18.5–27.4 VDC |

*Note: The maximum number of smoke detectors per zone is determined by both the current draw and the impedance of the smoke detector. If too many smoke detectors are used on any zone, false alarms could occur.*

*Do not mix different models of detectors on any zone; false alarms could occur.*

*Do not mix detectors of different models unless the system is specifically intended to be installed in that configuration.*

*Control unit Smoke Reset Time must be programmed for a number greater than or equal to the maximum reset time of the smoke detector.*

**Table A-2: Compatible Two-Wire Smoke Detectors**

| Manufacturer | Model Name or Number<br>(Base model name or number<br>in parentheses.) | Compatibility ID |  | # per Loop                                   |
|--------------|--|------------------|--|--|
|              |  | Head             | Base                                     |  |
| Apollo       | 55000-350 (45681-200)  | 55000-350        | 45681-200                                | 24 / loop                                    |
|              | 55000-250 (45681-200)  | 55000-250        | 45681-200                                | 24 / loop                                    |
| Apollo       | 55000-225  | 55000-225        | 45681-255, 256,                          | 15 / loop for<br>Ion Detectors               |
|              | 55000-226  | 55000-226        |  |  |
|              | 55000-227  | 55000-227        |  |  |
|              | 55000-325  | 55000-325        | 45681-200, 220,<br>230, 232,<br>251, 252 | 15 / loop for<br>Photo Electric<br>Detectors |
|              | 55000-328  | 55000-328        |  |  |
|              | 55000-326  | 55000-326        |  |  |
|              | 55000-327  | 55000-327        |  |  |



**Table A-2: Compatible Two-Wire Smoke Detectors**

| Manufacturer | Model Name or Number<br>(Base model name or number<br>in parentheses.) | Compatibility ID |         | # per Loop |
|--------------|--|------------------|---------|------------|
|              |  | Head             | Base    |            |
| ESL          | 429C (S10A)  | N/A              | S10A    | 30 / loop  |
|              | 429CRT (S11A)  | N/A              | S11A    | 30 / loop  |
|              | 429CST (S11A)  | N/A              | S11A    | 30 / loop  |
|              | 429CT (S10A)   | N/A              | S10A    | 30 / loop  |
|              | 609U01-11  | S10              | S00     | 40 / loop  |
|              | 609U02-11  | S10              | S00/S03 | 40 / loop  |
|              | 611U (601U or 602U)  | S10              | S00/S03 | 40 / loop  |
|              | 611UD (601U or 602U)   | S10              | S00/S03 | 40 / loop  |
|              | 611UT (601U or 602U)   | S10              | S00/S03 | 40 / loop  |
|              | 612U (601U or 602U)  | S10              | S00/S03 | 40 / loop  |
|              | 612UD (601U or 602U)   | S10              | S00/S03 | 40 / loop  |
|              | 711U (701E or 701U)  | N/A              | S10A    | 25 / loop  |
|              | 712U (701E or 701U)  | N/A              | S10A    | 25 / loop  |
|              | 713-5U (702E or 701U)  | N/A              | S10A    | 25 / loop  |
|              | 713-6U (702E or 701U)  | N/A              | S10A    | 25 / loop  |
|              | 721-U (S10A)   | N/A              | S10A    | 30 / loop  |
|              | 721-UT (S10A)  | N/A              | S10A    | 30 / loop  |
|              | Falcon   | 525              | FDT1    | N/A        |
| 525T         |  | FDT1             | N/A     | 17 / loop  |
| Hochiki      | SIH-24F (HS-224D OR HSD-224)   | HD-3             | HB-5    | 25 / loop  |
|              | SLK-24F (HS-224D)  | HD-3             | HB-5    | 25 / loop  |
|              | SLK-24FH (HS-224D)   | HD-3             | HB-5    | 25 / loop  |

**Table A-2: Compatible Two-Wire Smoke Detectors**

| Manufacturer  | Model Name or Number<br>(Base model name or number<br>in parentheses.) | Compatibility ID |      | # per Loop |
|---------------|--|------------------|------|------------|
|               |  | Head             | Base |            |
| System Sensor | 1400   | A                | N/A  | 20 / loop  |
|               | 1451 (B401B)   | A                | A    | 20 / loop  |
|               | 2100   | A                | N/A  | 20 / loop  |
|               | 2100T  | A                | N/A  | 20 / loop  |
|               | 2151 (B401)  | A                | N/A  | 16 / loop  |
|               | 2151T (B401)   | A                | N/A  | 16 / loop  |
|               | 2300T  | A                | N/A  | 20 / loop  |
|               | 2300   | A                | N/A  | 20 / loop  |
|               | 2300TB   | A                | N/A  | 20 / loop  |
|               | 2400   | A                | N/A  | 20 / loop  |
|               | 2400 (DH400)   | A                | N/A  | 20 / loop  |
|               | 2400AIT  | A                | N/A  | 20 / loop  |
|               | 2400AT   | A                | N/A  | 20 / loop  |
|               | 2400TH   | A                | N/A  | 20 / loop  |
|               | 2451 (B401B)   | A                | N/A  | 20 / loop  |
|               | 2451DH (DH 400)  | A                | N/A  | 20 / loop  |
|               | 2451TH (B401B)   | A                | N/A  | 20 / loop  |
|               | 2W-B   | A                | N/A  | 16 / loop  |
|               | 2WT-B  | A                | N/A  | 16 / loop  |
|               | 2WTR-B   | A                | N/A  | 16 / loop  |

---

# Appendix B

## Special Characters Lists

---

---

This section contains tables of programmable characters that may be used for device, module, and zone names or phone numbers.

### B.1 Characters used for Naming

Table B-1 list the available character and their associated numeric designator. When programming these numbers can be entered as a short cut to using the up or down arrow keys, to select characters when naming a point or zone.

**Table B-1: Character Table**

|     |   |     |   |     |   |     |   |
|-----|---|-----|---|-----|---|-----|---|
| 000 | A | 001 | B | 002 | C | 003 | D |
| 004 | E | 005 | F | 006 | G | 007 | H |
| 008 | I | 009 | J | 010 | K | 011 | L |
| 012 | M | 013 | N | 014 | O | 015 | P |
| 016 | Q | 017 | R | 018 | S | 019 | T |
| 020 | U | 021 | V | 022 | W | 023 | X |
| 024 | Y | 025 | Z | 026 | a | 027 | b |
| 028 | c | 029 | d | 030 | e | 031 | f |
| 032 | g | 033 | h | 034 | i | 035 | j |
| 036 | k | 037 | l | 038 | m | 039 | n |
| 040 | o | 041 | p | 042 | q | 043 | r |
| 044 | s | 045 | t | 046 | u | 047 | v |
| 048 | w | 049 | x | 050 | y | 051 | z |
| 052 |   | 053 | 0 | 054 | 1 | 055 | 2 |
| 056 | 3 | 057 | 4 | 058 | 5 | 059 | 6 |
| 060 | 7 | 061 | 8 | 062 | 9 | 063 | : |
| 064 | - | 065 | _ | 066 | . | 067 | , |
| 068 | & | 069 | * | 070 | # |     |   |



---

# Silent Knight Fire Product Warranty and Return Policy

---

## General Terms and Conditions

- All new fire products manufactured by Silent Knight have a limited warranty period of 36 months from the date of manufacture against defects in materials and workmanship. See limited warranty statement for details.
- This limited warranty does not apply to those products that are damaged due to misuse, abuse, negligence, exposure to adverse environmental conditions, or have been modified in any manner whatsoever.

## Repair and RMA Procedure

- All products that are returned to Silent Knight for credit or repair require a RMA (Return Authorization) number. Call Silent Knight Customer Service at 800-328-0103 or 203-484-7161 between 8:00 A.M. and 5:00 P.M. EST, Monday through Friday to obtain a return authorization number.
- Silent Knight Technical Support is available at 800-446-6444 between 8:00 A.M. and 5:00 P.M. CST, Monday through Friday.
- All returns for credit are subject to inspection and testing at the factory before actual determination is made to allow credit.
- RMA number must be prominently displayed on the outside of the shipping box. See return address example under Advanced Replacement Policy.
- Included with each return should be: a packing slip that has the RMA number, a content list, and a detailed description of the problem.
- All products returned to Silent Knight must be sent freight pre-paid. After product is processed, Silent Knight will pay for shipping product back to customer via UPS ground.
- Return the Silent Knight product circuit board only. Products that are returned in cabinets will be charged an additional \$50 to cover the extra shipping and handling costs over board only returns. **Do not return batteries.** Silent Knight has the authority to determine if a product is repairable. Products that are deemed un-repairable will be returned to the customer.
- Product that is returned that has a board date code more than 36 months from date of manufacture will be repaired and the customer will be assessed the standard Silent Knight repair charge for that model.

### **Advanced Replacement Policy**

- Silent Knight offers an option of advance replacement for fire product printed circuit boards that fail during the first 6 months of the warranty period. These items must be returned with transportation charges prepaid and must be accompanied by a return authorization.
- For advance replacement of a defective board, contact your local Silent Knight distributor or call Silent Knight at 800-328-0103 to obtain a RMA (Return Authorization) number and request advanced replacement.
- A new or refurbished board will be shipped to the customer. The customer will initially be billed for the replacement board but a credit will be issued after the repairable board is received at Silent Knight. All returned products must comply with the guidelines described under “General Terms and Conditions” and “Repair and RMA Procedure”.
- The defective board must be returned within 30 days of shipment of replacement board for customer to receive credit. No credit will be issued if the returned board was damaged due to misuse or abuse.
- Repairs and returns should be sent to:  
Silent Knight / Honeywell  
Attn: Repair Department  
12 Clintonville Road  
Northford, CT 06472  
USA

RA Number:\_\_\_\_\_

---

## **Manufacturer Warranties and Limitation of Liability**

---

**Manufacturer Warranties.** Subject to the limitations set forth herein, Manufacturer warrants that the Products manufactured by it in its Northford, Connecticut facility and sold by it to its authorized Distributors shall be free, under normal use and service, from defects in material and workmanship for a period of thirty six months (36) months from the date of manufacture (effective Jan. 1, 2009). The Products manufactured and sold by Manufacturer are date stamped at the time of production. Manufacturer does not warrant Products that are not manufactured by it in its Northford, Connecticut facility but assigns to its Distributor, to extent possible, any warranty offered by the manufacturer of such product. This warranty shall be void if a Product is altered, service repaired by anyone other than Manufacturer or its authorized Distributors. This warranty shall also be void if there is a failure to maintain the Products and the systems in which they operate in proper working conditions.

MANUFACTURER MAKES NO FURTHER WARRANTIES, AND DISCLAIMS ANY AND ALL OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS, TRADEMARKS, PROGRAMS AND SERVICES RENDERED BY MANUFACTURER INCLUDING WITHOUT LIMITATION, INFRINGEMENT, TITLE, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. MANUFACTURER SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL OR INDUSTRIAL USES OF ITS PRODUCTS.

This document constitutes the only warranty made by Manufacturer with respect to its products and replaces all previous warranties and is the only warranty made by Manufacturer. No increase or alteration, written or verbal, of the obligation of this warranty is authorized. Manufacturer does not represent that its products will prevent any loss by fire or otherwise.

**Warranty Claims.** Manufacturer shall replace or repair, at Manufacturer's discretion, each part returned by its authorized Distributor and acknowledged by Manufacturer to be defective, provided that such part shall have been returned to Manufacturer with all charges prepaid and the authorized Distributor has completed Manufacturer's Return Material Authorization form. The replacement part shall come from Manufacturer's stock and may be new or refurbished. THE FOREGOING IS DISTRIBUTOR'S SOLE AND EXCLUSIVE REMEDY IN THE EVENT OF A WARRANTY CLAIM.







## Model 5808 Basic Operating Instructions

These Instructions must be framed and displayed next to the 5808 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

| Operation                                | Task to Perform   |
|--|---|
| Silence Alarms and Troubles              | Press <b>SILENCE</b> then rotate the key or enter a code if prompted. Silence LED will light.   |
| Reset Alarms                             | Press <b>RESET</b> then rotate the key or enter a code if prompted.   |
| Acknowledge Alarms and Troubles          | <p>Press <b>ACK</b> then enter a code if prompted. When the Alarm or Trouble is acknowledged an A will appear in the annunciator display as shown Below.</p>  |
| View Alarms, Supervisories, and Troubles | <p>Press the <b>▲</b> OR <b>▼</b> button to view Alarms, Supervisories, and Troubles.</p>   |
| Conduct a Fire Drill                     | <ol style="list-style-type: none"> <li>1. Press <b>ENTER</b> to access Main Menu, then rotate the key or enter a code if prompted.</li> <li>2. Press <b>1</b> to select System Tests.</li> <li>3. Enter code if prompted, then press <b>1</b> to select Fire Drill.</li> <li>4. Press <b>ENTER</b> to start the fire drill. Press <b>ENTER</b> to end the fire drill.</li> </ol>  |
| View a Point's Status                    | <ol style="list-style-type: none"> <li>1. Press to access Main Menu, then rotate the key or enter a code if prompted.</li> <li>2. Then press <b>2</b> to select Point Functions.</li> <li>3. Enter code if prompted, then press <b>2</b> to select Point Status.</li> <li>4. Select the module the device is located on by using the <b>▲</b> OR <b>▼</b>, then press <b>ENTER</b>.</li> <li>5. Enter the point number.</li> </ol>  |
| Check Detector Sensitivity               | <ol style="list-style-type: none"> <li>1. Follow steps 1 through 5 for viewing a point status.</li> <li>2. Press Rt Arrow <b>▶</b> to view detector sensitivity.</li> </ol>   |
| Set Time and Date                        | <ol style="list-style-type: none"> <li>1. Press <b>ENTER</b> to access Main Menu, then rotate the key or enter a code if prompted.</li> <li>2. Then press <b>4</b> to select Set Time &amp; Date. Enter a code if prompted. Make changes in the fields on the screen as necessary.</li> <li>3. Press <b>ENTER</b> if you wish to keep the changes. Press <b>ENTER</b> to set the entered time and date.</li> </ol>  |
| Enable / Disable a Point                 | <ol style="list-style-type: none"> <li>1. Rotate the key or enter a code to access to access Main Menu.</li> <li>2. Press <b>2</b> to select Point Functions.</li> <li>3. Press <b>1</b> for Disable / Enable Pt</li> <li>4. Press <b>7</b> for Disable / Enable Pt.</li> <li>5. Use the <b>▲</b> or <b>▼</b> arrow or to move through the list. Then press <b>ENTER</b> to select the module where the point you want to disable/enable is located</li> <li>6. Enter the point or circuit number that you want to disable/enable.</li> <li>7. Press Rt Arrow <b>▶</b> to toggle between NORMAL (enable) or DISABLE.</li> </ol> |
| View Event History                       | <ol style="list-style-type: none"> <li>1. Press <b>ENTER</b> to access Main Menu, then rotate the key or enter a code if prompted.</li> <li>2. Press <b>3</b> to select Event History.</li> <li>3. Press the <b>▲</b> or <b>▼</b> to view events in the history buffer.</li> </ol>  |

Cut Along the Dotted Line

Cut Along the Dotted Line





**SILENT  
KNIGHT**

by Honeywell

---

Silent Knight  
12 Clintonville Road  
Northford, CT 06472-1610  
203-484-7161  
Fax: 203-484-7118

[www.silentknight.com](http://www.silentknight.com)