

VERTILINE

CCTV Rack Mount Power Supplies Installation Guide

Models Include: **Vertiline16C**

- 24VAC or 28VAC @ 10 amp
- Sixteen (16) fuse protected outputs

Vertiline 166C

- 24VAC or 28VAC @ 14 amp
- Sixteen (16) fuse protected outputs

Vertiline 16CD

- 24VAC or 28VAC @ 10 amp
- Sixteen (16) PTC protected outputs

Vertiline 166CD

- 24VAC or 28VAC @ 14 amp
- Sixteen (16) PTC protected outputs





Overview:

Altronix Vertiline CCTV Rack Mount Power Supplies provide 16 power outputs in a space saving 1U EIA 19" rack mount chassis which may be rack, wall or shelf mounted. The units feature individually selectable 24VAC and/or 28VAC power outputs with surge suppression. Vertiline CCTV Rack Mount Power Supplies are also available in eight (8) and twenty-four (24) output models with various power ratings.

Specifications:

- 115VAC 60 Hz input.
- Sixteen (16) individually selectable 24VAC or 28VAC power outputs with OFF position.
- Sixteen (16) power LED indicators.
- External blade fuses or PTC protected outputs.
- Surge suppression.
- Illuminated power disconnect circuit breaker with manual reset.
- IEC 320 3-wire grounded line cord (detachable).
- Removable terminal blocks with locking screw flange.
- Ease of installation saves time and eliminates costly labor.
- Compact 1U rack mount chassis.
- Fits standard EIA 19" rack.
- Units can be rack, wall or shelf mounted.

Sixteen (16) Output Rack Mount Configuration Reference Chart:

Altronix Model Number Out Total Cate of Cate											
Altronix Model Number	Olifordia	Z CIP OF TOTAL OF	A CONTRACTOR OF THE PROPERTY O	adio of Ortion	Application of the control of the co	ST POOR	iden Sign Off Sign	alingo Adin C	15 Agingo	Ather Lights	
Vertiline16C	24VAC or 28VAC	10 amp			-		3 amp			UL Listed for Commercial CCTV Equipment (UL 2044). CUL Listed - CSA Standard C22.2 No.1-04, Audio, Video and Similar Equipment.	
Vertiline16CD	24VAC or 28VAC	10 amp	16	-	PTC	2.5 amp	-	To amp			
Vertiline166C	24VAC or 28VAC	14 amp	16	Fused	-	3 amp	3 amp	15 amp	1 omn		
Vertiline166CD	24VAC or 28VAC	14 amp	16	-	PTC	2.5 amp	-	15 amp 4	4 amp		

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to all local codes and in accordance with the National Electrical Code.

Installation Instructions:

- 1. Attach mounting brackets to Vertiline unit for rack or wall mount installation (*Figs. 4-5, pg. 7*). Affix rubber pads to Vertiline for shelf installation (*Fig. 6, pg. 7*).
- 2. Secure the unit in a rack, mount unit to a wall or place unit on a shelf as desired (unit should be spaced at least 3" from any video monitors). When installing the unit in a rack allow for one half of a U spacing above the unit for ventilation.
- 3. Plug the grounded AC line cord (included) into the IEC 320 connector of the Vertiline unit (*Fig. 1f, pg. 4*). Insert the plug end of the line cord into a grounded AC receptacle.
- 4. Set illuminated master power disconnect circuit breaker to the (ON) position (Fig. 3, pg. 6).
- 5. Select 24VAC or 28VAC power output for cameras 1-16 with the corresponding voltage adjustment switches (Fig. 1b, pg. 4).
- 6. Measure output voltage before connecting cameras. This helps avoid potential damage. All terminals with common suffix (P) "1P, 2P ..." are the same polarity.
- 7. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3, pg. 6).
- 8. Connect the power outputs of terminals marked [1P & 1N] to the power inputs of camera 1 (Fig. 2, pg. 5). Repeat this step for each additional camera (Outputs 2-16). After wiring is completed insert terminal block into the corresponding connector and secure by tightening the screws.

- 2 - Vertiline16C

- 9. Upon completion of wiring, set illuminated master power disconnect circuit breaker to the ON (RESET) position (*Fig. 3, pg. 6*).
- 10. The power LEDs (Green) on the faceplate for Outputs 1-16 will illuminate when AC power is present (Fig. 1a, pg. 4). If any of these LEDs are off, a loss of AC power output may be due to a blown fuse or a tripped PTC caused by a short circuit or overload condition. If all of the LEDs are OFF there may be a complete loss of supply power to the Vertiline unit or the illuminated master power disconnect circuit breaker is in the OFF position or the main fuse 1-8 or 9-16 is blown (Fig. 1c, pg. 4).*

To restore the power output for Vertiline16C or Vertiline166C:

- 1- Switch corresponding output voltage switch to the OFF position (Fig. 1b, pg. 4).
- 2- Eliminate the trouble condition.
- 3- Replace the corresponding automotive blade fuse.*
- 4- Switch output voltage switch to the 24VAC or 28VAC position as desired (Fig. 1b, pg. 4).

To restore the power output for Vertiline16CD or Vertiline166CD:

- 1- Switch corresponding output voltage switch to the OFF position (Fig. 1b, pg. 4).
- 2- Eliminate the trouble condition.
- 3- Allow 1 minute for PTC to cool off.
- 4- Switch output voltage switch to the 24VAC or 28VAC position as desired (Fig. 1b, pg. 4).


*Note: Replace fuses with same type and rating:

Output fuses are rated @ 3 amp for all models. Main fuse ratings:


10 amp for Vertiline16C and Vertiline16CD. 15 amp for Vertiline166C and Vertiline166CD.



Vertiline16C - 3 -

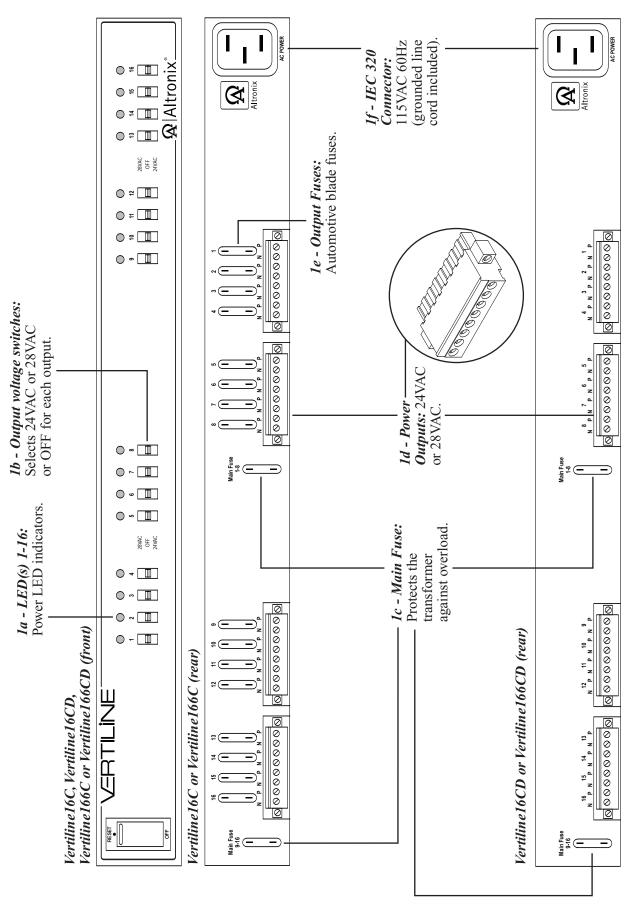

Vertiline 16CD and Vertiline 166CD do not have output fuses on the rear of the rack mount chassis. The output PTCs are located on the inside of the rack mount chassis.

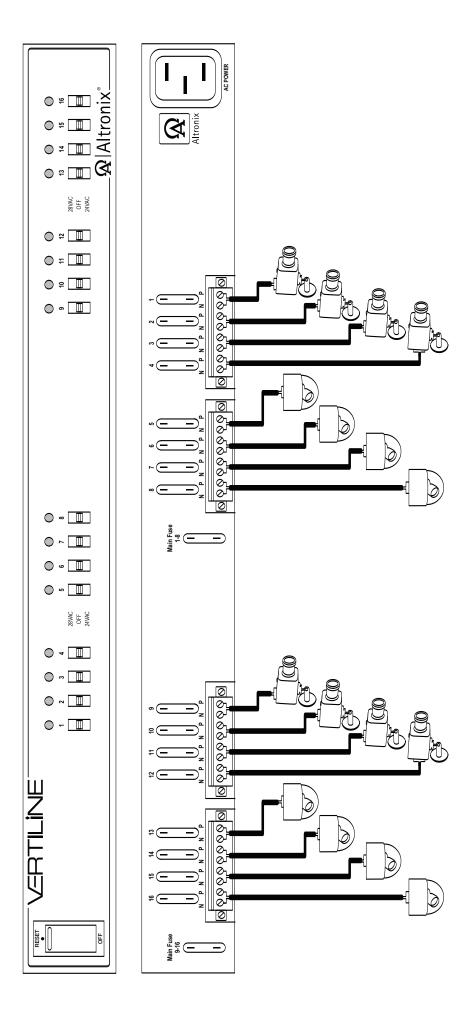



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated "DANGEROUS VOLTAGE" within the products enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.






CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

1U EIA 19" Rack Mount Chassis Mechanical Drawing & Dimensions:

1.625"H x 19.125"W x 8.5"D

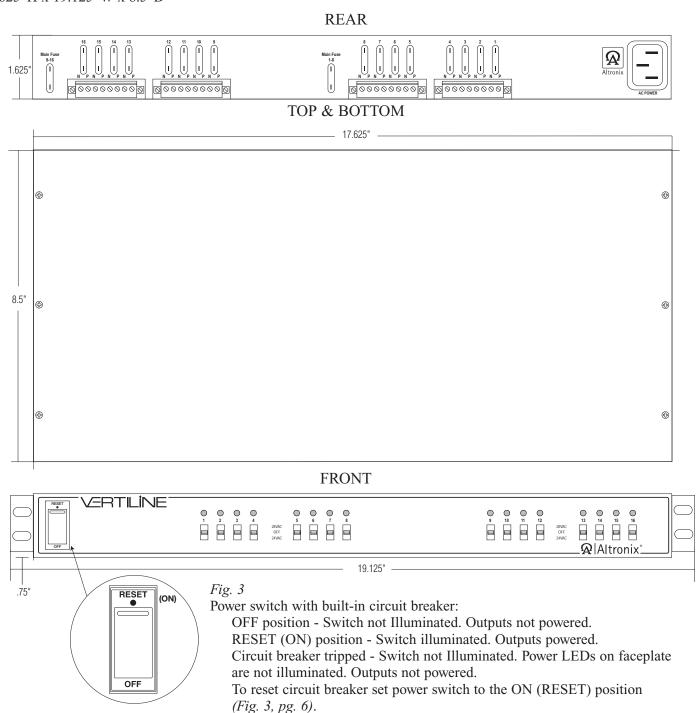


- 6 -

Mounting Options:

Rack Mount Installation

- 1- Remove factory installed screws from both sides of rack chassis (Fig. 4a).
- 2- Install mounting brackets (A) on the left and right side of rack chassis using the two (2) flat head screws (B) (included) (Fig. 4b).
- 3- Place unit into desired EIA 19" rack position and secure with mounting screws (not included) (Fig. 4c).


Fig. 4

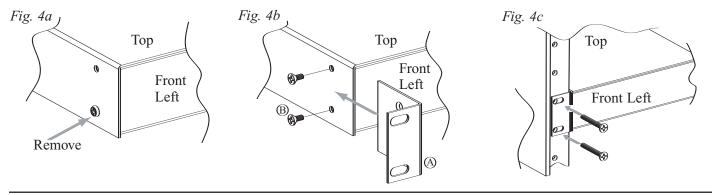

Wall Mount Installation

- 1- Install mounting brackets (A) on the left and right side of rack chassis using two (2) flat head screws (B) (included) (Fig. 5a).
- 2- Place unit at desired location and secure with mounting screws (not included) (Fig. 5b). Caution: It is necessary to make sure mounting screws are securely fastened to a beam when installing.


Fig. 5

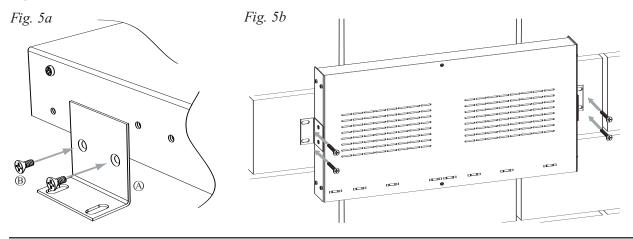


Shelf Installation

- 1- Position and affix rubber pads (C) (included) at each corner on the bottom of the unit (Fig. 6).
- 2- Place unit in desired location.

Fig. 6

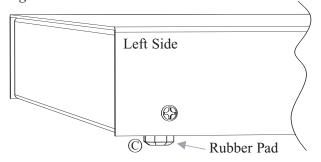

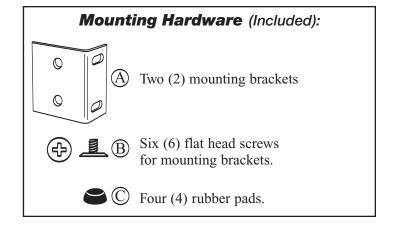

Vertiline16C - 7 -

Notes:

Altronix is not responsible for any typographical errors.

