

DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 5/8"	2 3/16"*
SINGLE DOOR	3 5/8"	2 3/16"

NOTE: BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED.

* USE 2 3/4" BACKSET FOR WOOD FIRE DOORS

7/8" DIA THRU
1/2" DIA FOR NL-OP


CL DEVICE

39 13/16"
TO FINISHED
FLOOR

REMOVE GLASS STOP
HEAD OR BEAD IN
AREA OF DEVICE IF
REQUIRED

NOTE: MOUNTING HOLES TO BE PREPARED
AT INSTALLATION ON DOOR.

FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED,
SEE ADDITIONAL TRIM TEMPLATE.

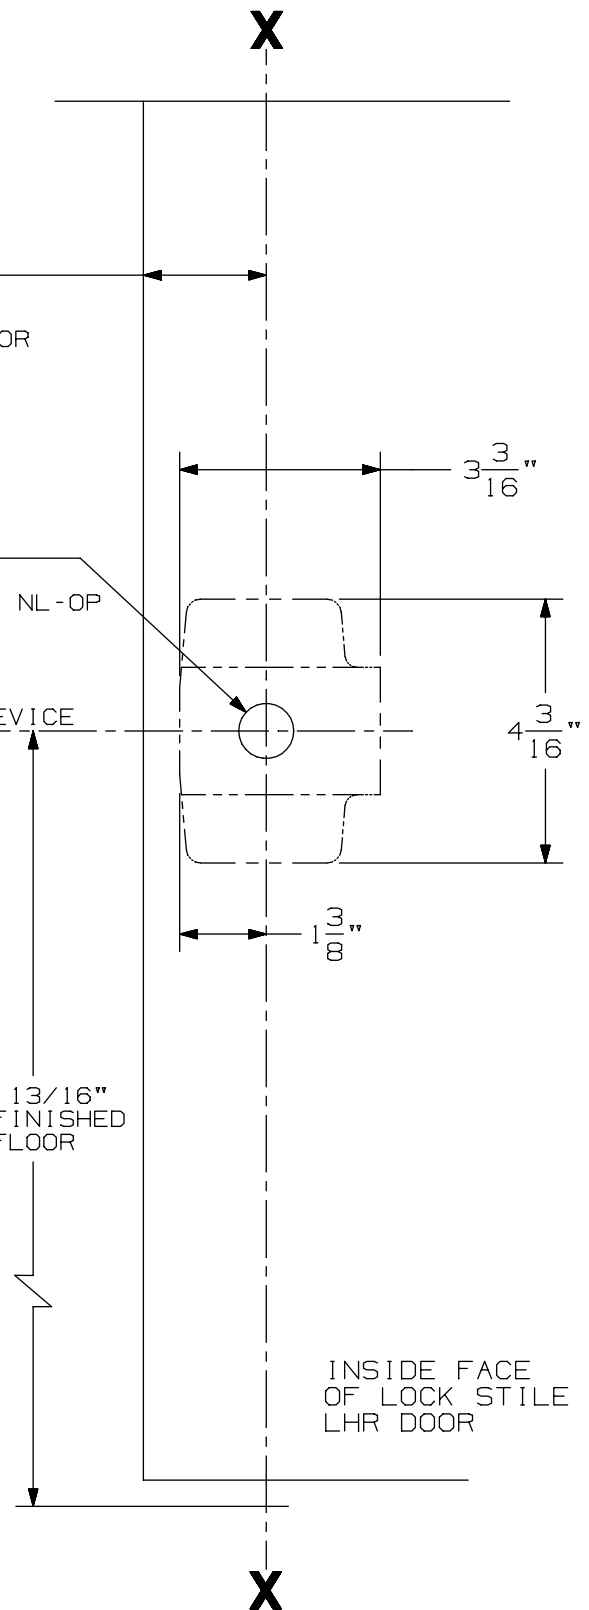

LHR SHOWN
RHR OPPOSITE

2227 & 2227-F K, L, & TP Series
Vertical Rod Device (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE
NUMBER:

W10013_a

DATE:
05-28-13