


LINE X-X CORRESPONDS TO
LINE X-X ON DEVICE TEMPLATE

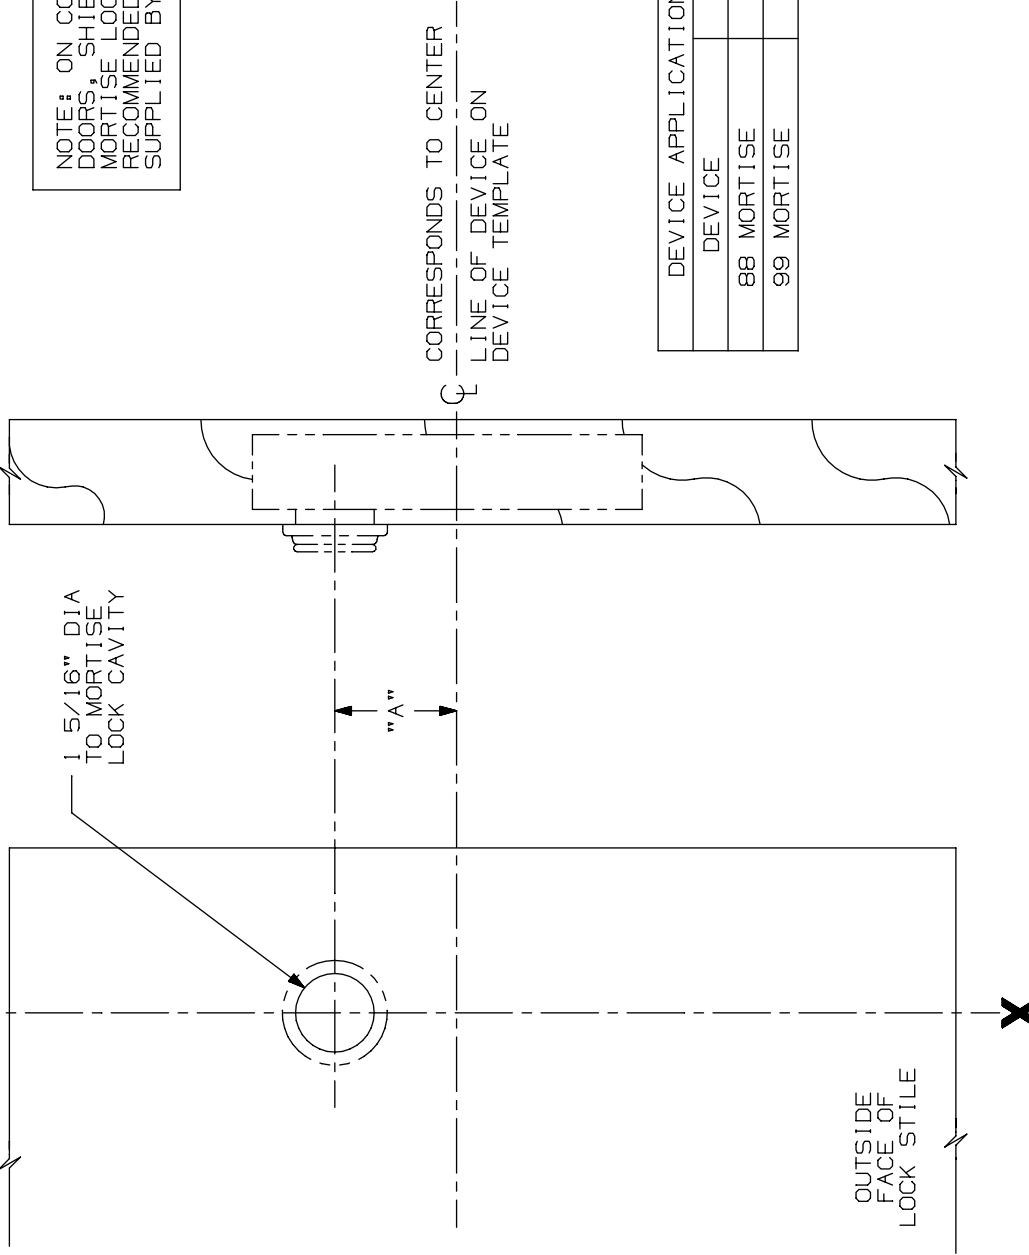

NOTE: ON COMPOSITE TYPE DOORS, SHIELDS FOR THE MORTISE LOCK & TRIM ARE RECOMMENDED. OTHERS ARE SUPPLIED BY OTHERS.

CORRESPONDS TO CENTER
LINE OF DEVICE ON
DEVICE TEMPLATE

DEVICE APPLICATION SCHEDULE	
DEVICE	DIM. "A"
88 MORTISE	2 1/32"
99 MORTISE	2 7/32"

NOTE: WIRING TO E7500 & SS7500 LOCKS GO THRU DOOR & NOT DEVICE.
NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

LHR SHOWN
RHR OPPOSITE

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.

7500 Mortise Lock Cylinder Preparation (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE
NUMBER:

W40019_a

DATE:
05-29-13