

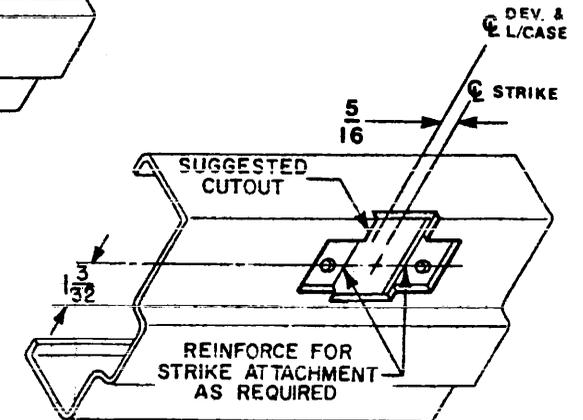


INSTALLATION INSTRUCTIONS

1. FOR LOCK OR DEVICE PREPARATION SEE DIRECTIONS THAT ACCOMPANY THEM.
2. PREPARE FRAME FOR MONITOR STRIKE AS SHOWN.
3. WIRE AND INSTALL STRIKE.
 - A. CONNECT WIRES FROM STRIKE TO LEAD WIRES (PER CORRECT WIRING DIAGRAM ON REVERSE SIDE OF THIS SHEET).
 - B. SECURE STRIKE TO DOOR USING THE (?) #12-24 SCREWS IN THE MOUNTING HARDWARE PACKAGE.
4. CHECK OPERATION OF MONITOR STRIKE.

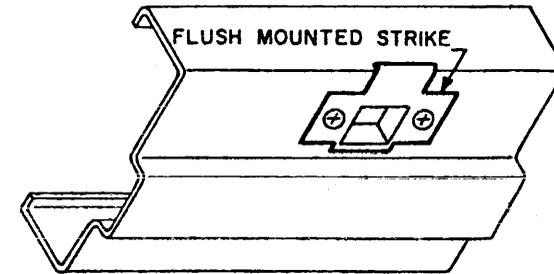

APPLICATION SCHEDULE		
DEVICE	MIN. BACKSET	MIN. STILE
5547	1 15/16	2 11/16
8527	1 15/16	2 15/16

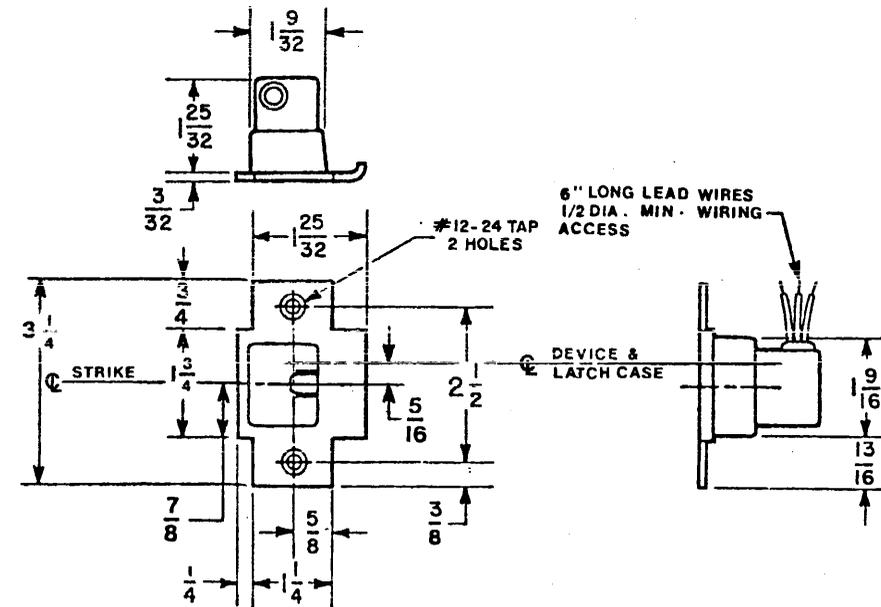

Customer Service

1-877-671-7011 www.allegion.com/us

FOR CUTOUTS ON INSIDE FACE OF DOOR
SEE DIRECTIONS IN DEVICE CARTON.



ALLEGION

© Allegion 2015
Printed in U.S.A.
931208-00 Rev. 06/15-b

DESCRIPTION:



4690 MONITOR STRIKE FOR 5547

VON DUPRIN®

DIRECTION NUMBER:

931208-00

DATE
9-8-89

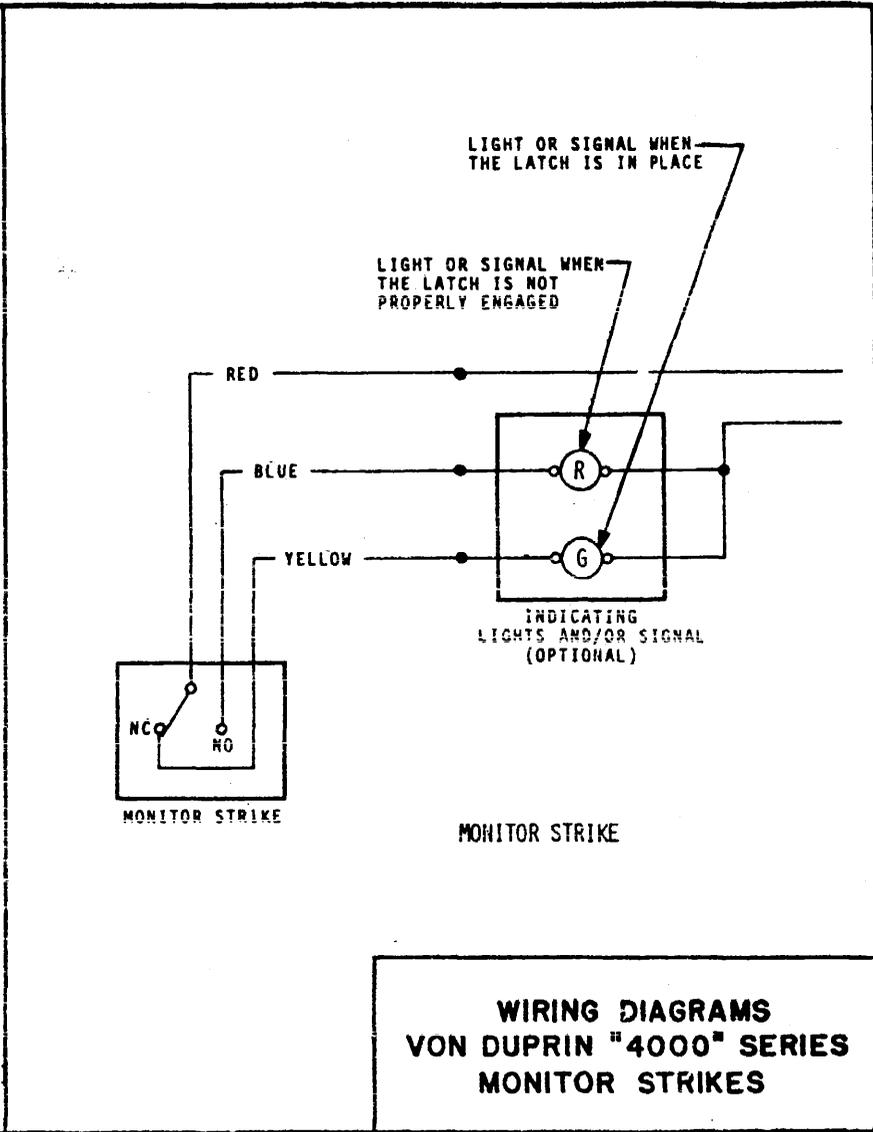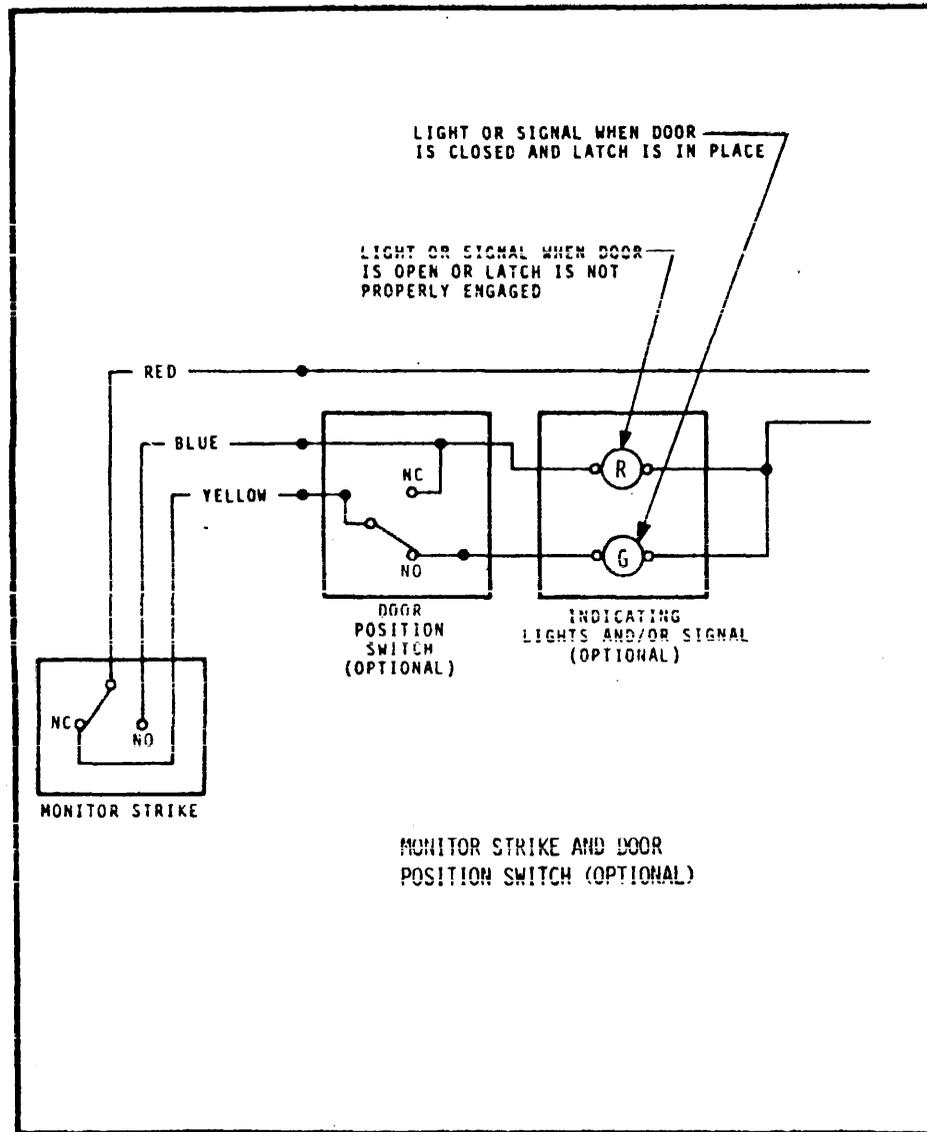

WIRING DIAGRAMS
 VON DUPRIN "4000" SERIES
 MONITOR STRIKES



VON DUPRIN®