


Fax: 866-582-4641

800-232-7329

Rev. G

AR

- 2. INSTALL MOUNTING CLIPS TO JAMB USING 8-32 x 3/8 SCR & PRESSED METAL NUTS. LEAVE SCREWS SLIGHTLY LODSE PERMIT EASY ALIGNMENT OF CASE ASSEMBLY & CLIPS.
- 3 SPACERS ARE PROVIDED TO ASSURE FLUSH FINAL ASSEMBLY FACE PLATE & JAMB. ADD ONE OR MORE SPACERS BETWEEN & MOUNTING CLIP WHEN FACE PLATE EXTENDS BEYOND THE WHEN THE FACE PLATE SETS INSIDE THE JAMB, SPACERS M BE ADDED BETWEEN THE MOUNTING CLIP & THE ELECTRIC S FACE PLATE. SEE DETAIL "A" TO ATTACH SPACER TO MOU CLIP. REMOVE PROTECTIVE COATING FROM SPACER & PRES DESIRED MOUNTING CLIP SURFACE. MAKE SURE CLEARANCE IN SPACER ALIGNS WITH HOLE IN MOUNTING CLIP

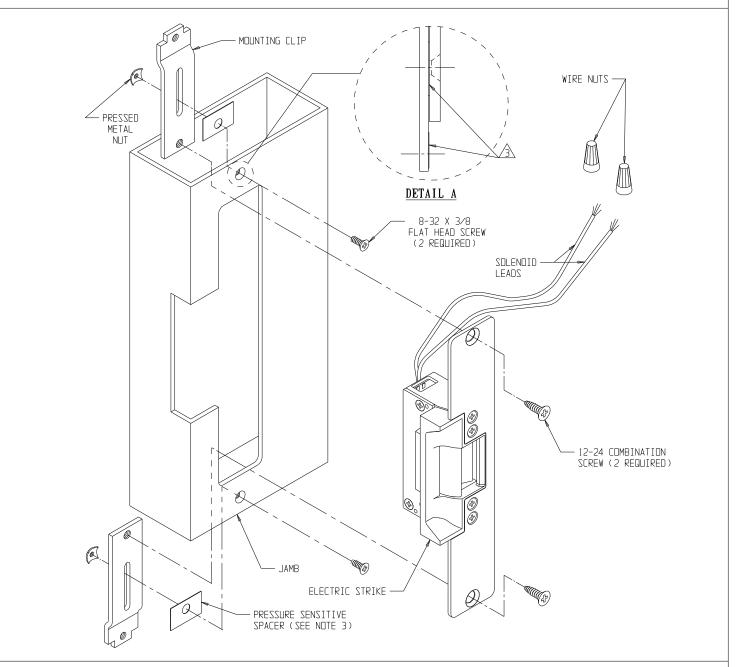

## 7110 ELECTRIC STRIKE FOR ALUMINUM JAMB W/ AR 4500/4700 DEADLATCHES

Ecn 11955D

Page 1 of 2

## INSTALLATION INSTRUCTIONS

REWS To Y DE	4.		R AND FACE PLATE TO FOUR 8-32 X 1/4 SO		
	5.	USING WIRE NUTS PROVIDED, CONNECT WIRES COMING FROM THE STRIKE TO THE WIRES COMING FROM THE LOW VOLTAGE SIDE OF THE TRANSFORMER.			
	6.	INSERT ELECTRIC STRIKE INTO JAMB AND ATTACH TO THE CLIPS USING TWO #12 COMBINATION SCREWS.			
STRIKE JNTING SS TO E HOLE	7. SECURE 8-32 SCREWS HOLDING MOUNTING CLIPS TO JAMB.				
		STATIC STRENGTH	DYNAMIC STRENGTH	ENDURANCE	
		1500 lbs.	70-foot-pound-force	250,000 cycles	
				·	

<sup>1.</sup> PREPARE DOOR JAMB PER DRAWING.

