HORN COVER

ROUTE WIRE HARNESS AS SHOWN

HORN CASE

JACK

PLUG

HARNESS

HORN DEACTIVATION PIN

WIRE HARNESS COLOR CODE
POWER IN
RED + 12-24VDC
BLACK GROUND
FORM "C" CONTACTS
YELLOW N.O.
BLUE COM
GREEN N.C.

ROTATE BATTERY UPWARD
FOR REMOVAL
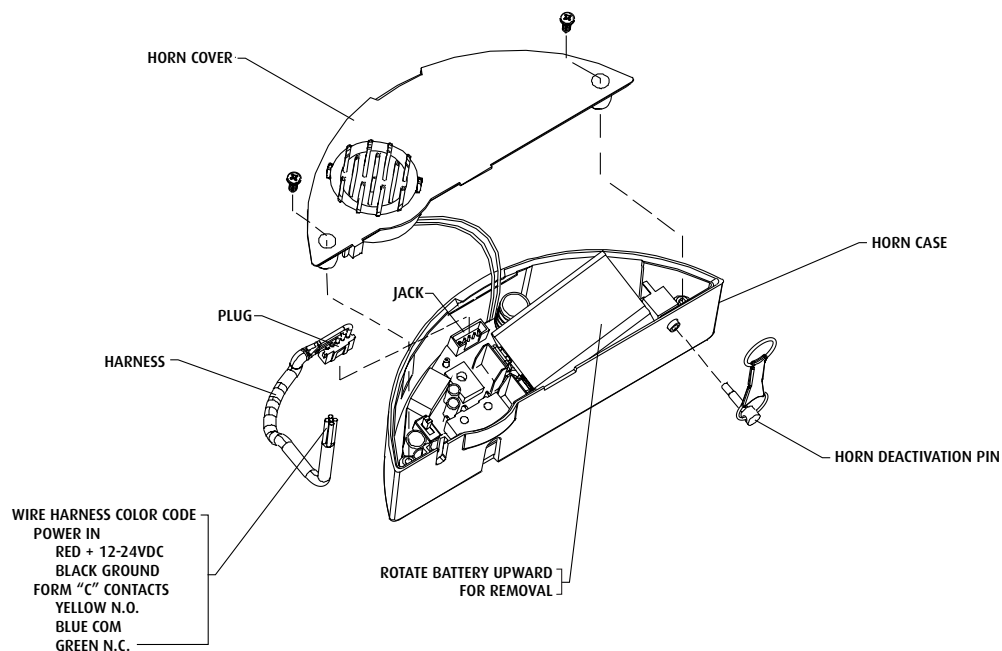
FIG. 1
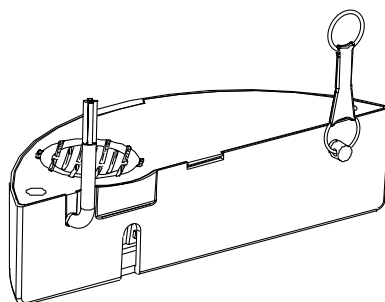
FIG. 2

FIG. 3

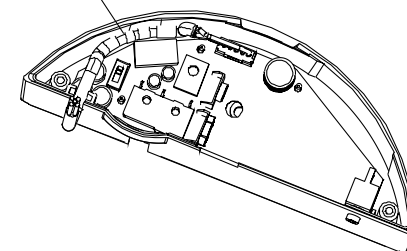## INSTALLATION INSTRUCTIONS

1. Install horn deactivation pin.
2. Remove horn assembly from clear cover.
3. Remove 2 screws in horn assembly and remove horn cover (Fig. 1).
4. Connect wire harness to horn assembly as shown (Fig. 1).
   NOTE The harness plug will only install into jack in one direction.
5. Route harness wires as shown (Fig. 2).
6. Reassemble horn cover (Fig. 3).

Electronic warranty form at www.sti-usa.com/wc14

INSTALLATION OF SUB-319 REMOTE WIRING HARNESS FOR STI-6600 SERIES
All specifications and information shown were current as of publication and are subject to change without notice.

SUB-319IS FEB2009