

## Strike Marking Template Kit




*In or Out... we make it Easy!*

### Parts List:


This kit includes marking templates for the 4, 6, and 7 Series RCI Electric Strikes.

They are designed to work in either right or left hand doors.

Each template is engraved with the Series number. **Care should be taken to choose the correct one.**

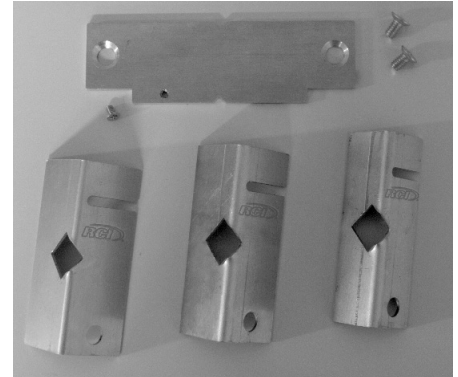


### ANSI Prep Frame

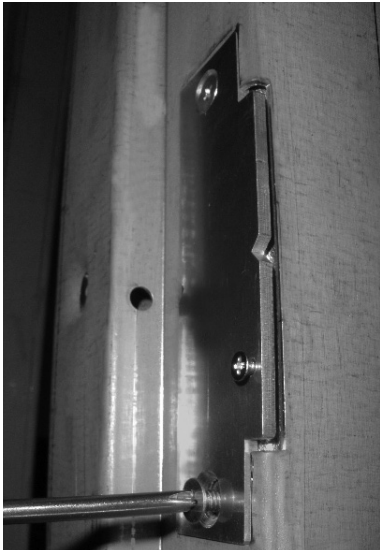

1. Secure the marking faceplate to the door frame.



2. Choose the marking template to match the strike series. Guide the marking template slot over the marking faceplate screw until it is flat and square against the frame. Trace around the marking template as shown.

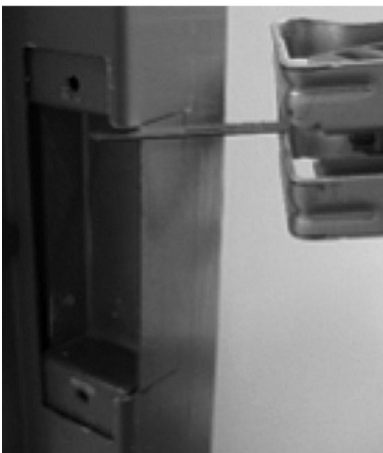

3. Remove the marking template and marking faceplate. Carefully cut the door frame inside the marked lines.



4. Mount the strike and faceplate.

# SMT-01 Installation Instructions (Continued)

## Non - ANSI Prep Frame



1. Mark latch centerline and door vertical centerline (half of door thickness measured from face of the door).  
Align centerline 'V' notch of the marking template with latch centerline and align mounting holes' center with door's vertical centerline.  
Trace around the marking template.



2. Choose the marking template to match the strike series.  
Align centerline 'V' notch of marking template with the marked centerline on the frame.  
Trace around as shown.



3. Carefully cut the door frame inside the marked lines.



4. Follow mounting bracket installation instructions to install mounting brackets.



5. Mount the strike and faceplate.