

PRODUCT MUST BE INSTALLED ACCORDING TO ALL APPLICABLE BUILDING AND LIFE SAFETY CODES

NONE

-01

-02

-03

-04

REF. TEMPLATE NO. : 52150-1

-05

-06

-07

-08

-09

#### www.adamsrite.com Adams Phone: 800-626-7590 800-872-3267

Fax: 866-582-4641

1.06

1.50

1.63

1.75

1.88

# 80-0180-368

2.00

2.13

2.25

2.38

2.50

-10

-11

-12

-13

2.63

2.75


2.88

3.00

# INSTALLATION INSTRUCTIONS

- 1. PREPARE DOOR JAMB PER DRAWING
- 2. ATTACH SUBCOVER AND FACE PLATE TO THE CASE ASSEMBLY USING FOUR 8-32 X 3/8 SCREWS.
- 3. USING WIRE NUTS PROVIDED, CONNECT WIRES FROM SOLENDID TO THE WIRES COMING FROM THE LOW VOLTAGE SIDE OF THE
- 4. INSERT ELECTRIC STRIKE INTO JAMB. ATTACH WITH TWO #12 COMBINATION SCREWS

STATIC STRENGTH	DYNAMIC STRENGTH	ENDURANCE
1500 lbs.	70-foot-pound-force	250,000 cycles

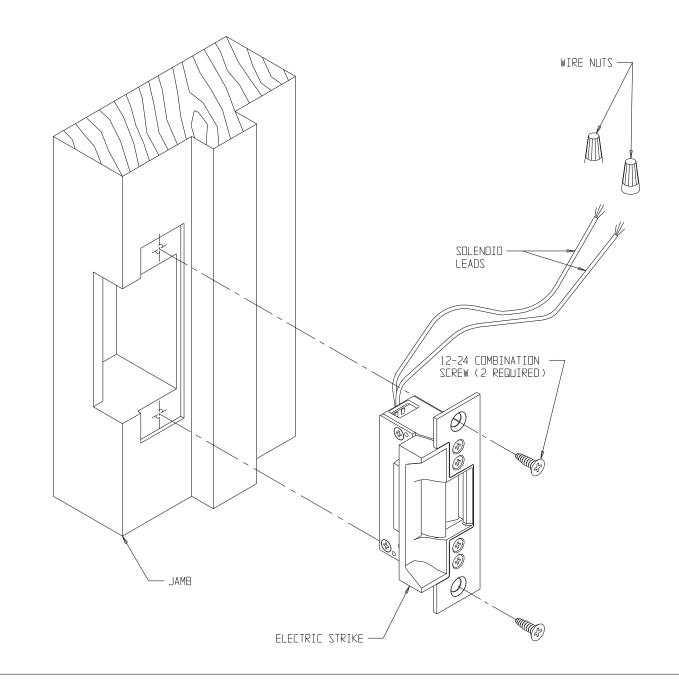

# 7170 ELECTRIC STRIKE FOR WOOD JAMB W/ MORTISE LATCHES

PAGE 1 DF 2 PAGE 2 DF 2 IS 80-0180-381 REV. H

Appvd: MP

Date: 07/20/12

Ecn 11955D Date: 06/29/12

ADJUST STRIKE

LOCATION TO ENSURE COMMON LATCH AND

STRIKE CENTERLINES.

#### Rev. H 800-232-7329

### Notes:

Fail-Secure Operation - <u>Unlocks</u> when energized. If power fails the strike remains in a locked condition.

Fail-Safe Operation - <u>Locks</u> when energized. Used in applications requiring automatic unlocking in case of power failure.

Available Voltages: 12V AC Intermittent duty, 12V AC/DC Continuous duty, 16V AC Intermittent duty, 16V AC/DC Continuous duty, 24V AC Intermittent duty, 24V AC/DC Continuous duty.

## Warning!

AC Intermittent duty solenoids are designed to be energized 30 seconds at a time. Energizing for longer periods will damage the solenoid.

AC Continuous duty strikes are supplied with a A/R # 4603 rectifier attached to the solenoid leads. These are silent operation strikes - without the "buzzing" sound. They use a DC solenoid with an externally attached, full-wave bridge rectifier.

# Wiring

The number of wires will vary depending on features of the strike. The voltage and amperage ratings are marked on all strike labels. The solenoid wires are not polarized.

# Monitoring (Optional)

Monitored strikes contain two, internally mounted, switches: one is activated by the latch bolt's penetration of the strike and the other indicates that the strike jaw is either locked or unlocked by the solenoid.

All unused leads from monitor switches should be insulated.

Common contact -Black Normally open contact (NO) -White Normally closed contact (NC) -Red


Maximum switching current -7 Amps @ 250 VAC


# Warning!

Intermittent duty solenoids should not be converted to fail-safe configuration. Fail-safe units use only continuous duty solenoids.

## Solenoid Data

041/0000017	MANUTE STRIPE ON DI A SIC	444.0	4=0	4=0	4.00	4.00
24 VDC CONT.	WHITE STRIPE ON BLACK	141.6	.170	.170	4.09	4.09
16 VDC CONT.	GREEN STRIPE ON BLACK	61.8	.222	.222	3.05	3.05
12 VDC CONT.	RED STRIPE ON BLACK	34.6	.332	.332	3.81	3.81
24 VAC INT.	RED STRIFE ON BLACK		.744	.431	19.15	6.43
16 VAC INT.	BLUE STRIPE ON BLACK	16.3	1.030	.636	17.30	6.60
12 VAC INT.	YELLOW STRIPE ON BLACK	8.8	1.420	.813	17.74	5.82
DESCRIPTION	WIRE COLOR	COIL RESISTANCE (OHMS ±5%)	PEAK INSTANTANEOUS CURRENT (AMPS)	CONTINUOUS OR HOLD CURRENT (AMPS)	PEAK INSTANTANEOUS POWER (WATTS)	CONTINUOUS OR HOLD POWER (WATTS)

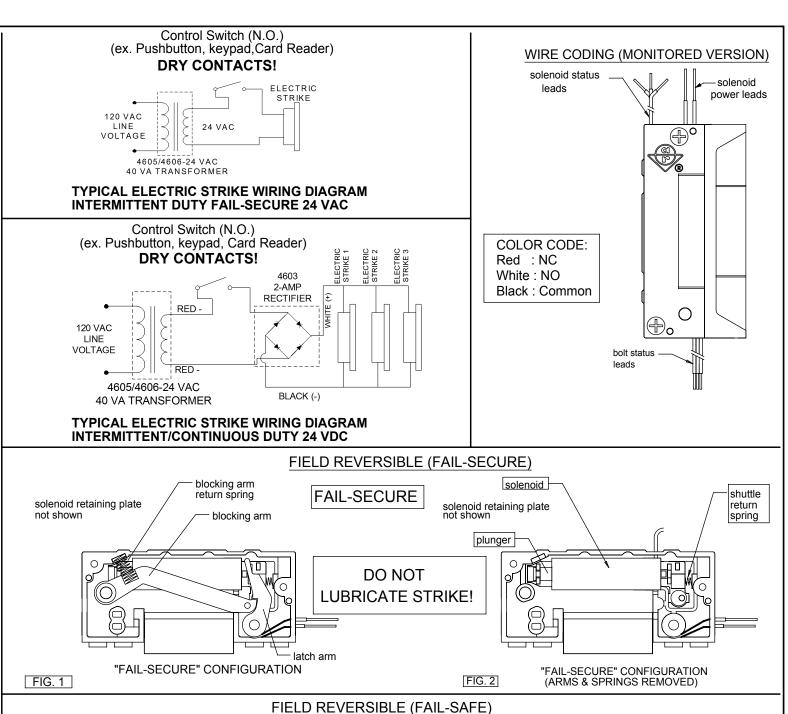

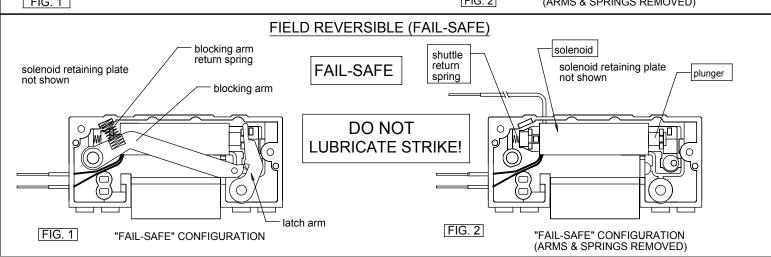



ASSA ABLOY

www.adamsrite.com Phone: 800-626-7590 800-872-3267

Fax: 866-582-4641

7100 SERIES (DATA SHEET WIRE CODING FIELD REVERSIBLE)

80-0180-381

Rev. H

ECN: 11955D

Date: 06/19/12

Page 1 of 1 Appvd: MP Date: 07/20/12