

II-1300-6

INSTALLATION INSTRUCTIONS FOR SERIES 1320 PUSH-BUTTON SWITCH
COVERS THE FOLLOWING MODELS:

- 1320-4 PUSH-BUTTON SWITCH WITH TIME DELAY AND 1 STATUS INDICATOR (RED).

MOUNTS IN A DOUBLE GANG WALL MOUNT ELECTRICAL BOX.
SIZE 4" SQ. X 2 1/8" DEEP. (RACO #680 OR EQUIVALENT)

ELECTRICAL SPECIFICATIONS

- 24 VOLT AC/DC INPUT +/- 10%
- MAXIMUM CONTACT RATING: 10 AMP @ 30VDC (RESISTIVE LOAD)
- LED INDICATOR RATED AT 20ma @ 24VDC

RED LED STATUS INDICATOR

RED LED LEADS ARE IDENTIFIED WITH A RED CABLE TIE.
RED WIRE LEAD IS (+) POSITIVE AND BLACK WIRE LEAD IS (-) NEGATIVE.


ADJUSTING THE TIME DELAY CIRCUIT

- TO INCREASE DELAY TIME, TURN POTENTIOMETER COUNTERCLOCKWISE.
- TO DECREASE DELAY TIME, TURN POTENTIOMETER CLOCKWISE.
- DELAY RANGE: 0 - 40 SECONDS

MOUNTING INSTRUCTIONS

IT MAY BE NECESSARY TO REMOVE THE KNOCKOUT, FACING THE TOGGLE
SWITCH WIRE CONNECTIONS, TO ALLOW FOR MORE DEPTH CLEARANCE.

DO NOT USE GANGABLE SWITCH BOXES WHERE THE FACE PLATE MOUNTING
HOLE TABS FACE OUTWARD FROM THE BOX. THERE WILL NOT BE ENOUGH
HEIGHT CLEARANCE FOR THE P.C. BOARD.

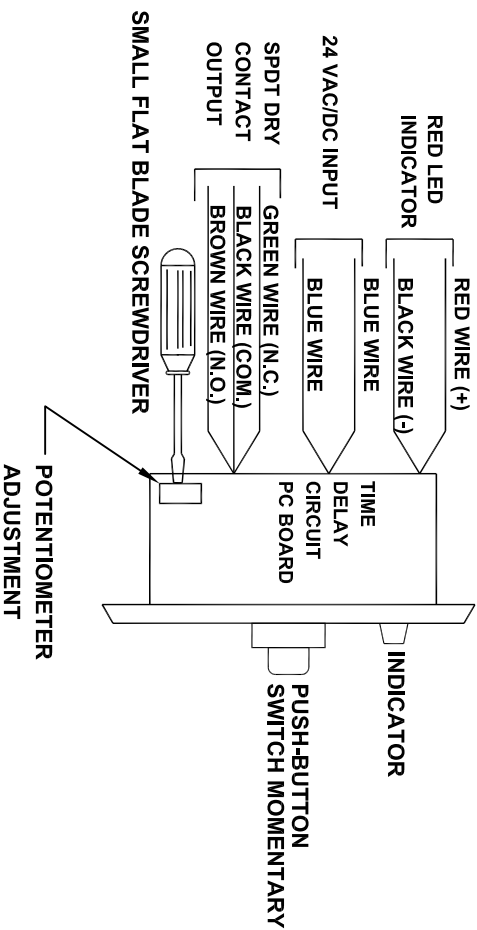

2720 CLARK AVE., ST. LOUIS, MO 63103 (800) 753-5558

REV. 9/13