931204-00

4670

VON DUPRIN

Monitor Strike for Cylinder Lock

Installation Instructions

1. FOR LOCK OR DEVICE PREPARATION SEE DIRECTIONS THAT ACCOMPANY THEM.
2. PREPARE FRAME FOR MONITOR STRIKE AS SHOWN.
3. WIRING AND INSTALLATION OF STRIKE
   A. CONNECT WIRES FROM STRIKE TO LEAD. (SEE WIRING DIAGRAM).
   B. SECURE STRIKE TO FRAME USING THE (2) #8-32 SCREWS IN THE MOUNTING HARDWARE PACKAGE .
4. CHECK OPERATION OF MONITOR STRIKE.

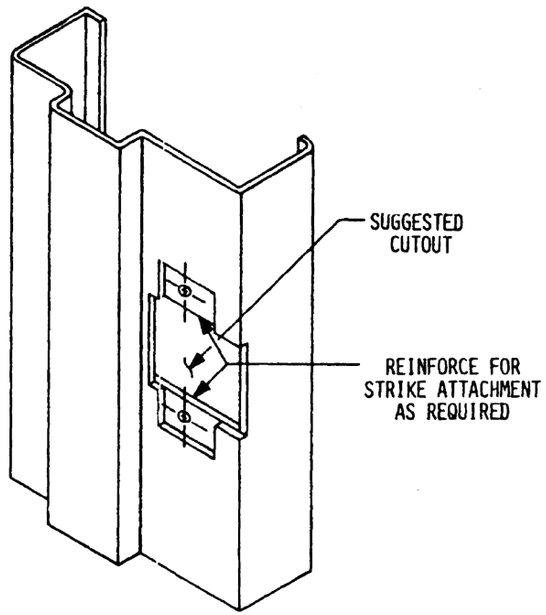

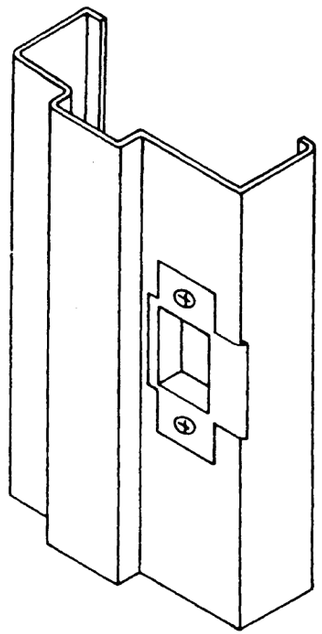

WIRING DIAGRAM

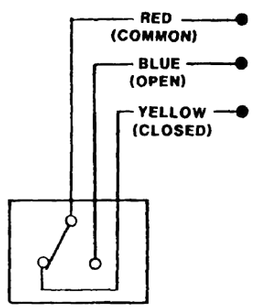

MONITOR STRIKE

NOTE: SWITCH POSITION SHOWN WITH TRIPPER DEPRESSED, IE: LATCH BOLT IN STRIKE.

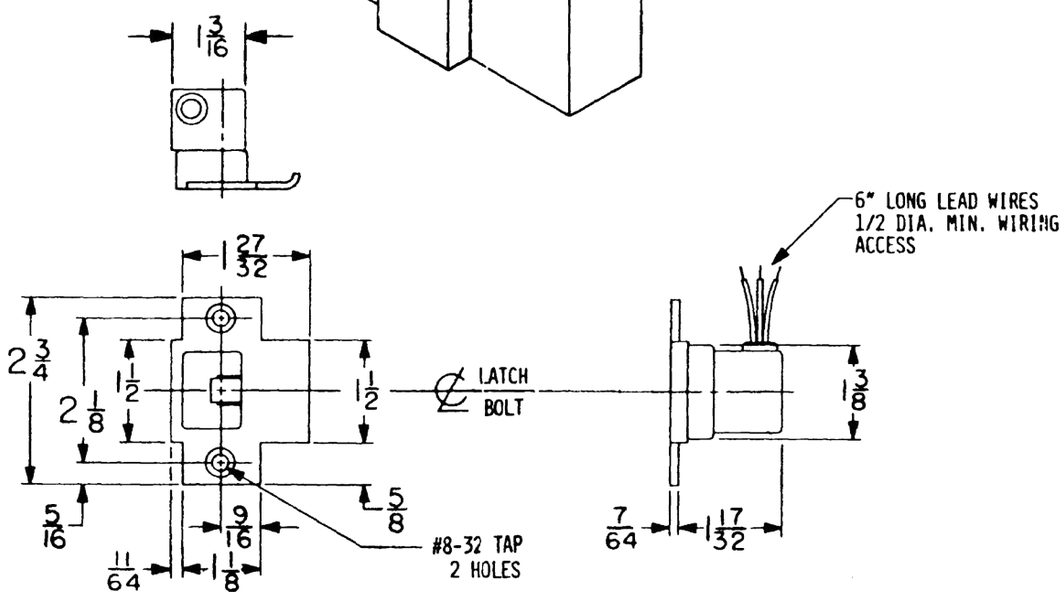

APPLICATION	SCHEDULE	
CORBIN	5/8	CYLIND.
RUSSWIN	5/8	CYLIND.
SCHLAGE	1/2	CYLIND.
SCHLAGE	5/8	CYLIND.
ARROW	1/2	CYLIND.
DEXTER	7/16	CYLIND.
YALE	1/2	CYLIND.
LOCKWOOD	1/2	CYLIND.
FALCON	1/2	CYLIND.
SARGENT	1/2	CYLIND.

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DIRECTIONS IN DEVICE CARTON.

PRINTED ON RECYCLED PAPER

Customer Service
1-877-671-7011 www.allegion.com/us

ALLEGION

© Allegion 2014
Printed in U.S.A.

931204-00 Rev. 01/14-b