



Rack Mount UL Listed Power Supply

Installation Guide

- ***R1224DC16CB***


- 12VDC or 24VDC @ 18 amp total supply current.
- Sixteen (16) PTC Protected Outputs.



Overview:

These Altronix Rack Mount Power Supplies provide 12VDC or 24VDC distributed via sixteen (16) PTC protected Class 2 Rated outputs for power limited installation.

Rack Mount Configuration Reference Chart:

Altronix Model Number	Output Voltage	Total Output Current (Power)	Number of Outputs	Class 2 Rated Power Limited Outputs	PTC Protected Outputs	Output Current (max per output)	115VAC 60Hz Input Current	Agency Listing
R1224DC16CB	12VDC	18 amp	16	✓	✓	2 amp	3.74 amp	 Specialty Power Supply UL1012 CUL Listed - CSA Standard C22.2 No.107.1
	24VDC	18 amp					6.26 amp	

Specifications:

- 115VAC 60Hz input.
- Sixteen (16) PTC protected outputs.
- 18 amp total (current 12 amp max. per output)
- Power LED indicators per group of 4 outputs.
- Filtered and electronically regulated outputs.
- Short circuit and thermal overload protection.
- Illuminated power disconnect circuit breaker with manual reset.
- Removable terminal blocks w/locking screw flange.
- IEC 320 - 3-wire grounded line cord (detachable).
- 3U rack mount chassis for use in standard EIA 19" rack.
- Ease of installation saves time and eliminates costly labor.

Caution: This installation should be made by qualified service personnel and should conform to all local codes and the National Electrical Code.

Installation Instructions:

1. Attach mounting brackets to unit for rack mount installation (*Fig. 1a, pg. 3*). Affix rubber pads to unit for shelf installation (*Fig. 2, pg. 3*).
2. Secure the unit in a rack or place unit on a shelf as desired (unit should be spaced at least 3" from any video monitors). When installing the unit in a rack allow for one half of a U spacing above the unit for ventilation.
3. Insert and secure removable terminal blocks to unit (*Fig. 3c, pg. 4*).
4. Plug the grounded AC line cord (included) into the IEC 320 connector of the R1224DC16CB unit (*Fig. 3a, pg. 4*). Insert the plug end of the line cord into a grounded AC receptacle.
5. Select 12VDC or 24VDC power for each group of four (4) outputs 1a - 1d through 4a-4d with the corresponding voltage selector switches (*Fig. 3b, pg. 4*).
Note: Each voltage selector switch sets the voltage for the entire group of four (4) corresponding outputs.
6. Set illuminated master power disconnect circuit breaker to the (ON) position (*Fig. 3d, pg. 4*).
7. Measure output voltage before connecting devices. This helps avoid potential damage.
8. Set illuminated master power disconnect circuit breaker to the (OFF) position (*Fig. 3d, pg. 4*).
9. Connect the power output of terminals marked [+ 1A -] to the power inputs of device (*Fig. 3c, pg. 4*). Repeat this step for the other remaining power outputs.
10. Upon completion of wiring, set illuminated master power disconnect circuit breaker to the ON (RESET) position (*Fig. 3d, pg. 4*).
11. All four (4) power LEDs on the faceplate will illuminate when AC power is present (*Fig. 1a, pg. 4*).
Note: If the power LEDs are not illuminated the cause may be due to the following:
 - a. AC mains fail.
 - b. Illuminated master power disconnect circuit breaker is OFF or tripped.
If one (1) or more power output PTCs are tripped due to a short circuit or overload condition follow the steps below to reset PTC:

1. Set illuminated master power disconnect circuit breaker to the (OFF) position (*Fig. 3d, pg. 4*).
2. Eliminate the trouble condition (short circuit or overload).
3. Allow 1 minute for PTC to cool off (reset).
4. Set illuminated master power disconnect circuit breaker to the (ON) position (*Fig. 3d, pg. 4*).
5. All power LEDs will illuminate (*Fig. 3, pg. 4*).



WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

Mounting Options:

Rack Mount Installation

- 1- Install mounting brackets (A) on the left and right side of rack chassis using the two (2) flat head screws (B) (included) (*Fig. 1a*).
- 3- Place unit into desired EIA 19" rack position and secure with mounting screws (*not included*) (*Fig. 1b*).


Fig. 1

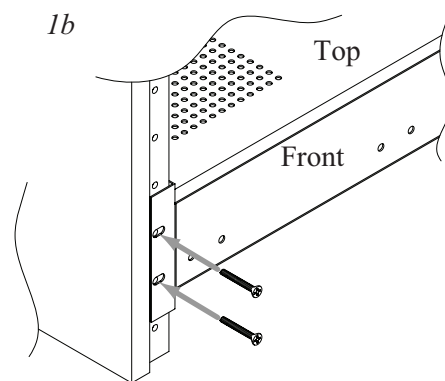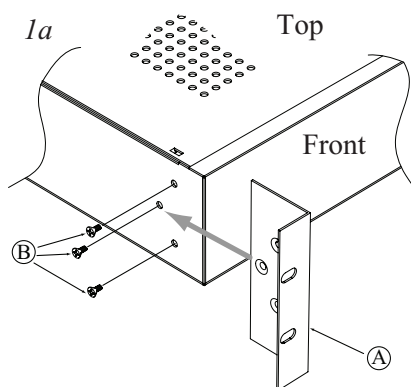





Shelf Installation

- 1- Position and affix rubber pads (C) (included) at each corner on the bottom of the unit (*Fig. 2*).
- 2- Place unit in desired location.

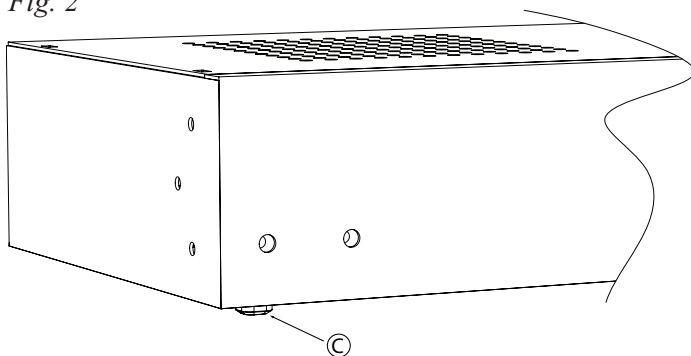Fig. 2



Mounting Hardware (Included):	
	Ⓐ Two (2) mounting brackets
 	Ⓑ Six (6) flat head screws for mounting brackets.
	Ⓒ Four (4) rubber pads.



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated “DANGEROUS VOLTAGE” within the products enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

Rack Mechanical Drawing and Dimensions:

5.21"H x 19"W x 8.5"D

Fig. 3

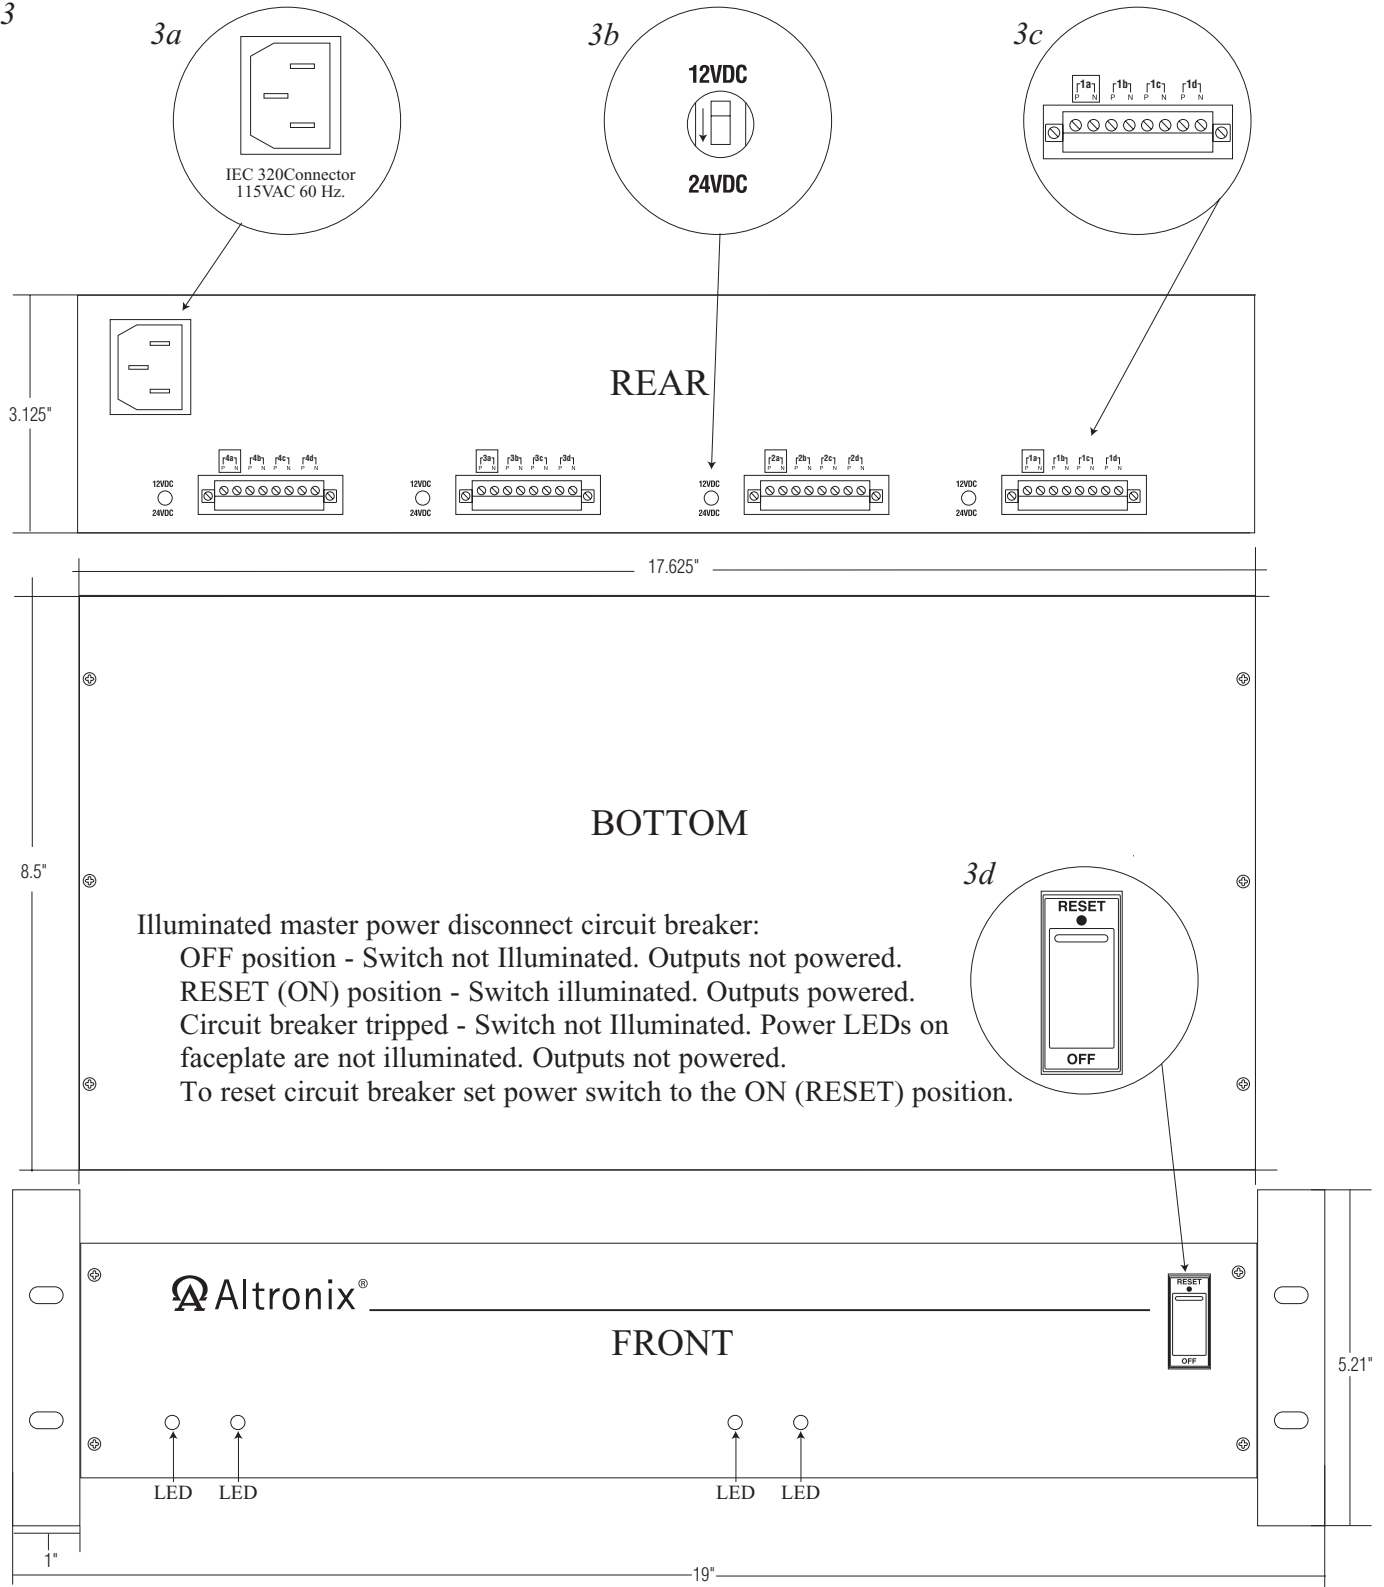

Altronix is not responsible for any typographical errors.

Altronix Corp.
 140 58th Street, Brooklyn, New York 11220 USA, 718-567-8181, fax: 718-567-9056
 web site: www.altronix.com, e-mail: info@altronix.com, Lifetime Warranty, Made in U.S.A.
 IIR1224DC16CB Series H21K

