1600BC/1601 SERIES Aluminum Storefront Door Closers



Norton[®]
ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

1600BC

Χ

1601

Χ

1601BF

Χ

Features

Sized springs 2,3,4,5,6

with no power adjustment

Adjustable spring sizes

Adjustable spring sizes

3 through 6

1 through 4



INTRODUCTION

Features

- Exceeds 10 million cycles (witnessed and verified by UL)
- Non-handed
- Rack-and-pinion design
- Cast aluminum body
- 2-7/8" (73mm) projection
- 1-3/8" (35mm) diameter piston
- 5/8" (16mm) diameter pinion journals
- Standard, separate and independent, latch, sweep and backcheck intensity valves
- Tri-Style® packaging (regular arm, top jamb and parallel arm mounting)
- All standard arm applications allow doors to swing 180°, conditions permitting
- Staked valves
- 15-year limited warranty

Optional Features

- Delayed action (in lieu of backcheck). Specify 1601DA or 1601BFDA
- Corrosion-resistant model (non-hold open only). Specify 1601SS or 1601BFSS. (Not tri-packed)
- Molded plastic cover. Specify suffix P
- Heavy-duty arms: Parallel Rigid, CloserPlus®, CloserPlus Spring™, and Unitrol®

Complicance Standards

- ANSI/BHMA A156.4, Grade 1 certified **BHMA**


- UL listed
- UL10C compliant for positive pressure
- A.D.A. compliant (1601BF)

TABLE OF CONTENTS

Overview	2-3
How to Order	4
Fasteners/Finishes	5
Features	
Optional Features	6-7
Suggested Specifications	8
Applications	9-11
Technical Details	12-19
Accessories	
Parts List	27-36



OVERVIEW

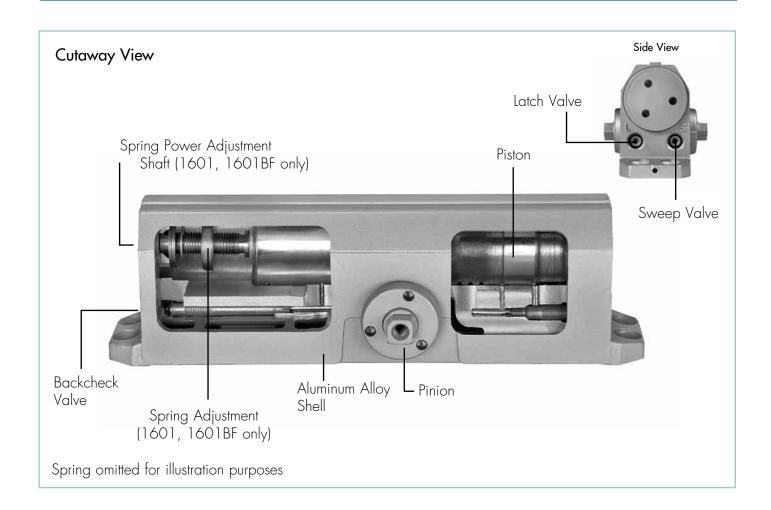

COMPLIANCE STANDARDS

The series 1601BF door closers are designed to comply with requirements of the Americans with Disabilities Act (A.D.A.) and ANSI standard A117.1. All series 1600BC/1601(BF) are ANSI/BHMA A156.4, Grade 1 certified. **BHMA** All Norton series 1600BC/1601(BF) closers with non-hold open arms are listed by Underwriters' Laboratories for labeled fire doors. This includes compliance to UL10C for 3-hour assemblies. These products are manufactured in a certified ISO 9001 facility. These closers are also listed by New York City Materials and Equipment Acceptance Division.


CAUTION: Door Closers for Low Opening Force Applications:

Door closers installed in openings required to meet the requirements of the Americans with Disabilities Act or ANSI Standard A117.1, when adjusted to meet those requirements, may not provide adequate closing power to dependably close and latch the door.



HOW TO ORDER

For optimum protection of door and frame assemblies, always use auxiliary wall, floor, or overhead door stop.

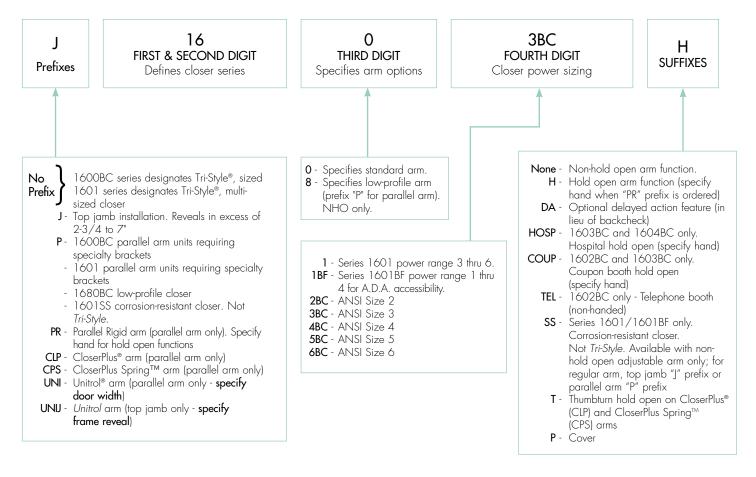

Notes:

- Door closer warranty becomes void if it is installed on the exterior side of a door in the exterior wall of a building.
- It is strongly recommended, and it is required on fire door assemblies, that doors having a door closer be hung on ball bearing or anti-friction hinges or pivots.
- Failure to use the correct type and size fasteners may void factory warranty.
- Fasteners for fire/smoke door assemblies must conform to NFPA 80. In some applications additional fasteners may be mandated by NFPA 80 that are not shipped with standard *Norton* product, such as sleeve-nuts/sex-nuts or thru bolts and grommet nuts.
- Optional Torx® drive screws (with security pin) are only available with machine screw threads.
- Sizing charts provided on pages 12-19 are based on 1-3/4" (44mm) x 7' (2.13m) standard weight doors swinging to 110 degrees. Other conditions (such as door height or weight; or wind/draft conditions) may require a larger size closer.

1600BC/1601 SERIES ALUMINUM STOREFRONT DOOR CLOSERS



FASTENERS

т	Type Description				Arm	l			
Туре	Description	RA	RA PA TJ Low Pro				CLP/CPS	UNI	UNI-J
	DOOR								
SDST	Self-Drilling Self-Tapping	S	S	S	S	S	S	S	S
MS	Machine Screw	S	S	S	S	S	S	S	S
SN	Sleeve Nut	0	0	0	0	S	S	S	S
TBGN	Thru Bolts & Grommet Nuts	0	0	0	0	0	0	0	0
SMS	Sheet Metal Screws	0	0	0	0	0	0	0	0
				FRAME					
SDST	Self-Drilling Self-Tapping	S	S	S	S	S	S	S	S
MS	Machine Screw	S	S	S	S	S	S	S	S
SMS	Sheet Metal Screws	0	0	0	0	0	0	0	0

S = standard; O = optional

SN are for use on unreinforced hollow metal doors or to prevent any hollow metal door from collapse/dimpling. They can also be used for thru bolting on wood doors. SN are supplied for 1-3/4" (44mm) thick doors unless specified for 2-1/4" (57mm) thick doors.

TBGN are an alternative to SN for wood doors. TBGN are supplied standard for 1-3/4" (44mm) thick doors. They can be specified for 1-3/8" (35mm) thick doors.

SMS - when specified, closer will be packed with sheet metal screws for the door AND sheet metal screws plus machine screws for the frame. SMS are supplied as a substitute for wood doors and frames.

FINISHES

All door closers are painted in water-borne acrylics. All steel parts, arms, brackets and mounting plates are powder coated. The closers will withstand 100 hours of salt spray. ANSI requires 25 hours.

Sprayed Finishes

Description	Specify (BHMA) Designation	Complements the following finishes	Old Designation
Aluminum	689	628, 625, 629, 630, 651, 652	AL
Statuary Bronze	690	640, 613	STAT
Dull Bronze	691	612, 637, 639	DB
Black	693	315	315
Medium Amber	694	312	312
Gold	696	605, 606, 632, 633	GB
Prime Coat*	600	_	SRI*

^{*600} is a special rust-inhibiting prime coat. Closers can be ordered prime coat only (specify closer x 600). An additional charge applies if finish coat is required over prime coat (ex: 1605BC x 600 x 689).



FEATURES

Aluminum Alloy Housing

Closer bodies are constructed of a special aluminum alloy, carefully selected to accommodate interaction with steel components and operating conditions.

Rack & Pinion Operation

Provides a smooth constant control of the door through its full opening and closing cycle. 180° door swing can be achieved when door, frame, hardware and arm function do not limit door swing.

Non-Handed

With few exceptions all series 1600BC and series 1601 door closers are non-handed and can be installed on either right- or left- hand swing doors. Pinion shaft extends vertically through the closer body in both directions. Some options (such as Parallel Rigid hold open arms) will require that the hand of the closer be specified.

Tri-Style®

1600BC/1601(BF) closers come with screws, brackets & soffit plate to allow for regular, top jamb, & parallel arm installations.

Sweep Speed Control Valve

Allows adjustment of door speed from the door's full open position down to approximately 10° from the closed position.

Latch Speed Control Value

Allows adjustment of door speed from approximately 10° down to the door's fully closed position.

Adjustable Backcheck Cushion Valve

Provides control of the door in the opening cycle, beginning at approximately 75° of door opening. It slows/cushions the door opening, when the door is forcibly opened beyond its pre-adjusted opening speed limits.

Warranty

These closers carry a limited 15-year warranty against defects and a limited lifetime warranty on the aluminum housing.

Closer Fluid

NorGlide® door closer fluid is a specially formulated hydraulic fluid that contains lubricity and anti oxidation agents that provide optimum performance and efficiency. This fluid complements the interaction of the door closer's aluminum housing with its steel and zinc components, while maintaining stable viscosity to allow the door closer to perform in temperatures ranging from extremely high to as low as -40° F.

Door Closer Power Options Sized Door Closer: 1600BC

Available in five different power sizes (2, 3, 4, 5 or 6). Outlined in ANSI specification A156.4. Spring power is not adjustable.

Multi-Sized Door Closer: 1601

Adjustable through the power range of sizes 3 through 6. Outlined in ANSI specification A156.4.

Multi-Sized Door Closer: 1601BF

Adjustable through the power range of sizes 1 through 4 to comply with the opening force requirements as outlined in the Americans with Disabilities Act (A.D.A.) and ANSI A117.1 for interior doors.

OPTIONAL FEATURES

Corrosion Resistant Door Closer

The series 1601SS and 1601BFSS door closers are available for use where corrosive conditions exist. This series is provided with zinc diecast adjustment valves, a 440 grade stainless steel pinion shaft, an all-aluminum body and bronze closer arm bushings; all other components and fasteners are of 302/303 grade stainless steel. This product is available for standard regular arm, top jamb and parallel arm, non-hold open, applications only. Not *Tri-Style* packed. "P" or "J" prefix required for parallel arm and top jamb applications.

Optional Molded Cover - 1600P

Molded of high-impact U.L. listed material that covers the entire closer body assembly. This cover is non-handed for regular and parallel arm applications. Suffix "P" to catalog number. Not designed for top jamb applications.






OPTIONAL FEATURES

Adjustable Delayed Action Closing

An optional hydraulic feature, available in lieu of backcheck, adds a third speed range to the closing cycle. This feature becomes effective when the door is opened and released at any point beyond 70°. The amount of time delay depends upon the combination of the angle of door release and valve adjustment. The valve can be adjusted with a 1/8" (3mm) hex key from no delay time up to maximum delay times of:

Door Opened and Released at	Approximate Time of Delay Cycle
180°	4-5 minutes
120°	2-3 minutes
90°	25-30 seconds

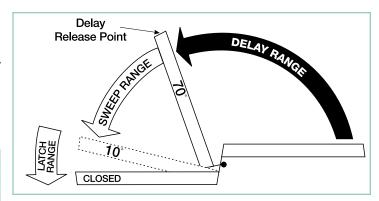

Pressure Relief Safety Valve

The delayed action hydraulic system contains a pressure relief valve. Any time the door is forced toward the closed direction while it is in the closing cycle, the valve will open and permit the door to close. This prevents damage to door, frame and closer.

Suggested Applications

Delayed action closing allows slow-moving traffic to clear the opening before the door closer's normal closing cycle begins. This feature can be helpful in health care facilities such as hospitals and nursing homes. It provides sufficient time for persons on crutches or in wheelchairs to pass through a door without concern of it closing. At the same time, it can accommodate the facility's staff with movement of food service carts, beds, and other wheeled traffic.

Use of delayed action closers on many doors throughout industrial and commercial buildings can also assist the flow of traffic. Locations where additional time to clear the opening is advantageous are doors between office and factory/warehouse facilities, doors to workshops or laboratories, doors to kitchen and food processing areas, etc.

Non-Hold Open

Self-closes door every time door is opened. Auxiliary stop (by others) required except when using the CloserPlus®, CloserPlus Spring™ or Unitrol® Arms.

Hold Open

Achieved by means of friction or ball and detent/roller. Friction hold open has a range of 90° to 180° using template location and mechanical adjustment. Ball and detent or roller hold open is effective in a range of 85° to 110°.

Hold open arm door closers are not permitted to be used on fire door assemblies.

Door Opening Degrees

Arm Function	Regular Arm, Top Jamb Parallel Arm	Parallel Rigid Arm	CloserPlus Parallel Arm	CloserPlus Spring Parallel Arm	<i>Unitrol</i> Parallel Arm	<i>Unitrol</i> Top Jamb	Low Profile Regular, Parallel
Non-Hold Open	1	1	85° to 110°	85° to 110°	85° to 110°	85° to 110°	✓
Hold Open	90° to 180°	85° to 180°	85° to 110°	85° to 110°	85° to 110°	85° to 110°	N/A

√ = 180° trim and template permitting



SERIES 1600BC SPECIAL FUNCTION DOOR CLOSERS

Telephone Booth Operation

Closer holds the door to the telephone booth open at 5° from the closed position. This prevents the light switch from being activated and allows the booth to be ventilated. It also indicates to users that the booth is unoccupied. Available in size 2 only for regular arm or top jamb application only.

Coupon Booth Hold Open

Most commonly used on doors to safe-deposit box inspection cubicles. Closer holds the door to the booth open at 15° to indicate that the booth is available for use by a safe-deposit box renter. When the door is opened beyond 70°, the closer will close the door and engage the lock, providing the occupant with the desired privacy. Available in sizes 2 and 3 only for regular arm, top jamb or parallel arm application. Specify hand.

Hospital Hold Open

Closer will hold door open at approximately 15° for ventilation, 45° for observation and beyond 90° for full access. Closer is supplied with a standard hold open arm for the beyond 90° hold open position. Available in sizes 3 and 4 only for regular arm, top jamb or parallel arm application. Specify hand.

SUGGESTED SPECIFICATIONS

1601 Series

Closers for interior and exterior doors shall be full rack-and-pinion type with cast aluminum alloy shell. Closers shall be surface mounted and shall project no more that 2-7/8" from the surface of the door. Closers shall be non-handed to permit installation on doors of either hand. Closer fluid shall contain lubricity and anti-oxidation agents. Closer fluid shall maintain stable viscosity to allow door closer to perform in temperatures ranging from extremely high to as low as -40°F. Closers shall have multi-size spring power adjustment to permit setting of spring from (1 through 4) or (3 through 6). Closers shall have two non-critical valves, hex key adjusted, to independently regulate sweep and latch speed. Closers shall have adjustable backcheck cushioning controlled by a hex key adjusted valve.

[Closers shall have adjustable delayed-action closing controlled by a hex key adjustable valve.]

[Closer body shall be enclosed in/concealed with a full molded cover.]

[Closers shall be highly corrosion resistant and shall have all external body components of aluminum, zinc alloy or stainless steel material and all stainless steel fasteners.]

Regular arm and top jamb closers shall have a non-hold open shoe permitting 15% (+/-7-1/2%) power adjustment. ** [1601] [1601BF1[1601SS].

**For special arms insert the appropriate specification from column two or three on this page.

1600BC Series

Closers for interior and exterior doors shall be full rack-and-pinion type with cast aluminum alloy shell. Closers shall be surface mounted and shall project no more that 2-7/8" from the surface of the door. Closers shall be non-handed to permit installation of doors of either hand. Closer fluid shall contain lubricity and anti-oxidation agents. Closer fluid shall maintain stable viscosity to allow the door closer to perform in temperatures ranging from extremely high to as low as -40°F. Closers shall be sized for each door. Closers shall have two non-critical valves, hex key adjusted, to independently regulate sweep and latch speed. [Closers shall have adjustable backcheck cushioning controlled by a hex key adjusted valve.]

[Closers shall have adjustable delayed action closing controlled by a hex key adjusted valve.]

Regular arm and top jamb closers shall have a non-hold open shoe permitting 15% (+/-7-1/2%) power adjustment.** [1600BC]. **For special arms insert that specification here (see column three on this page).

**Unitrol® Arm

Door closers shall have built in-door stop [and holder] effective at one point selected at installation, from 85° - 115° in five-degree increments. Door stop shall be cushioned by a shock-absorbing heavy-duty spring action effective at the [soffit plate] [arm shoe] pivot. [Closers shall be provided for parallel arm installation using rigid steel main arm and secondary arm lengths proportional to the door width to reduce racking at the hinge/pivot.] [Closers shall be provided for top

jamb installation using steel, rigid main arm and telescoping secondary arm adequate for the frame reveal of the openings.] (Closer arm shall have ball and detent hold open feature that can be engaged or disengaged by 1/4 turn of mechanism; and hold open strength shall be adjustable.)

**CloserPlus® Arm

Door closers shall have built-in door stop [and holder] effective at one point selected at installation, from 85° - 110° in five-degree increments. Door stop mechanism shall be reversible and attached to soffit plate. [Hold open mechanism shall have engage/disengage and strength selection actuated by thumbturn.] Closers shall be provided for parallel arm installation using rigid steel main and secondary arm.

**CloserPlus Spring™ Arm

Door closers shall have built in door stop [and holder] effective at one point selected at installation, from 85° - 110° in five-degree increments. Door stop mechanism shall have a buffer spring that engages prior to the dead stop feature, reducing shock loads to the door and frame assembly. Door stop mechanism shall be reversible and attached to soffit plate. [Hold open mechanism shall have engage/disengage and strength selection actuated by thumbturn.] Closers shall be provided for parallel installation using rigid steel main and secondary arm.



APPLICATIONS



Non-hold open arm shown

Regular Arm

This is the only pull-side application where a double lever arm is used. It is the most power-efficient application for a door closer. Sufficient frame, door and/or ceiling clearance must be considered.

Since the arm assembly projects directly out from the frame, this application may present an aesthetics issue or be prone to vandalism.




Non-hold open arm shown

Top Jamb

For efficiency reasons this application provides the best alternative to the regular arm application. There must be sufficient frame face and/or ceiling clearance for this application. It requires a top rail on the door of just 2-1/8" (54mm). This application provides the best door control for doors in exterior walls that swing out of a building.

The entire door closer and arm assembly project from the frame, similar to the regular arm application, where the matters of appearance and malicious abuse can be of concern.

Consideration must be given to depth of the frame reveal.

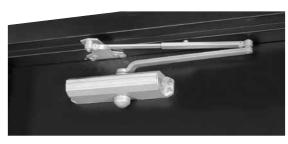

Non-hold open arm shown

Parallel Arm

This application provides the most appealing design appearance for a surface-mounted door closer having a double lever arm. This may also be beneficial in vandalism-prone areas. It is on the push side of the door and the arm assembly extends almost parallel to the door. In the closed position, there is very little or no hardware projecting beyond the frame face in most situations.


Due to the geometry of the arm it is approximately 25% less

power-efficient than a regular arm application.

The entire closer and arm assembly are mounted below the frame stop, requiring a top rail clearance on the door of between 5-3/8" (137mm), when using a low-profile arm (1680 series), to 6-3/8" (162mm), when using the hold open arm.




APPLICATIONS

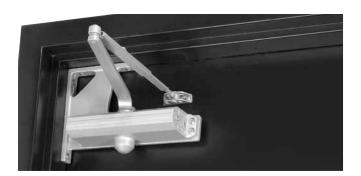

Corner Bracket

This application can be used where top jamb and parallel arm application will not accommodate the door and frame conditions. Requires minimal top rail on the door; however, vertical clearance to the floor within the door opening should be checked to ensure code compliance.

The close proximity, for this application, of the door closer to the door's pivot point reduces the door closer's power efficiency by approximately 25% when compared to a regular arm. The projection of the arm from the door face might pose questions regarding design parameters or environment.

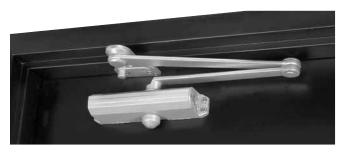

Non-hold open arm shown

CloserPlus® Arm

Similar to the Parallel Rigid arm, this arm incorporates a stop at the arm's soffit plate to dead stop the door at a predetermined degree of door swing between 85° and 110°, in 5° increments. Prior to dead stop the door closer's backcheck feature slows the door speed to reduce the impact of the stop action.

The CloserPlus Arm is intended for use where an auxiliary door stop cannot be utilized and no more than moderate abuse is anticipated. Where more extreme conditions are expected, use of a Unitrol® arm is recommended.

Available with or without hold open. (Hold open tension is adjustable.)



Parallel Rigid Arm

Non-hold open arm shown

An enhanced variation of the standard parallel arm assembly that is intended for use in heavy traffic areas where auxiliary door stops are installed.

Hold open arm available - specify hand when ordering.



Non-hold open arm shown

CloserPlus Spring™ Arm

This heavy-duty stop arm includes all the features of the *CloserPlus* arm, plus an added buffer spring that is compressed prior to the arm hitting the dead stop point. This greatly reduces the shock of the stopping action that occurs with the *CloserPlus* arm.

Thumbturn hold open is available.



APPLICATIONS



Unitrol® Arm

Can be used for either parallel arm or top jamb applications. *Unitrol* arms combine the features of a double lever arm overhead door stop/holder with the backcheck feature of the door closer to reduce door stopping shock loads to a minimum. The *Unitrol* uses a compression spring buffer at the soffit plate/arm shoe that will absorb 30 lbf. of force, 5° prior to the door's dead stop. Coupled with the door closer's backcheck feature, this arm provides the most controlled stop available with a surface door closer.



Top Jamb

For parallel arm applications there are three different length arm assemblies. Each length is designed for a specific range of door widths, to provide precise door control. This further lessens the dead stop impact on the door's hinges/pivots.

Specify depth of reveal when using top jamb mounting.



Regular



Parallel

Regular Arm: Allows closer to be installed where there is as little as 1" (25mm) of frame face or ceiling clearance.


Parallel Arm: Allows closer to be installed 1/2" (13mm) higher up on door than standard parallel arm application. Suffix "P" to the catalog number; i.e., P1680BC, P1681(BF).

Low-Profile Arms

Supplied with 1680BC, 1681(BF) series door closers for non-hold open installations only. Low-profile arms have a reduced height elbow joint and a straight main arm. This enables the door closer to be installed in less vertical space. Non-hold open function only.



REGULAR ARM

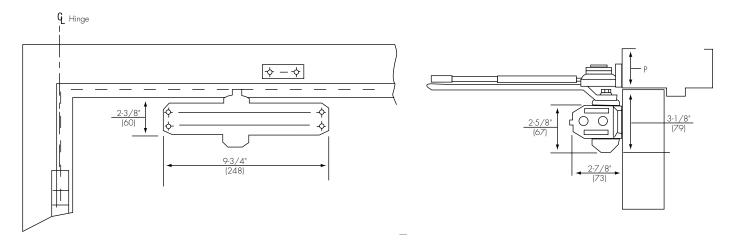

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

Maximum Door Size		Model Number					
Inches (cm)		Sized Cl	osers	Multi-Sized Closers			
Interior	Exterior	Non-Hold Open Hold Open		Non-Hold Open	Hold Open		
32" (81)	_	1602BC	1602BCH		1601H 1601BFH		
38" (97)	30" (76)	1603BC	1603BCH				
42" (107)	36" (91)	1604BC	1604BCH	1601 1601BF			
48" (122)	42" (107)	1605BC	1605BCH				
_	48" (122)	1606BC	1606BCH				

	P Minimum Ceiling Clearance Inches/mm	
Non-Ho	Hold Open	
1600BC/1601	1680BC/1681	1-5/8"
1-1/2" (38)	1" (25)	(41)


Notes:

1601 Door Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.

1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.



TOP JAMB

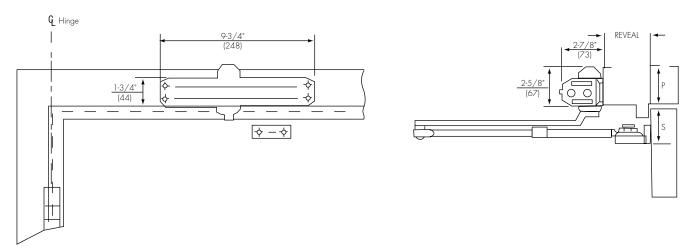

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

Maximum Door Size		Model Number					
Inche	s (cm)	Sized Cl	osers	Multi-Sized Closers			
Interior	Exterior	Non-Hold Open	Hold Open	Non-Hold Open	Hold Open		
32" (81)	_	1602BC J1602BC J1682BC^	1602BCH J1602BCH				
38" (97)	30" (76)	1603BC J1603BC J1683BC^	1603BCH J1603BCH				
42" (107)	36" (91)	1604BC J1604BC J1684BC^	1604BCH J1604BCH	1601 1601BF	1601H 1601BFH		
48" (122)	42" (10 <i>7</i>)	1605BC J1605BC J1685BC^	1605BCH J1605BCH				
_	48" (122)	1606BC J1606BC J1686BC^	1606BCH J1606BCH				

P		S			
Minimum Ceiling Clearance		Minimum Top Rail Clearance			
Without	With	Without	With 1687	With 1688	
Drop Plate	Drop Plate	Drop Plate	Drop Plate	Drop Plate	
1600BC/1601	1600BC/1601 1680BC/1681	1600BC/1601	1600BC/1601	1600BC/1601 1680BC/1681	
2-5/8"	1-3/4"	1-7/8"	2-5/8"	4"	
(67)	(44)	(48)	(67)	(102)	

Notes:

1601 Door Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.


1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.

^Narrow-Profile Arm Closers can only be installed with 1687/1688 drop plate.

Non-Hold Open- Use standard 1600 closer for frame reveals between 0"- to 3" (0-76mm). Use top jamb J1600 closer for frame reveals from 3" to 7" (76 to 178mm). Hold Open Use standard 1600H closer for frame reveals between 0" to 2-3/4" (0-70mm). Use top jamb J1600H closer for frame reveals from 2-3/4" to 6-3/4" (70 to 171mm).



PARALLEL ARM

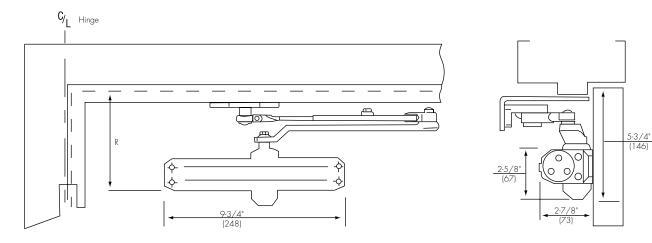

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

Maximum Door Size		Model Number					
	s (cm)	Sized Cl	osers	Multi-Sized Closers			
Interior	Exterior	Non-Hold Open	Hold Open	Non-Hold Open	Hold Open		
30" (76)	_	P1602BC	P1602BCH				
36" (91)	30" (76)	P1603BC	P1603BCH				
42" (107)	36" (91)	P1604BC	P1604BCH	1601 1601BF	1601H 1601BFH		
48" (122)	42" (107)	P1605BC	P1605BCH				
_	48" (122)	P1606BC	P1606BCH				

R Minimum Top Rail of Door with 5/8" (16mm) frame stop Inches/mm					
Without		With			
Drop Plate		Drop Plate			
1600BC	1680BC	1600BC	1680BC		
1601	1681	1601	1681		
5"	4"	3-1/8"	2-1/8"		
(127)	(102)	(79)	(54)		

Notes:


This door sizing information also applies to corner bracket mounted closers.

1601 Door Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.

1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.



PARALLEL RIGID ARM

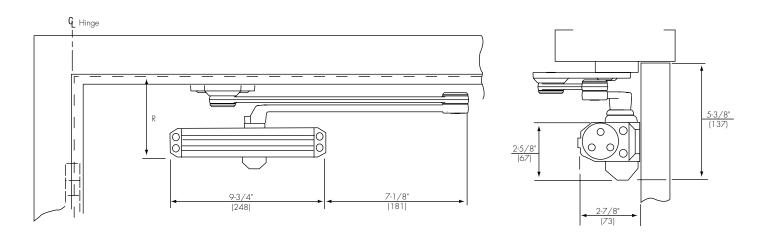

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

	Door Size		Model Number				
Wood or Metal Inches (cm)		Sized (Closers	Multi-Sized Closers			
Interior	Exterior	Non-Hold Open	Hold Open	Non-Hold Open	Hold Open		
28"-32" (71-81)	_	PR1602BC	PR1602BCH		PR1601H PR1601BFH		
33"-36" (84-91)	28"-32" (71-81)	PR1603BC	PR1603BCH				
37"-42" (94-107)	33"-36" (84-91)	PR1604BC	PR1604BCH	PR1601 PR1601BF			
43"-48" (109-122)	37"-42" (94-107)	PR1605BC	PR1605BCH				
_	43"-48" (109-122)	PR1606BC	PR1606BCH				

Notes:


 $1601\ \mbox{Door}$ Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.

1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.

R Minimum Top Rail of Door with 5/8" (16mm) frame stop			
Without	With		
Drop Plate	Drop Plate		
4-1/2"	2-5/8"		
(114)	(67)		



CLOSERPLUS® ARM

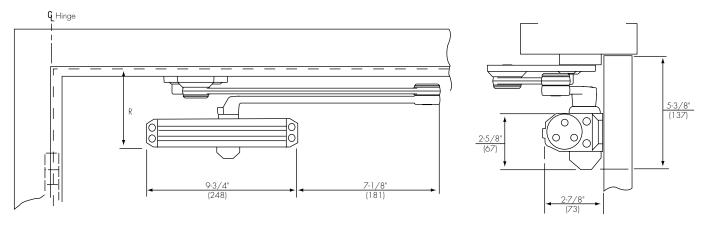

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

	or Size		Model	Number	
	or Metal es (cm)	Sized Closers		Multi-Sized Closers	
Interior	Exterior	Non-Hold Open Hold Open		Non-Hold Open	Hold Open
28"-32" (71-81)	_	CLP1602BC	CLP1602BCT		
33"-36" (84-91)	28"-32" (71-81)	CLP1603BC	CLP1603BCT		
37"-42" (94-107)	33"-36" (84-91)	CLP1604BC	CLP1604BCT	CLP1601 CLP1601BF	CLP1601T CLP1601BFT
43"-48" (109-122)	37"-42" (94-107)	CLP1605BC	CLP1605BCT		
_	43"-48" (109-122)	CLP1606BC	CLP1606BCT		

Notes:


 $1601\ \mbox{Door}$ Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.

1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.

R Minimum Top with 5/8" (16m	Rail of Door m) frame stop
Without	With
Drop Plate	Drop Plate
4-1/2"	2-5/8"
(114)	(67)



CLOSERPLUS SPRINGTM ARM

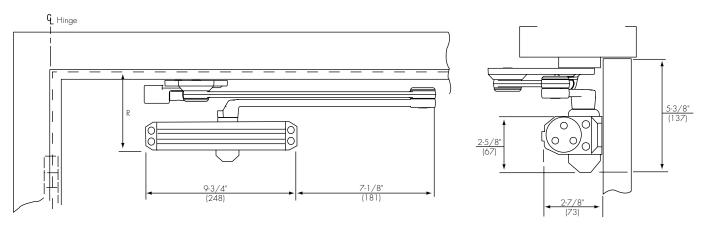

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

	r Size or Metal	Model N		Number		
	or Metal es (cm)			Multi-Sized Closers		
Interior	Exterior	Non-Hold Open Hold Open		Non-Hold Open	Hold Open	
28"-32" (71-81)	_	CPS1602BC	CPS1602BCT			
33"-36" (84-91)	28"-32" (71-81)	CPS1603BC	CPS1603BCT			
37"-42" (94-107)	33"-36" (84-91)	CPS1604BC	CPS1604BCT	CPS1601 CPS1601BF	CPS1601T CPS1601BFT	
43"-48" (109-122)	37"-42" (94-107)	CPS1605BC	CPS1605BCT			
_	43"-48" (109-122)	CPS1606BC	CPS1606BCT			

Notes:


1601 Door Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.


1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.

R Minimum Top with 5/8" (16m	Rail of Door m) frame stop
Without With Drop Plate Drop Plate	
4-1/2" (114)	2-5/8" (67)



PARALLEL UNITROL® ARM

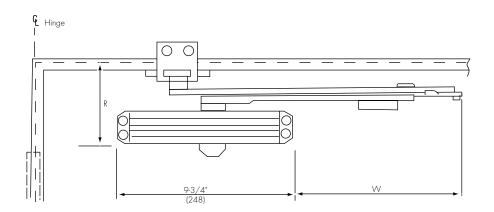

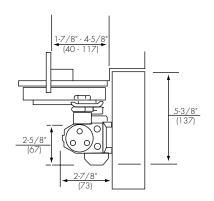

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

Door Width	Minimu	W	
	Without Drop Plate	With Drop Plate	Arm Extension
28"-32" (71-81)	4-1/2" (114)		7" (178)
33"-41" (84- 104)		2-5/8" (67)	8-1/2" (216)
42"-48" (107- 122)			10" (254)

	Size		Model Number				
	Wood or Metal Inches (cm)		Sized Closers		ed Closers		
Interior	Exterior	Non-Hold Open	Hold Open	Non-Hold Open	Hold Open		
28"-32" (71-81)	_	UNI1602BC	UNI1602BCH			x Specify Do	
33"-36" (84-91)	28"-32" (71-81)	UNI1603BC	UNI1603BCH			. Width	
37"-41" (94- 104)	33"-36" (84-91)	UNI1604BC	UNI1604BCH	UNI1601 UNI1601BF	UNI1601H UNI1601BFH		
42"-48" (107-122)	37"-41" (94-104)	UNI1605BC	UNI1605BCH				
_	42"-48" (107-122)	UNI1606BC	UNI1606BCH				


Notes:

1601 Door Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.

1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.



TOP JAMB UNITROL® ARM

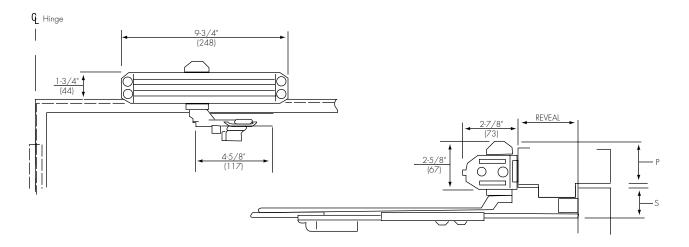

Mounting holes for closer body are spaced 3/4" (19mm) vertically x 9-1/16" (230mm) horizontally.

P Minimum Ceiling Clearance		Minimum Top	S Rail Clearance
Without Drop Plate	With Drop Plate	Without Drop Plate	With Drop Plate
2-5/8" (67)	1-3/4" (44)	2-3/8" (60)	3-1/8° (79)

	or Size or Metal	Model Number				
	or Metal es (cm)	Sized (Closers	Multi-Sized	Closers	
Interior	Exterior	Non-Hold Open	Hold Open	Non-Hold Open	Hold Open	
28-34 (71-86)	_	UNIJ 1602BC	UNIJ 1602BCH			
35-42 (89-107)	28-34 (71-86)	UNIJ1603BC	UNIJ1603BCH			x Specify Frame Reveal
43-48 (109-122)	35-42 (89-107)	UNIJ 1604BC	UNIJ1604BCH	UNIJ 160 1 UNIJ 160 1 BF	UNIJ1601H UNIJ1601BFH	
49-54 (124-13 <i>7</i>)	43-48 (109-122)	UNIJ 1605BC	UNIJ1605BCH			
_	49-54 (124-137)	UNIJ 1606BC	UNIJ1606BCH			

Notes:


 $1601\ \textsc{Door}$ Closers are adjustable for sizes 3 through 6, and are shipped set at size 4.


1601BF Door Closers are adjustable for sizes 1 through 4, shipped set at size 2 and can be adjusted to conform to ADA opening force requirements.




REGULAR ARM


Brackets for Non-Hold Open Arms






Molded/Bull Nose Trim - #2403B Bracket: For use where the door frame has molded or bull nose trim which will not accept a standard non-hold open shoe. The bracket is mortised into the frame rabbet, and projects beyond the face of the frame. It will accommodate a frame rabbet up to 2" (51 mm) deep.






Molded/Bull Nose Trim - #2403-3/4 Bracket: This bracket is similar to-but longer than-the 2403B bracket. It is designed to accommodate frame rabbets from 2" to 2-7/8" (51 to 73mm) deep.

Brackets for Hold Open Arms

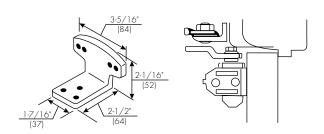

Molded/Bull Nose Trim - #80 Bracket: For use where the door frame has molded or bull nose trim which will not accept a standard hold open shoe. It is mortised into the frame rabbet, and projects beyond the face of the frame. It will accommodate a rabbet up to 2" (51 mm) deep. This bracket is used in combination with the standard hold open mounting shoe.

Corner Brackets for Closer Mounting

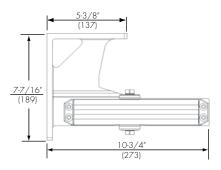


For Closer sizing information, use the Parallel Arm sizing chart on page 14.


Mounting Opposite Hinge Side - #1647 Corner Bracket: For use where it is desired to mount the closer regular arm on the opposite to hinge side of the door. Can also be used to clear an overhead door holder.

TOP JAMB

Closer Mounting Plates




Overhead Door Holder - #1688 Drop Plate: For use where a overhead door holder prevents normal top jamb mounting. This places the center line of the arm mounting screws at 3-1/2" (89mm) from the top of the door.



Low Ceiling Clearance - Overhead Door Holder - #1687 Drop Plate: For use where the ceiling clearance is between 1-3/4" and 2-5/8" (44 and 67mm). Or for use where an overhead door holder prevents normal top jamb mounting. This places the centerline of the arm mounting screws at 2-1/8" (54mm) from the top of door.

PARALLEL ARM

Closer Mounting Plate







Plate No	Dimer	nsions
riate INO.	A (width)	B (length)
1688	3-1/4" (83)	9-3/4" (248)
1688C	4-1/8" (105)	9-7/8" (251)


Note: #1688C - To be used when optional cover is specified.


Narrow Top Rail - #1688 Drop Plate: For use where a narrow top rail prevents the closer from being mounted directly to the door surface. This drop plate can be used to mount a closer on a top rail as narrow as 3-1/8" (79mm) in height for 1600BC or 2-1/8" (54mm) for 1680BC.

Brackets for Non-Hold Open Arms





Standard Installation - #1618A Soffit Plate: This soffit plate is supplied standard with parallel arm closers. It can be mounted where the frame soffit is as narrow as 1" (25 mm). Specify 1618A-SS for stainless steel soffit plate. With Series P1600SS closers, a 1618A-SS soffit plate fabricated of stainless steel is supplied standard.







Narrow Frame/Removable Stop - #2018B Soffit Plate: For use where a narrow frame or frame with removable stop does not permit use of the standard soffit plate. This soffit plate may be mounted on the frame soffit or the frame rabbet where the stop does not exceed 5/8" (16mm) in height. All of the screw holes are in a straight line, requiring as little as 1-1/4" (32mm) of frame reveal to mount bracket and maintain good closer arm geometry. Where the frame soffit is as wide as 2" (51mm), this soffit plate may be used to clear weather-stripping that is up to 1-3/8" (35mm) wide and 5/8" (16mm) in height.



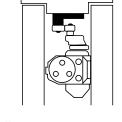

Mounting Between Doors - #2018 Soffit Bracket: For use where insufficient space between companion doors does not permit use of other soffit plates. This bracket permits mounting of the closer between doors with as little as 3" (76mm) of header space. Permits closer arm to clear up to 5/8" (16mm) high stop.






Blade/Applied Stop - #2018D Soffit Plate: For use where a blade or applied stop does not permit installation of the standard soffit plate. Mounts to either the frame soffit or rabbet. Since this soffit plate projects 7/8" (22mm) less than a standard soffit plate, it requires a minimum frame reveal of 1-1/2" (38mm). Permits closer to clear up to a 5/8" (16mm) high frame stop.

21




PARALLEL ARM

Brackets for Non-Hold Open Arms (continued)

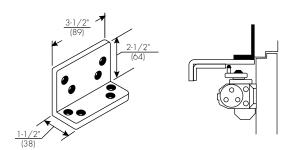


Flush Transom - #2022 Angle Bracket: For use where rabbeted or flush transom conditions prevent installation of a soffit plate. Used in combination with the 1618A soffit plate, or may be used in combination with the 2018S soffit plate when it is necessary for the closer arm to clear a separate overhead door holder.

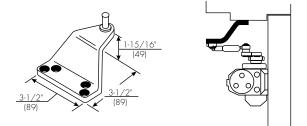


Extra-Clearance - #2018S Offset Soffit Plate: For use where the need for additional clearance prevents use of the standard soffit plate. This plate mounts to the frame soffit to provide up to 2" (51mm) of clearance when a separate overhead door holder is used.

Standard mounting requires a 2-5/8" (67mm) wide frame soffit. It may also be used where unusually high frame stops or weatherstripping prevents the use of other soffit plates.

Brackets for Hold Open Arms

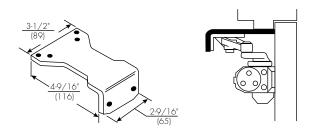


Parallel Hold Open - #1628H Adapter Plate: This Adapter Plate is supplied standard with all parallel arm hold open closers. It can also be used to convert regular arm or top jamb hold open arms to parallel arm installation. It can be mounted where the frame soffit is as narrow as 1" (25mm).

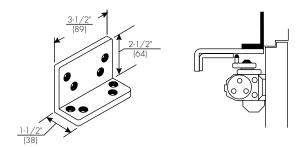

Flush Transom Hold Open - #2022 Angle Bracket: For use where rabbeted or flush transom conditions prevent installation of the standard 1628H hold open adapter plate. It is used in combination with the 1628H adapter plate.

PARALLEL RIGID ARM

Closer Mounting Plate








Plate No.	Dimer	nsions
Plate INo.	A (width)	B (length)
1688	3-1/4 " (83)	9-3/4" (248)
1688C	4-1/8" (105)	9-7/8" (251)


Note: #1688C - To be used when optional cover is specified.


Narrow Top Rail - #1688 Drop Plate: For use where a narrow top rail prevents the closer from being mounted directly to the door surface. This drop plate can be used to mount a closer on a top rail as narrow as 2-5/8" (67mm) in height.

Brackets for Non-Hold Open Arms & Hold Open Arms






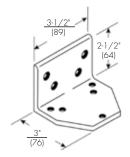


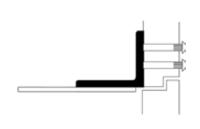


Standard - #2019S Spacer Block: For use where a narrow frame soffit does not provide adequate support for the soffit plate. Supplied as standard with all parallel rigid arm closers. For use on frame with either 1/2" (13mm) or 5/8" (16mm) high frame stop.

Flush Rabbeted Transom - #2019L Angle Bracket: For use where flush transom conditions prevent mounting of the standard soffit plate. This bracket is used in combination with the arm's soffit plate.

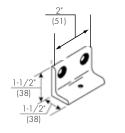





Narrow Frame - #6890 Support Bracket: For use where the frame is narrow and the soffit plate cannot be mounted directly to the frame soffit or rabbet. Used in combination with the #6891 Spacer Block on blade stop frames to provide extra support and needed clearance of the blade stop. Used on frame where frame stop does not exceed 5/8" (16mm) in height.

Clearance/Support Blade Stop - #6891 Spacer Block: For use where the door frame has a blade stop and the soffit plate must be mounted on the frame rabbet. This accessory is used in combination with the standard 2019S Spacer Block to provide clearance of the blade stop. For clearance of 5/8" (16mm) high-frame stop.



CLOSERPLUS® AND CLOSERPLUS SPRING™ ARMS

Closer Mounting Plate





Plate No	Dimensions		
Plate INo.	A (width)	B (length)	
1688	3-1/4" (83)	9-3/4" (248)	
1688C	4-1/8" (105)	9-7/8" (251)	


Note: #1688C - To be used when optional cover is specified.


top rail prevents the closer from being mounted directly to the door surface. This drop plate can be used to mount a closer on a top rail as narrow as 2-5/8" (67mm) in height.

Narrow Top Rail - #1688 Drop Plate: For use where a narrow

Brackets for Non-Hold Open Arms & Hold Open Arms

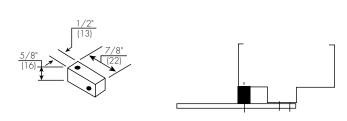


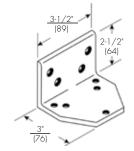




Standard - #2019S Spacer Block: For use where a narrow frame soffit does not provide adequate support for the soffit plate. Supplied as standard with all CloserPlus® arm closers. For use on frame with either 1/2" (13mm) or 5/8" (16mm) high frame stop.

Flush Rabbeted Transom - #2019L Angle Bracket: For use where flush transom conditions prevent mounting of the standard soffit plate. This bracket is used in combination with the arm's soffit plate.

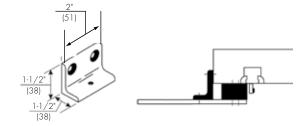

Narrow Frame - #6890 Support Bracket: For use where the frame is narrow and the soffit plate cannot be mounted directly to the frame soffit or rabbet. Used in combination with the #6891 Spacer Block on blade stop frames to provide extra support and needed clearance of the blade stop. Used on frame where frame stop does not exceed 5/8" (16mm) in height.



Clearance/Support Blade Stop - #6891 Spacer Block: For use where the door frame has a blade stop and the soffit plate must be mounted on the frame rabbet. This accessory is used in combination with the standard 2019S Spacer Block to provide clearance of the blade stop. For clearance of 5/8" (16mm) high-frame stop.



UNITROL® ARM

Closer Mounting Plate (for Parallel Arm)






Plate No.	Dimensions		
Plate No. A (width)		B (length)	
1688	3-1/4" (83)	9-3/4" (248)	
1688C	4-1/8" (105)	9-7/8" (251)	

Note: #1688C - To be used when optional cover is specified.





Narrow Top Rail - #1688 Drop Plate: For use where a narrow top rail prevents the closer from being mounted directly to the door surface. This drop plate can be used to mount a closer on a top rail as narrow as 2-5/8" (67mm) in height.

Soffit Plate Reinforcing Brackets (for Parallel Arm)

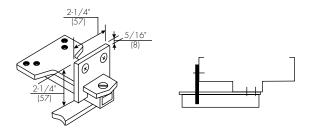


Additional Support - #6190 Reinforcing Bracket: Standard for use with all parallel arm *Unitrol* Door Controls. Provides additional support to the soffit plate on installations with door frame reveals from 1-7/8" to 4-5/8" (48 to 117mm).

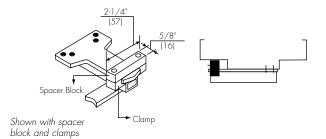

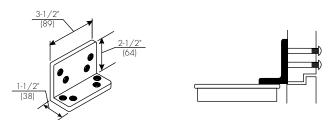


Flush Rabbeted Transom - #2022 Angle Bracket: Optional for use with all parallel arm *Unitrol* Door Controls. For use where rabbeted or flush transom conditions prevent installation of the soffit plate assembly. This bracket fastens to the overhead transom to provide a mounting surface for the soffit plate assembly.



Wide Frame - #6191 Reinforcing Kit: Optional for use with all parallel arm *Unitrol* Door Controls. Used to support the soffit plate on installations with deep frames. Clamps may be used with or without the spacer block, depending on frame conditions.


Closer Mounting Plate (for Top Jamb)




Low Ceiling Clearance - #1687 Drop Plate: For use where the ceiling clearance is between 1-3/4" and 2-5/8" (44 and 67mm). This places the centerline of the arm mounting screws at 2-5/8" (67mm) from the top of door.




SPECIAL ACCESSORIES

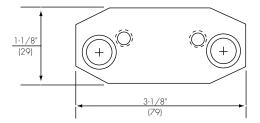

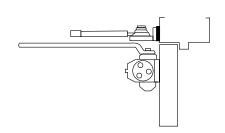


Converting Old Hold Open Installations - #2017 Adapter Plate: For use on old hold open installations with 2-1/2" (64mm) hole spacing on the holder bracket. Plate uses existing holes in either door or frame and accepts the new hold open bracket with 1-3/4" (44mm) hole spacing. For regular arm or top jamb installations.

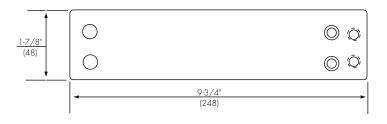

1699 Adapter Plate: Converts old 1602/1603 closer installations with 3/4" (19mm) x 8-3/16" (208mm) - spacing to new 1602, 1603 or 1601BF using existing mounting holes in door or frame.

PARTS

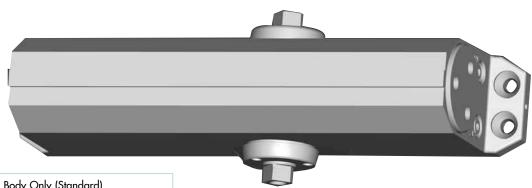


Body Only (Standard)			
160*BCLAP	Sized Closer		
1601LAP	Multi-sized		
1601BFLAP	Barrier Free		
1601SSLAP	Stainless Steel		

Note: Mounting hardware included with all parts orders.



^{*} Specify closer size. Pinion cap and mounting screws supplied.



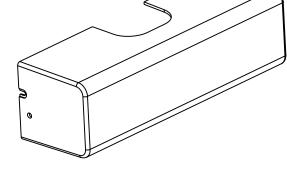


Optional Cover - 1600P


For regular arm and parallel arm applications. 2-7/8" (73mm) height x 3-1/6" (78mm) deep x 9-7/8" (251mm) long. To order with closer use "P" suffix; i.e. 1604BCP.

Steel Door Application
Sex-nut / Sleeve-nut : "SN" (4 per pack) or
Sex-nut / Sleeve-nut & Screw: "SNB" (4 per pack)

Thru Bolt & Grommet Nut : "TBGN" (4 per pack)




Door	SN's	SNB's
1-3/4"	SN-134	SNB134-38
2"	N/A	SNB200-38
2-1/4"	SN-214	SNB214-38
S.S. SNB's 1-3/4"	SN-134SS	SNB134SS-38



Door	TBGN's
1-3/8"	TBGN138-38
1-3/4"	TBGN134-38
2-1/4"	TBGN214-38



NON-HOLD OPEN ARM ASSEMBLY

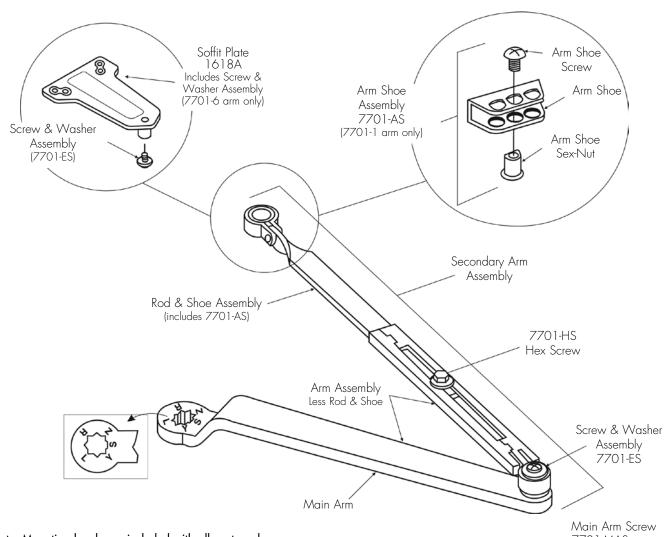

Note: Mounting hardware included with all parts orders.


7701-MAS

Closer Series	Complete Arm Assembly	Main Arm Assembly¹ (length)(mm) (includes 7701-ES)	Secondary Arm Assembly (includes 7701-ES)	Arm Assembly Less Rod and Shoe	Rod & Shoe ² Assembly (length)(mm)
1600BC/1601	7701-1		<i>77</i> 01-111		7701-11 (8-7/8)(225)
J1600BC/J1601	<i>77</i> 01-1A	7701-1M (11)(279)	<i>77</i> 01-121	7701-1W	7701-11A (12-1/2)(318)
P1600BC/P1601	7701-6		<i>77</i> 01-116	7/01-100	7701-16 (8-7/8)(225)
P1600BC/P1601 ³	7701-6A	7701-116A			7701-16A (12-1/2)(318)
1600BC/1601	7701-26 (Tri-Style® includes 7701-1 plus 1618A plate)				

^{3.} For 180° door swing when using a special template for doors hung on 6" to 8" (162 to 203mm) wide



STAINLESS STEEL ARM ASSEMBLIES

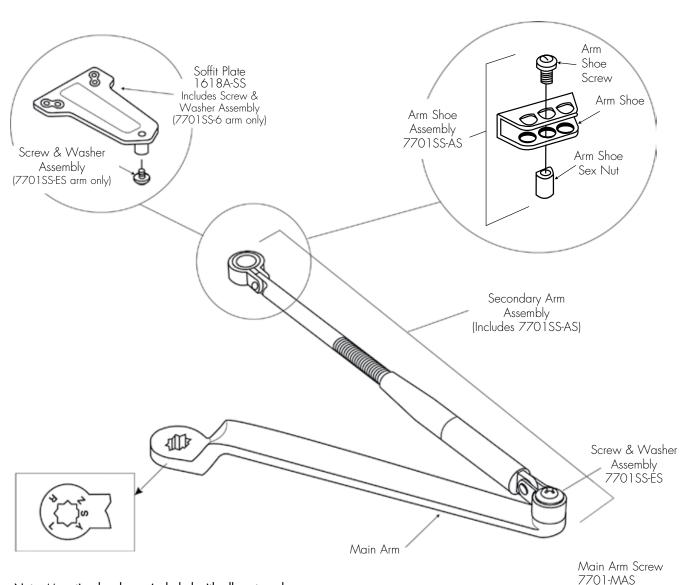


Note: Mounting hardware included with all parts orders.

Closer Series	Complete Arm Assembly	Main Arm Assembly' (length)(mm) (includes 7701SS-ES)	Secondary Arm Assembly (includes 7701SS-ES)
1601SS	<i>77</i> 01SS-1		7701\$\$-111 (8-7/8)(225)
J1601SS	7701SS-1A	7701SS-1M (11) (279)	<i>77</i> 01SS-121 (12-1/2)(318)
P1601SS	7701SS-6		<i>77</i> 01SS-116 (8-7/8)(225)

1. C to C length shown in parentheses.



HOLD OPEN ARM ASSEMBLIES

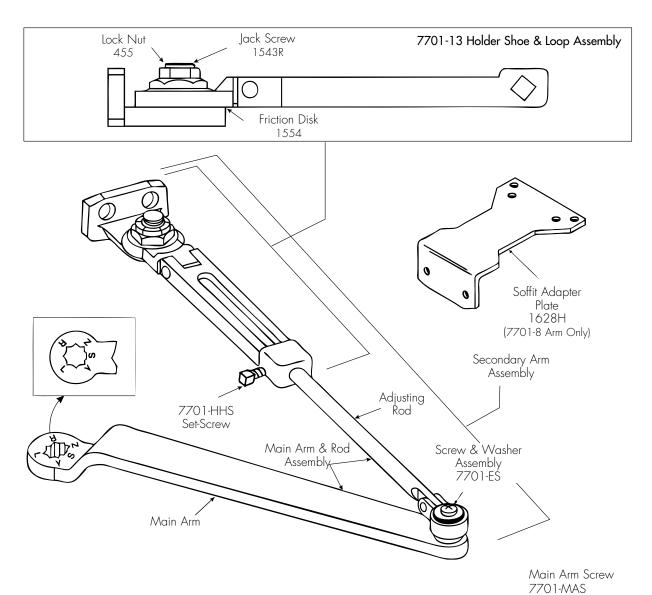


Closer Series Assembly	Complete Arm Assembly	Main Arm¹ (Length)(mm) (includes 7701-ES)	Secondary Arm (includes 7701-ES)	Main Arm & Rod Assembly	Holder Shoe & Loop Assembly	Adjusting Arm² (Length)(mm)
1600BCH/1601H	7701-3/7701-8 ³ Reg./Par.	7701-1M	7701-113/7700-118 Reg./Par.	<i>77</i> 01-3W	7701-13/7701-18 ⁴	7701-31 (7-3/8) (187)
J1600BCH/J1601H	7701-3A	(11) (279)	7701-123	<i>77</i> 01-3WA	Reg./Par.	7701-31A (10-13/16) (275)

- 1. C to C length shown in parentheses.
- 2. C of connecting link to end of rod shown in parentheses.
- 3. Same as 7701-3 but includes #1628H soffit adapter plate.
- 4. Same as 7701-13 but includes #1628H soffit adapter plate.



PARALLEL RIGID ARM ASSEMBLIES

Non-Hold Open Arm

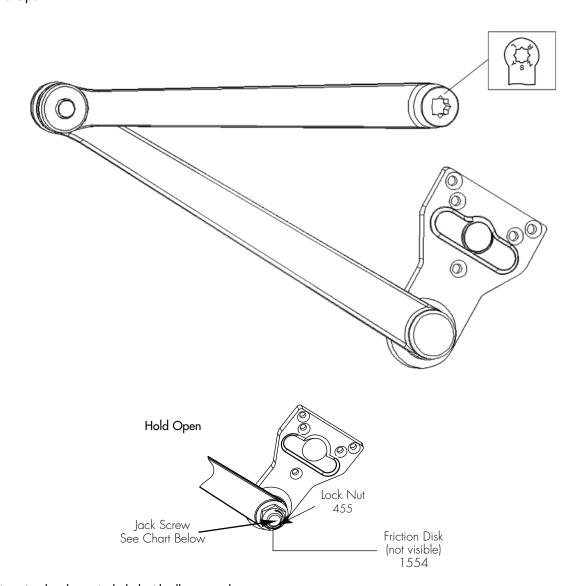


Arm Function	Complete Arm Assembly	Jack Screw
Non-Hold Open	PR7701-5	N/A
H-H-O	PR7701-8R (right hand)	1543R
Hold Open	PR7701-8L (left hand)	1543L



CLOSERPLUS® ARM ASSEMBLIES


Hold Open Arm shown (CLP-T)

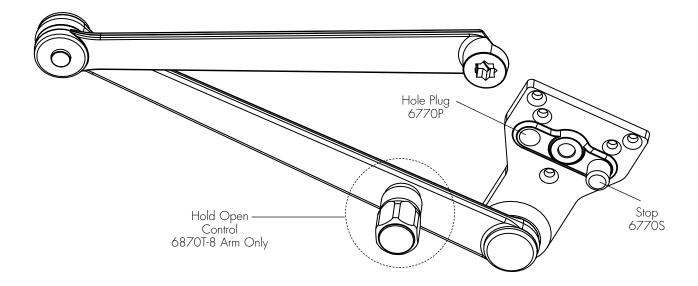

Arm Function	Complete Arm
Non-Hold Open	6770-5
Thumbturn Hold Open	6870T-8



CLOSERPLUS SPRING™ ARM ASSEMBLIES

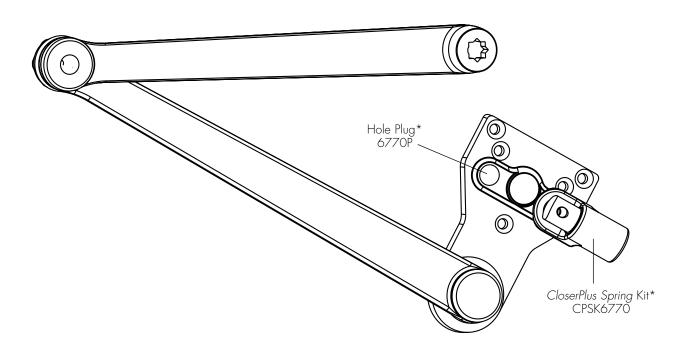


Arm Function	Complete Arm Package
Non-Hold Open	CPS6770-5
Thumbturn Hold Open	CPS6870T-8

^{*} These parts and screw pack are included with complete arm assemblies.



LOW PROFILE ARM ASSEMBLIES

Non-Hold Open Arm shown

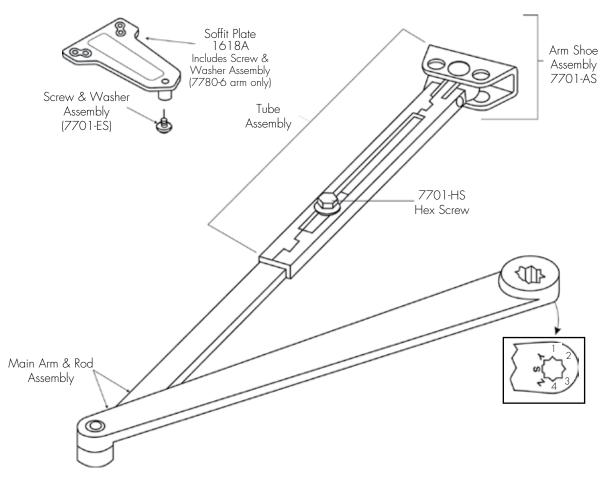


Hold Open Set Screw 7701-HSS

Arm Application	Complete Arm Assembly	Main Arm & Adjusting Rod Assembly	Tube & Shoe/Soffit Rod Assembly
Regular Arm	7780-1		7780-1TS (with 7701-AS)
Parallel Arm	7780-6	7780-1MR	7700 (TC / 1/ 1/ 10 A)
Tri-Style®	7780-26		7780-6TS (with 1618A)



UNITROL® ARM ASSEMBLIES

Parallel Arm

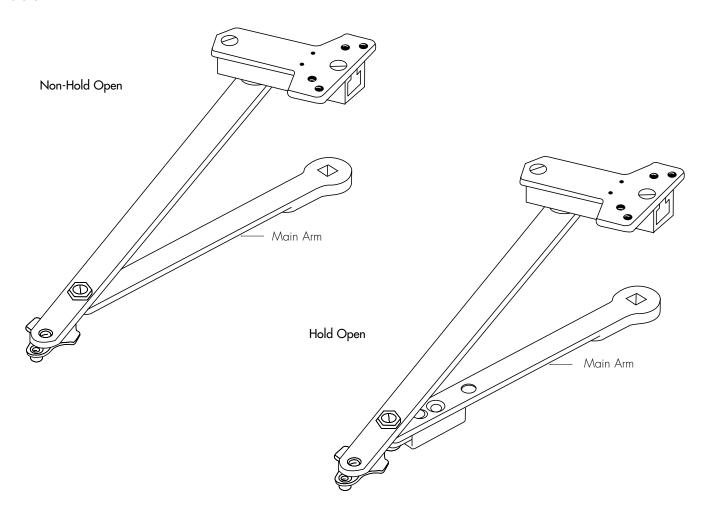


Complete Arm Assembly			
Door Width (cm)	Main Arm Length* (mm)	Non-Hold Open	Hold Open
28" - 32" (71- 81)	9-1/2" (241)	6100-11	6100-1
33"- 41" (84 - 104)	11" (279)	6100-13	6100-3
42" - 48" (107 - 122)	12-1/2" (318)	6100-14	6100-4

^{*} Center to center length.



UNITROL® ARM ASSEMBLIES

Top Jamb

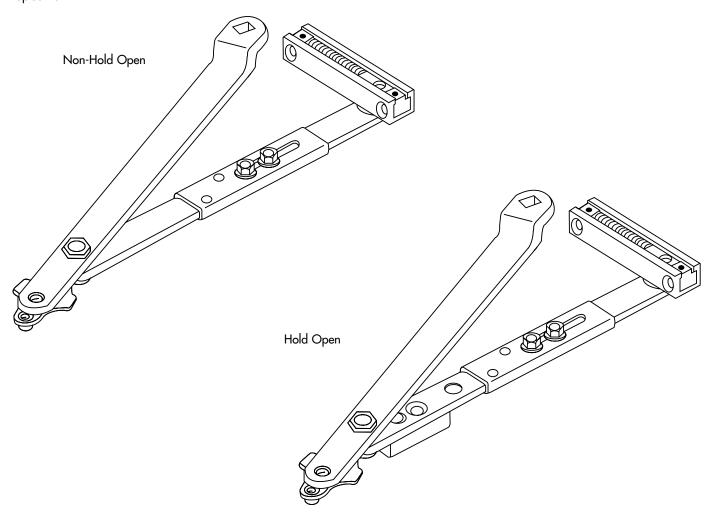

Non-Hold Open	Hold Open	For Frame Reveals (mm)
J6100-4	J6100-7	2-1/8" - 3-1/4" (54 - 83)
J6200-4	J6200-7	1/2" - 2" (13 - 51)
J6400-4	J6400-7	3-3/8" - 4-1/4" (86 - 108)
J6500-41	J6500-71	4-3/8" - <i>5</i> -3/8" (111 - 13 <i>7</i>)
J6500-42	J6500-72	5-1/2" - 6-3/8" (140 - 162)
J6500-43	J6500-73	6-1/2" - 7-3/8" (165 - 187)
J6600-4	J6600-7	0 - 3/8" (0 - 10)

1600BC/1601 SERIES ALUMINUM STOREFRONT DOOR CLOSERS



NOTES



1600BC/1601 SERIES ALUMINUM STOREFRONT DOOR CLOSERS

CONTACT US AT:

Norton Door Controls 3000 Highway 74 East Monroe, NC 28112 Tel: 877-974-2255 Fax: 800-338-0965

ABLOY Door Security Solutions Canada 160 Four Valley Drive

Vaughan, Ontario, L4K 4T9 Canada

Tel: 800-461-3007 Fax: 905-738-2478

For a complete listing of products and applications please visit our web site. www.nortondoorcontrols.com www.assaabloy.ca

Norton®, Unitrol®, CloserPlus®, NorGlide® and Tri-Style® are registered trademarks of Yale Security Inc., an ASSA ABLOY Group company. CloserPlus Spring™ is a trademark of Yale Security Inc., an ASSA ABLOY Group company. Other products' brand names may be trademarks or registered trademarks of their respective owners and are mentioned for reference purposes only. These materials are protected under U.S. copyright laws. All contents current at time of publication. Copyright © 2002, 2012, Yale Security Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.