



External Call Annunciation with IER-2

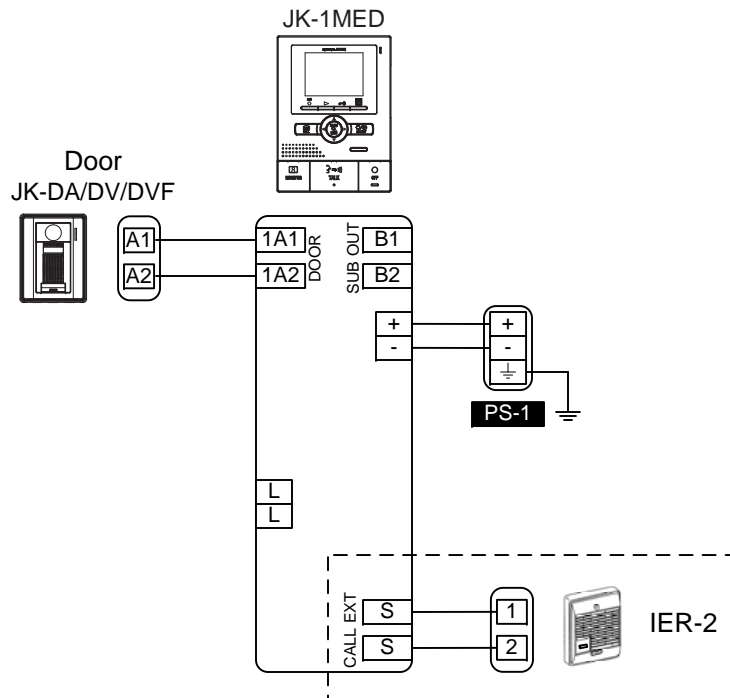

NOTES:

1. IER-2 will annunciate with the same tone as JK-1MED Master station.
2. A maximum of (2) IER-2 may be used in parallel.
3. All other connections typical per QuikDraw diagram issued, main page.

External Signaling with RY-ES

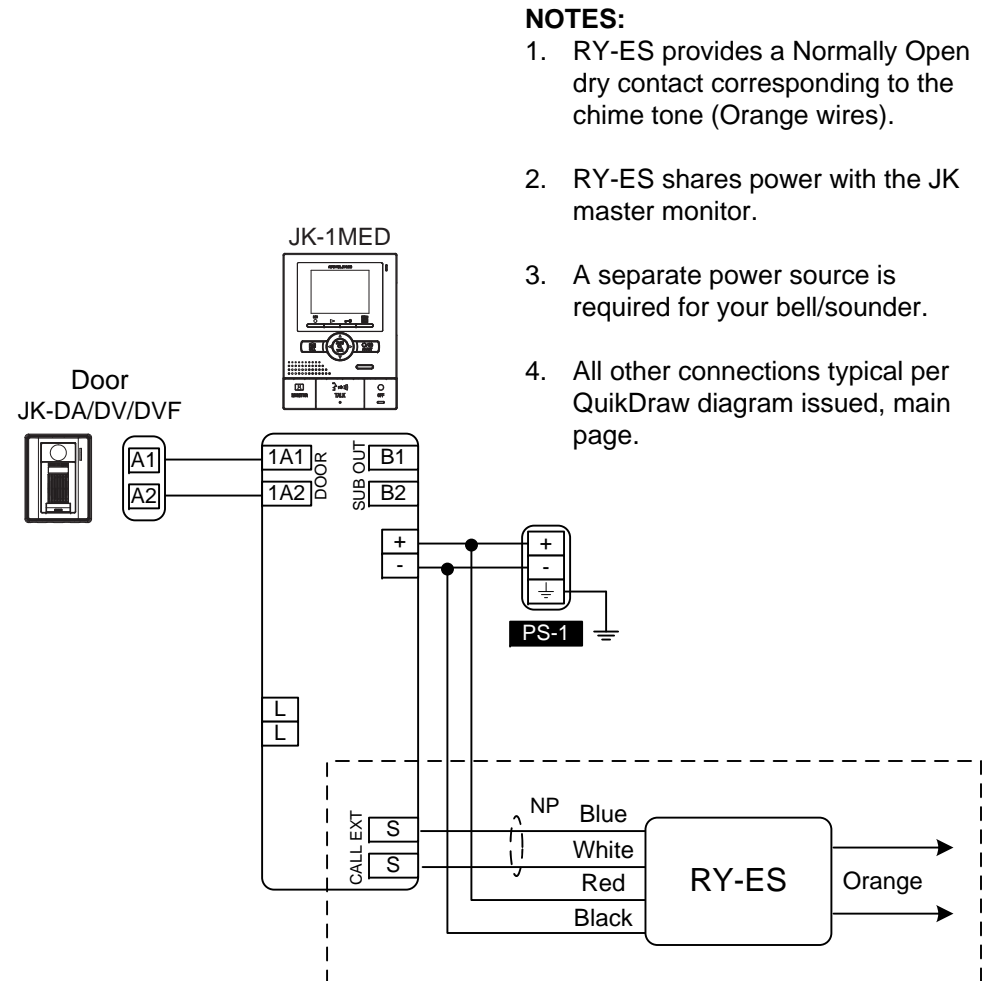

NOTES:

1. RY-ES provides a Normally Open dry contact corresponding to the chime tone (Orange wires).
2. RY-ES shares power with the JK master monitor.
3. A separate power source is required for your bell/sounder.
4. All other connections typical per QuikDraw diagram issued, main page.