


ENFORCER®

DP-222Q Color Video Door Phone Manual



- Camera has 6 LEDs for nighttime operation
- Remotely and securely talk to visitors and unlock doors, gates, etc. from the monitor
- Easily connect an secondary monitor*

- Simple 2-wire connection
- Built-in microphone
- Adjustable contrast, brightness, and ringer volume
- Camera and monitor turn off when not in use

*Secondary monitor sold separately.

SLI SECO-LARM

FC CE RoHS

Table of Contents

Specifications	2	Installation – Secondary Monitor.....	5
Parts List	2	Installation – Camera.....	5
Overview	3	Operating Instructions.....	6
Installation Notes.....	4	Wiring Diagram	7
Installation – Primary Monitor.....	4	Troubleshooting	8

Specifications

Camera	
Type	Color Camera
Chip	CCD
Resolution	420 TV lines
Lens	3.6mm
Relay Output	1Amp@12VDC max. dry contact
Weight	11-oz (312g)
Dimensions	5 ¹ / ₄ " x 3 ⁹ / ₁₆ " x 1 ³ / ₈ " (130 x 90 x 33 mm)

Monitor	
Display	TFT
Current Draw	440mA max.
Operating Voltage	17VDC
Weight	1-lb, 7-oz (652g)
Dimensions	7 ⁵ / ₈ " x 8 ¹ / ₂ " x 1 ¹³ / ₁₆ " (194 x 216 x 46 mm)

Parts List

DP-222Q

Complete Kit

- 1x Camera
- 1x Camera bracket
- 8x Screws
- 8x Screw anchors
- 1x Camera screw
- 1x Allen wrench
- 1x Primary monitor
- 1x Monitor bracket
- 1x AC Power adapter
- 2x Wire connectors (2-Wire)


DP-222-MQ

Secondary Monitor Only


- 1x Monitor
- 1x Monitor bracket
- 1x AC Power adapter
- 4x Screws
- 4x Screw anchors
- 2x Wire connectors (2-Wire)

Overview


Primary Monitor




Handset

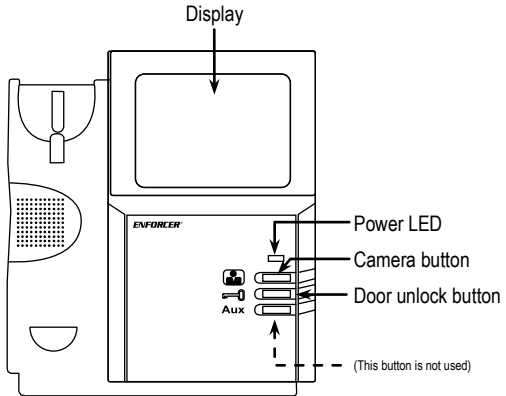

Front

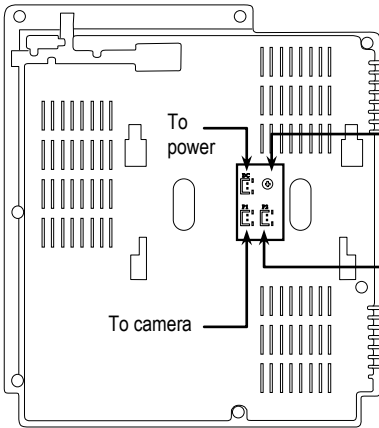


Rear

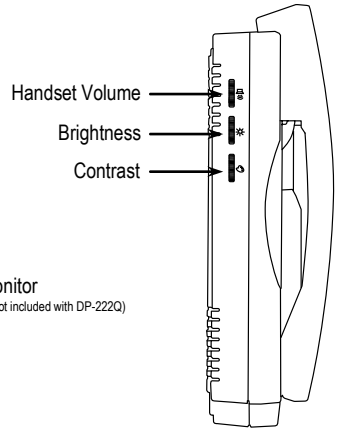


Side

Camera

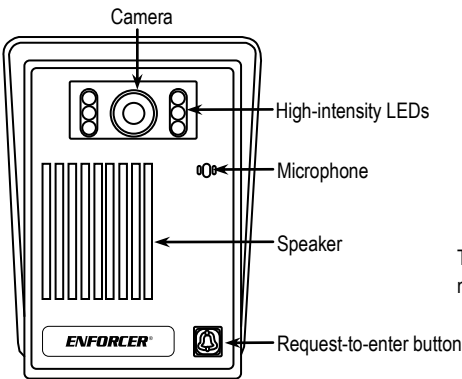

Front (with bracket)

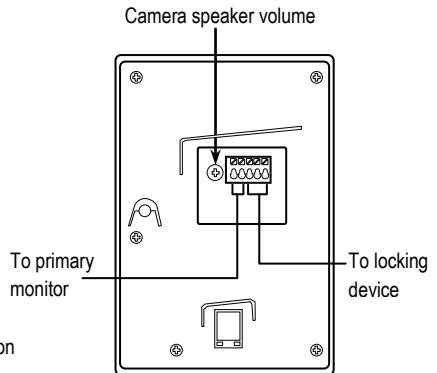

Rear (without bracket)


Installation Notes

1. Unpack the video door phone and note the included parts.
2. Read this manual thoroughly. A clear understanding of the manual will make installation and operation much easier.
3. Find a good location to mount the monitor and camera. Make sure there is enough 22AWG 2-conductor wire to wire both units correctly.
4. Use only untwisted-pair wire; twisted-pair wire may cause interference.
5. Avoid mounting the camera or monitor(s) near sources of strong electromagnetic signals or other electronic devices as they may cause interference.
6. Avoid mounting the camera in direct sunlight or exposing the camera to strong vibrations or direct rain or other moisture, which could result in damage to the camera.
7. The camera and the monitor contain no user-serviceable parts. Opening them may damage sensitive components and void the warranty.


Installation – Primary Monitor

1. The monitor must be positioned so that the image can be seen clearly and the user can operate the monitor's functions.
2. Use the mounting bracket as a template to pencil in where to drill the holes for the mounting bracket screws.
3. Drill the mounting bracket holes as needed. Drill a hole large enough to fit a min. 22AWG 2-conductor wire, which will run through the wall from the monitor to the camera.
4. Using 4 of the included screws and 4 of the included screw anchors, attach the monitor bracket to the wall, running the cable through the large hole in the mounting bracket.
5. Plug the 2-wire connector from the camera into the "P1" socket
NOTE: If using only one monitor, the "P2" socket on the back of the monitor will not be used.
6. Plug the AC power adapter's cable into the "DC" socket on the back of the monitor.
7. Plug the AC power adapter into a 120VAC socket.
8. Test the monitor and camera unit by pressing the camera button. The image in front of the camera should be displayed clearly.

Monitor mounting bracket

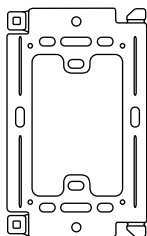


Connection points

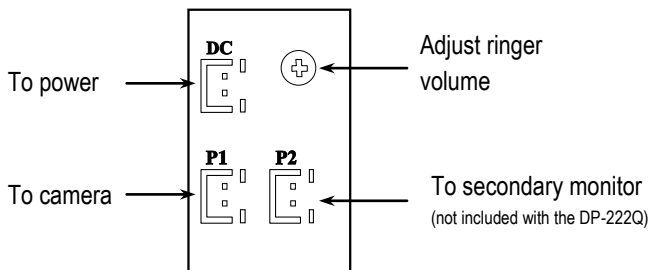


Installation – Secondary Monitor

1. If using a secondary monitor, follow steps 1~4 on page 4.
2. Connect the 2-wire connector between the secondary monitor's "P1" socket and the primary monitor's "P2" socket. The "P2" socket on the back of the secondary monitor will not be used.
3. Follow steps 6~8 on page 4 to continue the installation.

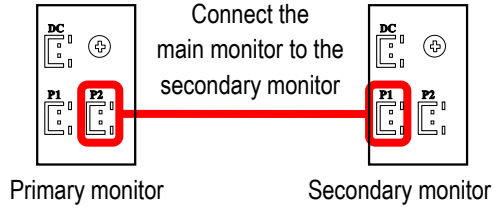

Installation – Camera


1. Position the camera so the area to be monitored is easily visible, typically 5 feet (150cm) above the ground. Do not position the camera in direct sunlight, or where it will be exposed directly to rain or snow.
2. Cut a hole large enough to run the min. 22AWG 2-conductor wire through the wall to where the camera unit is to be mounted. If using a locking device, the wires used to control the device must also be run through this hole.
3. Run the 2-conductor wire from the camera location to where the primary monitor is mounted.

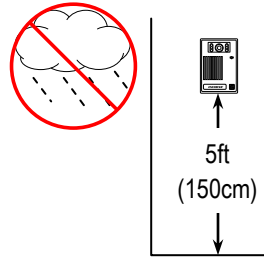

Note: Do not let the distance between the camera and monitor exceed 246ft (75m).


4. Using 4 of the included screws and 4 of the included screw anchors, attach the camera mounting bracket to the wall.
5. Connect the wires coming from the monitor to the first two terminals on the left.
6. If the Color Video Door Phone will control a locking device, connect the wires coming from the locking device to the last three terminals. See the diagram on page 7.
7. Adjust the camera's speaker volume using the potentiometer on the back of the unit.
8. Push the two tabs on top of the bracket into the top of the camera. Make sure that no wires are preventing the camera from seating properly in the bracket.
9. Secure the camera to the mounting bracket with the included camera screw.

Camera Mounting Bracket

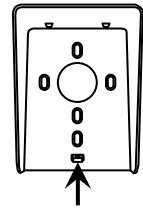


Use this hole to secure the camera to the bracket.

Connection points

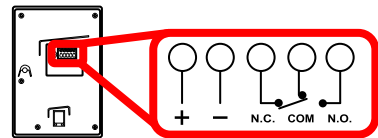


Speaker adjustment




Adjust the camera's speaker volume by turning the potentiometer on the back of the unit.

Operating Instructions


1. When the request-to-enter button on the camera is pressed, the monitor will ring twice. After ringing, any connected monitors will switch on.

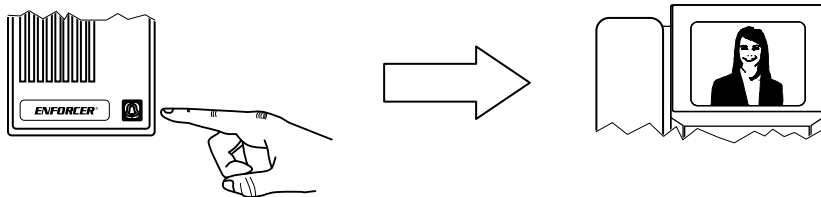


2. When the handset is picked up, audio can be heard through the handset.

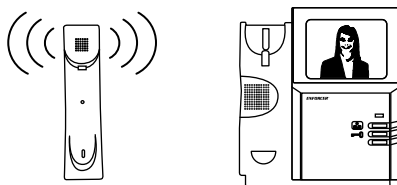


3. If the video door phone is connected to an electric door strike or other locking device, press the door unlock button to allow entrance. See the wiring diagram on page 7 for more details.
Note: The lock will only remain unlocked for 1 second. The camera and monitor will turn off immediately.

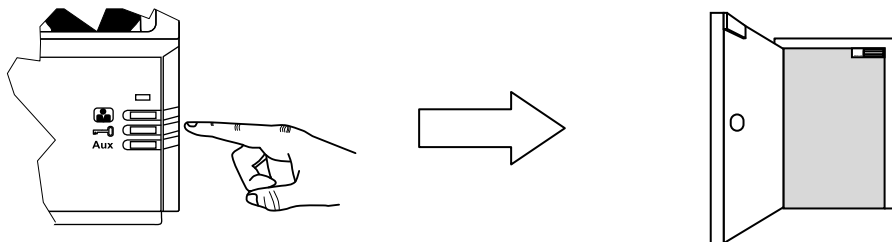


4. To see and hear what is going on at the entrance, lift the handset. The camera and monitor will automatically switch on. When finished, simply hang up the handset and the camera will switch off. If the handset is not hung up, the camera will switch off after 2 minutes.

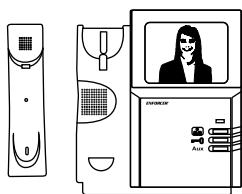


Hang up the handset to turn the monitor off.

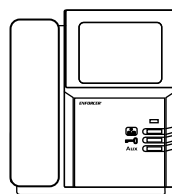

Wiring Diagram – Wiring a Secondary Monitor and Electric Door Strike

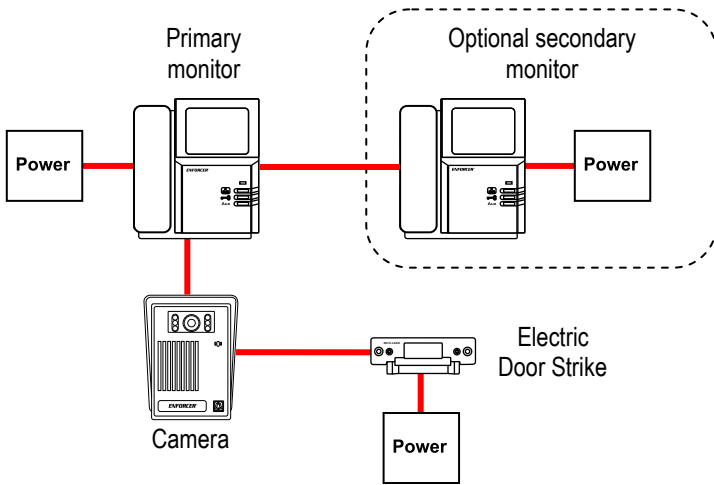

Connection Points

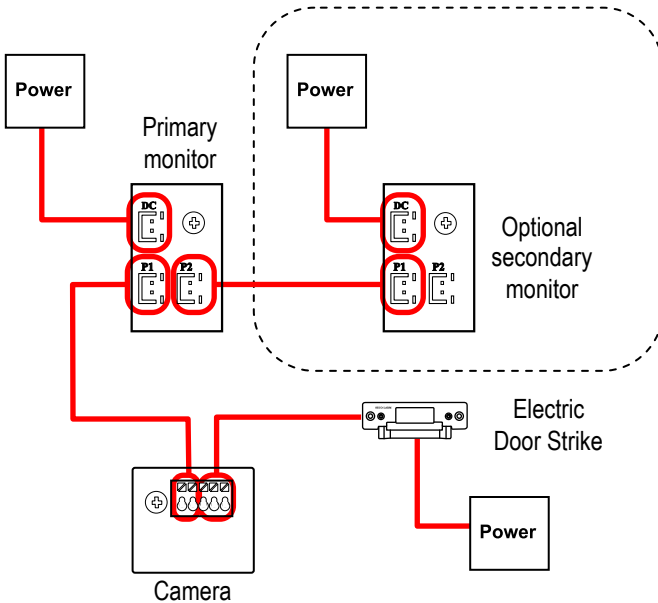

Troubleshooting:

The screen is blank.

- Check that the camera is powered up.
 - Check that the power supply's polarity is correct.
 - Check that the monitor is powered up.
 - Check that the video cable connecting the camera to the monitor is connected properly.
-

The screen image is dim

- Clean the lens using a soft, clean cloth.
 - Check that the light source is adequate.
-

The screen image has poor contrast or flickers.

- Adjust the monitor's contrast knob.
 - Change the position of the camera.
-

The screen image is distorted.

- Change the position of the camera.
-

The camera case is hot.

- Check that the correct power supply is in use.
-

IR LEDs do not turn on.

- Check that the correct power supply is in use.
-

Lock button does not operate the relay.

- Check that the correct power supply is in use (17VDC).
-

IMPORTANT

Users and installers of this product are responsible for ensuring this product complies with all national, state, and local laws and statutes related to monitoring and recording audio and video signals. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or statutes.

WARNING

Stop using the camera if you see a malfunction such as smoke or unusual heat, as it could cause fire or electric shock. Do not open the case of this device, as there are no field-serviceable components inside.

FCC COMPLIANCE STATEMENT

Information to the user: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM.

This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship.

The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE

The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors.

Copyright © 2012 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606

Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326

Website: www.seco-larm.com

E-mail: sales@seco-larm.com

 PICON2

MIDP-222Q_1202.docx